
## 78mm

## **Professional Clipper Ufree** DESIGNED FOR THE PROFESSIONAL U-1257 Sharp Stainless Steel Blade High-performance Battery

**Operating Manual** 

103mm

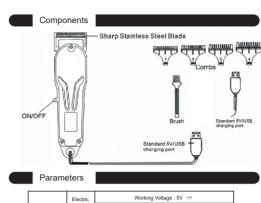

Charging Time: About 2.5 Hour



1.Insert the charger into the tail of clippe 1. Insert the charger into the tail of clipper, connect to the power to start charging 2. The liquid crystal indicator lights up, indicating that it starts charging. The indicator indicates 100 indicating that the electricity is full. Note: when the power is switched on after charging, the indicator lights up to indicate that the charging head is reversed or drawn to be

Fixed-length Function A : Features ( 1 . 2 . 3 . 4mm ) 4 lengths adjust

1 . To determine the length of haircut 2 . To select the appropriate limit comb

1 . Align the limit comb with the

blade edge 2 . Slightly forward push to mount it mble the limit comb Just pull hard the limit comb



Blade Removal&Installation Blade Removal

Blade Installation

. The blade spring is aligned

screws , and hold down.

with the spring A on the knife head B . Then , put in two fixed

. To prevent the knife from falling



. Such as a screwdriver with the rotary

 Tighten the screw with a screwdriver to ensure the head of the knife,Will Warm tip: do not disassemble the knife head without any skill.

Taper Blade Cleaning

Cutter Cleaning




Clear up the blade with cleaning brush.








- 1 . Please do not disassemble the product .
- 2. Water must not be used to wash the clipper, keep away from the dampness while operating.
- 3. Only use a little wet cloth or neutral liquid soap to clean the product.
- 4 . Never charge the product above 40 °C heat source or below O C environment.
- \* Slight heating during the operating or charging is
- \* After the battery life expires , take off and throw the battery in safe manner into the designated recycling site . Never dump it randomly.

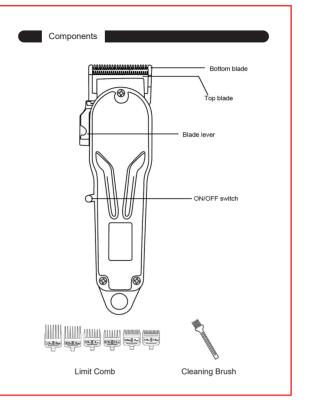

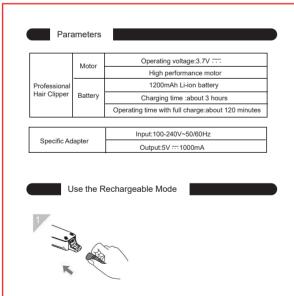


1 . Insert the charger into the tail of clipper , connect to the

2 . When the charging indicator lights up , it starts charging ;

power to start charging

When show 100 , it is fully charged

3 . Cord and cordless are available

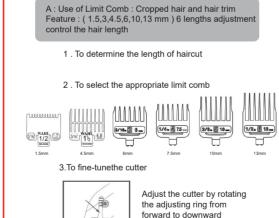

Fixed-length Function

Mount the limit comb:


blade edge

1 . Alian the limit comb with the

2 . Slightly forward push to mount

Disassemble the limit comb :

Just pull hard the limit comb

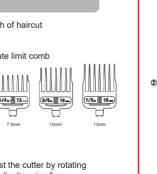

1. End of the top blade teeth should be 1 / 32 " to 1 / 16 , 0 . 79mm to 1 . 59mm back from bottom blade . This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin

0 0

2 . Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade

Cutter Assembly and Disassembly

Sketch shows how the bottom blade holes

the bottom blade can be aligned with tight

after the blade is aligned

screws . When the blade screws are loosened

are larger than the shanks of the blades

3 . Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade





Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut . When the lever is in the uppermost position the blades will give the closest cut . Pushing the

lever downward gradually increases the cutting length

Cutter Cleaning and Maintenance







- Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory
- Blades must be realign if they have been removed for cleaning or
- To realign the blades , simply match the upper and bottom blades teeth up, point for point . ( End of top blade teeth should be approximately 0.5mm-1.0mm back from bottom blade . Compare your clipper blades with the sketch )
- If blade alignment is incorrect, add a few drops of oil to the blade, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust Tighten screws after blade is aligned

## Cutter Maintenance



- To maintain your clipper in peak condition , the blades should be oiled every few haircuts .
- To oil it properly, the unit should be held so the blades are in a downward position . With the clippe blade running dispense 2-3 drops of oil across the top blade







- 1 . Please do not disassemble the product
- 2 . The hair clipper can not be washed Please keep it away from wet conditions





- 3. The product can only be cleaned by cloth with little water or mild soap solution
- 4 . Do not charge the product under environment above 40 ℃ or below 0 ℃
- X The product can produce little heat during using or charging , which is normal .

  Please remove the battery safely and return
- it to the specified places when the battery runs out . Never discard it casually