



| Original                                                                                           | Recharge                                                                                                     | Original                                                                                                    | Recharge                                                                                                      |
|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  St andby/ On     |  Power                      |  Preset Up               |  >> / Preset +             |
|  1                |  1                          |  Preset Down             |  I << / Preset -           |
|  2                |  2                          |  >> / Tune+              |  >> / Tune+                |
|  3                |  3                          |  I << / <<               |  << / Tune-                |
|  4                |  4                          |  St op                   |  St op / Hol d             |
|  5                |  5                          |  Pl ay/ Pause CD         |  Pl ay / Sl ow             |
|  6                |  6                          |  FM/ AM                  |  Fav / Marker / PC         |
|  7                |  7                          |  Pl ay/ Pause USB Memory |  Pause / Step / Freeze     |
|  8                |  8                          |  AUX                     |  AV / I nput / RDS         |
|  9               |  9                         |  TA/ News/ I nf o       |  I nf o / Angl e          |
|  0              |  0                        |  Di spl ay Mode        |  Set up / OPT /          |
|  >10            |  Gui de / EPG / - / - -   |  PTY Search            |  Red / Netfl ix / Search |
|  Cl ock/ Ti ner |  Shi ft + Sl eep / Ti ner |  PTY+                  |  CH+ / Page+             |
|  Set / Resume   |  Menu / Home              |  PTY-                  |  CH- / Page-             |
|  Cancel         |  Exit / Cancel / Clear    |  QP Li nk              |  Smart / Li st           |
|  Di spl ay      |  Di spl ay / Medi a       |  FM Mbde               |  TV/ Radi o /            |
|  MP3 Mbde       |  Pi ctur e / Form at      |  Repeat                |  Green / APP / Repeat    |



