



Original	Recharge	Original	Recharge
 St andby/ On	 Power	 Preset Up	 >> / Preset +
 1	 1	 Preset Down	 I << / Preset -
 2	 2	 >> / Tune+	 << / Tune-
 3	 3	 St op	 St op / Hol d
 4	 4	 Pl ay/ Pause CD	 Pl ay / Sl ow
 5	 5	 FM/ AM	 Fav / Mårker / PC
 6	 6	 Pl ay/ Pause USB Memory	 Pause / Step / Freeze
 7	 7	 AUX	 AV / I nput / RDS
 8	 8	 TA/ News/ I nf o	 I nf o / Angl e
 9	 9	 Di spl ay Mode	 Set up / OPT /
 0	 0	 PTY Search	 Red / Netflix / Search
 >10	 Gui de / EPG / -/-/-	 PTY+	 CH+ / Page+
 Cl ock/ Ti ner	 Shi ft + Sl eep / Ti ner	 PTY-	 CH- / Page-
 Set / Resuæ	 Menu / Home	 QP Li nk	 Smart / Li st
 Cancel	 Exi t / Cancel / Clea	 FM Mòde	 TV/ Radi o /
 Di spl ay	 Di spl ay / Medi a	 Repeat	 Green / APP / Repeat
 MP3 Mòde	 Pi cture / Form		



