

# Product Picture:

BE200 WiFi card



Accessories



# How to install the Network card desktop kit.

## Installation display



Description:

Model: Wi-Fi 7 For Intel BE200

Tri-band: 2.4Ghz / 5Ghz / 6Ghz (160Mhz-Up to 2400Mbps,320Mhz-Up to 5.8 Gbps)

Max speed: Speed up to 5800Mbps (2x2, 320 MHz, 4K QAM)

Bluetooth Version: Bluetooth 5.4

Interface: NGFF(M.2)

Support technology: MU-MIMO,OFDMA

Supported Operating Systems: Only work with Win10/11 64bit

## Q&A

**Please do remember closed the PC then install the WiFi card,otherwise there might be short circuit.**

**Note:Not support AMD processor PC**

### Compatiable:

- 1.It can used on  
Samsung/Dell/Sony/ACER/ISUS/MSI/Clevo/Terransforce/Hasee etc.
- 2.Not support AMD/IBM/Thinkpad/lenovo/hp laptop Desktop.

### Installation Tips

- 1.Please plug the Network Adapter in the Interface:M.2 NVME
- 2.you can Check Show hidden, then Disable all the previous drivers,then reinstall the driver and test again


When you need the Driver,check:

<https://www.fenvi.com/drive.html?keyword=BE200NGW>

<https://www.intel.com/content/www/us/en/products/sku/230078/intel-wifi-7-be200/downloads.html>


Then restart the PC

- 3.When the **Bluetooth** don't work ,please use the tape to stick pin of wireless network card(please see the picture as shown,Be careful not to paste onto the back), to obtain the bluetooth.

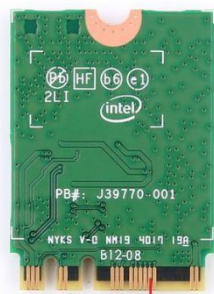

Pls Shield this pin

- 4.When the **WiFi** don't work ,please use the tape to stick pin of wireless network card(please see the picture as shown,Be careful not to paste onto the back), to obtain the WiFi

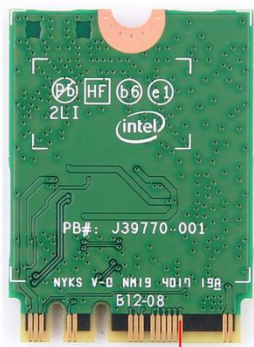

**5.when you can not get the WiFi card signal**

(1). Check if the network adapter in the host is securely inserted.  
If there is any looseness, please reinsert it securely.

(2). Check if the gold finger of the network card is in good contact with the socket on the computer host (if there are any foreign objects, gently wipe to remove them), and then plug the network adapter back into the socket.