

尺寸:85\*65mm

产品说明书

—Product description—

YYK-750  
无线运动耳机

产品示意图

配对示意图

当耳机从充电仓里取出，耳机会自动开机，或者长按3秒左和右耳MFB键开机。耳机指示灯红蓝灯交替闪烁（此时进入配对状态），等待连接。

开启用户手机蓝牙功能（或其他蓝牙设备），并进行搜索或扫描，此时手机会搜索到附近所有的蓝牙设备，点击搜索到的耳机名称：YYK-750，并输入密码 0000（目前大部分手机不需要密码）成功配对连接后，耳机指示灯熄灭，表示配对连接成功！此时可以进行手机电话、听歌

多功能按键

|  |        |                     |
|--|--------|---------------------|
|  | 暂停/播放  | 双击左耳或右耳MFB键         |
|  | 上一曲    | 长按1秒左耳MFB键          |
|  | 下一曲    | 长按1秒右耳MFB键          |
|  | 音量加    | 播放状态下三击左耳MFB键加1格    |
|  | 音量减    | 播放状态下三击右耳MFB键减1格    |
|  | 接听电话   | 双击左耳或右耳 MFB键        |
|  | 挂断电话   | 双击左耳或右耳 MFB键        |
|  | 来电拒接   | 长按1秒左或右耳 MFB键       |
|  | 取消通话   | 双击左或右耳 MFB键         |
|  | 呼叫Siri | 三击左或右耳 MFB键(不播放音乐时) |
|  | 关闭Siri | 双击左或右耳 MFB键         |

开机机关

1.当耳机从充电仓里取出，耳机就会自动开机,或者长按3秒左和右耳MFB键开机。  
2.当耳机不使用时，放回充电仓会自动关机。

如何配对

1.从充电仓拿起耳机  
2.耳机红、蓝交替闪烁（配对模式）  
3.打开手机/平板的设置—蓝牙—打开蓝牙—搜索—YYK-750—配对/连接—播放音乐。

电脑/手提电脑配对的方法

打开电脑设置-设备-蓝牙和其他设备-开启蓝牙—添加蓝牙或其他设备  
搜索蓝牙设备 YYK-750-配对/连接-播放音乐。  
注意:如果电脑没有蓝牙，请插入蓝牙适配器，下载蓝牙驱动后再正常使用。

如何重置？

两个耳机在充电仓内，取出左耳机双击MFB键后长按2秒（红蓝闪烁两次后关机），放进充电仓。取出右耳机双击MFB键后长按2秒（红蓝闪烁两次后关机），放进充电仓（左右耳机重置完成）。取出左右耳机，两个耳机自动组队成功。

如何给耳机充电

1.把耳机放入充电仓内，耳机就会自动关机然后开始充电，充电仓显示屏亮起，显示充电仓当前电量，说明充电仓正在给耳机正在充电。  
2.耳机充满电后，耳机指示灯红灯就会灭掉。

产品规格

|         |                        |
|---------|------------------------|
| 版本      | V5.2                   |
| 支持蓝牙    | A2DP,AVRCP,HFP,HSP,EDR |
| 通信距离    | ≥10m                   |
| 频段      | 2.402GHz-2.480GHz      |
| 喇叭阻抗    | 32Ω±10%                |
| 待机时间    | 120小时                  |
| 通话时间    | 5-6小时                  |
| 音乐播放时间  | 5-6小时                  |
| 耳机电池容量  | 40mAh                  |
| 充电仓电池容量 | 500mAh                 |
| 耳机充电时间  | 约1小时                   |
| 充电仓充电时间 | 约1小时                   |
| 产品重量    | 33g                    |

给充电仓充电

1.请使用手机适配器给充电仓充电，可以使用Type-*c*线或者其它Type-*c*接口的充电器进行充电。  
2.充电仓数字显示屏指示，说明正在给充电仓充电。充满电为100。

手机传输距离

关于手机传输距离如下图所示

防水规格

生活防水（出汗、下雨、洗脸、淋浴等，水里游泳等除外）  
\*请注意手机的蓝牙信号不能在水中传输

水上

水下

注意

1.请不要拆卸/重新组装产品，以免发生故障或火灾。  
2.请避免接触腐蚀性液体，以免损坏产品。  
3.不要放在-10摄氏度以下或者60摄氏度上的极端温度下。  
4.远离小孩或宠物。  
5.不要让耳机接触尖锐物品，否则容易刮花。  
6.请不要在雷雨天气使用避免损坏或发生电击。  
7.1个月以上不使用的，为了安全运行，请定期充电，保养。  
8.因为蓝牙耳机信号不能在水中传输，游泳潜水将会导致信号断开或者中断。

为什么我搜索不到蓝牙？为什么不能连接蓝牙？

1.蓝牙的距离是10m，请确保没有障碍物，手机需要靠近耳机  
2.如有其他手机或者设备连接过该耳机，请先解除配对  
3.请重新启动蓝牙设备，然后尝试重设耳机

为什么耳机没有声音？或者音乐会断开？

·请检查手机网络是否正常，网速是不是比较慢，音乐是不是正在加载中。  
·蓝牙的距离是10m，请确保没有障碍物，手机需要靠近耳机  
·周围环境的干扰或者磁场太强将会影响蓝牙信号传输  
·打开手机蓝牙界面，点击接触配对，删除配对记录，搜索蓝牙，再次配对。  
·你可以重启手机或者重置耳机

为什么耳机机会自动关机？

请确保耳机有足够电量，另外耳机将自动断开蓝牙连接10min，将耳机重新放入充电仓，拿起耳机将自动开机。

为什么不能给充电仓充电？

1.请确保充电线或者手机充电器是良好状态且正确连接。  
2.有可能接触不良。用手指按耳机，并将耳机的充电触点完全连接到充电仓。  
3.耳机的充电触点可能脏，多尘或出汗。放回充电仓充电时，请用酒精或者布擦拭。  
4.如果听到“Low Battery”的提示音，请为耳机充电。当充电仓LED灯显示编号达到“10”时，请为充电仓充电。请注意不要使耳机和充电仓中的电量耗尽。可能会缩短内置锂电池的使用寿命。

安全预防

高质量的耳机，为了延长使用寿命，请参考以下说明：  
1.请让本品远离高温、高温、腐蚀环境。  
2.请防止本品被撞击、跌落、弯曲、浸泡等。  
3.请不要拆耳机或者充电座。  
4.请不要让本品一直过度充电，这样会降低的使用寿命。  
5.如果它引起任何不适感或者疼痛，请停止使用本品。  
6.使用由受监督的制造商认证的DC 5V-1A适配器。  
反复充电和放电机会导致电池性能随时间降低，这对所有可充电电子产品来说都是正常的。

产品包装内个

1.蓝牙耳机2个  
2.充电座1个  
3.Type-*c*充电线1条  
4.说明书1本

User Manual

—Product description—

YYK-750  
Wireless Sports Headphones

Product Photo

Wireless Pairing

Make sure the headset is off, press and hold the multifunction key for about 3 seconds until the blue light comes on once. Then the red and blue lights flash alternately (at this time it enters the pairing state) and waits for the connection.

Turn on the Wireless function of the user's mobile phone (or other Wireless devices), and search or scan. At this time, the mobile phone will search all the Wireless devices nearby, and click the Headset Name YYK-750, and enter the password 0000 (most mobile phones do not need a password at present) After successful pairing and connection, the headset indicator light goes off, indicating that the pairing connection is successful. At this time, you can make mobile phone calls and listen to songs

MFB Button

|  |                  |   |
|--|------------------|---|
|  | Pause / play     | Double tap the left or right MFB button   |
|  | Last Song        | Press and hold the left ear MFB button for 1 second                             |
|  | Next Song        | Press and hold the right ear MFB button for 1 second                            |
|  | volume+          | In the state of playing music, triple-click the left ear MFB to add 1 grid      |
|  | volume-          | In the state of playing a song, triple-click the right ear MFB to reduce 1 grid |
|  | Answer           | Double tap the left or right MFB button   |
|  | Hang up          | Double tap the left or right MFB button   |
|  | Refuse to answer | Press and hold the left or right ear MFB button for 1 second                    |
|  | Cancel call      | Double tap the left or right MFB button   |
|  | Call Siri        | Triple tap the left or right ear MFB button (When not playing music)            |
|  | Close Siri       | Double tap the left or right MFB button   |

ON/OFF switch

1. When the headset is taken out of the charging compartment, the headset will automatically turn on, or press and hold the left and right ear MFB keys for 3 seconds to turn on  
2. After use, put the earbuds into the charging bin, and it will turn off automatically.

How to pair

1. Take the earbuds out of the charging bin and it will start work automatically.  
2. The red and blue lights will flash alternately (entering pairing mode)  
3. Access the Settings of mobile phone/tablet - Wireless - Search - YYK-750 - Pair/Connect - Play music.  
Notes: If the computer has not Wireless function, please insert a Wireless adaptor, and download a Wireless driver for normal functioning.

How to reset?

When the headset is off, Double-click MFB button and press and hold for 2 seconds. Put the headset into the charging compartment, and the headset will automatically turn off and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

How to recharge the earbuds

1. put the headset in the charging bin, the headset will be automatically turned off and then charged.  
The display lights up to show the current power of the charging chamber, indicating that the charging chamber is charging the headset.  
2. When the headset is fully charged, the red light of the headset indicator will be off.

Product specification

|                              |                        |
|------------------------------|------------------------|
| Version                      | V5.2                   |
| Wireless support             | A2DP,AVRCP,HFP,HSP,EDR |
| Communication range          | ≥10m                   |
| Frequency band               | 2.402GHz-2.480GHz      |
| Electrical impedance         | 32Ω±10%                |
| Standby time                 | 120h                   |
| Call time                    | 5-6h                   |
| Music playing time           | 5-6h                   |
| Earbuds battery capacity     | 40mAh                  |
| Host battery capacity        | 500mAh                 |
| Charging bin recharging time | About 1h               |
| Charging time of headset     | About 1h               |
| Weight                       | 33g                    |

How to recharge the charging bin

1. Please use a mobile phone adapter to recharge the charging bin. You may charge via a Type-C cable connected to a computer, or other charger with a Type-C interface.  
2. The digital display of the charging bin will indicate the recharging process, and 100 battery level means fully recharged.

Mobile phone transmission range

The transmission distance of the mobile phone is shown in the following chart

Waterproof specification

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)  
\* Note that the Wireless signal of mobile phones can't be transmitted in water.

Above water

In water

Attention

1. Please avoid disassemble/reassemble the product in case of failure or fire accident.  
2. Please keep away from corrosive liquids to prevent the product from damage.  
3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C.  
4. Please keep beyond the reach of kids or pets.  
5. Please mind contact with sharp objects to avoid scratch.  
6. Please avoid use in thundering and raining days to prevent damage or electrical shock.  
7. In the case of non-use for above a month, please charge regularly for maintenance.  
8. As the Wireless signal cannot transmit in water, it is not suitable for swimming for diving.

Why cannot I detect Wireless? Why Wireless pairing failure?

1. The Wireless rang is 10m; please ensure no obstacles and place the mobile phone close to the earbuds.  
2. If the earbuds are connected to other mobile phone or devices, please disconnect first.  
3. Please reboot the Wireless device and reset the earbuds.

Why do the earbuds produce no sound? Or, why does the music playing stop?

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.  
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.  
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.  
4. Please do not overcharge for a long time, which will shorten the service life.  
5. In the case of feeling any discomfort or pain, please stop using the product.  
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Why do the earbuds turn off automatically?

Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after recollecting.

Why cannot I recharge the charging bin?

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.  
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.  
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.  
4. Please do not overcharge for a long time, which will shorten the service life.  
5. In the case of feeling any discomfort or pain, please stop using the product.  
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Safety Precautions

To guarantee the service life of the quality earbuds, please refer to the instructions as follows:  
1. Please keep away from high temperature, high humidity and corrosive environment.  
2. Please avoid bumping, falling, bending, soaking, and etc.  
3. Please do not disassemble the earbuds or charging bin.  
4. Please do not overcharge for a long time, which will shorten the service life.  
5. In the case of feeling any discomfort or pain, please stop using the product.  
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Packing Contents

1. Earbuds \* 2  
2. Charger \* 1  
3. Type-C charging cable \* 1  
4. User Manual \* 1