

m|G+S ry ny ?|G15

kogan.com



 
 Google TV

**Kogan 55" QLED 4K 144Hz Smart  
Google TV**

**SERIES 9 Q98T  
(KAQL55XQ98GSTA)**



# COMPONENTS

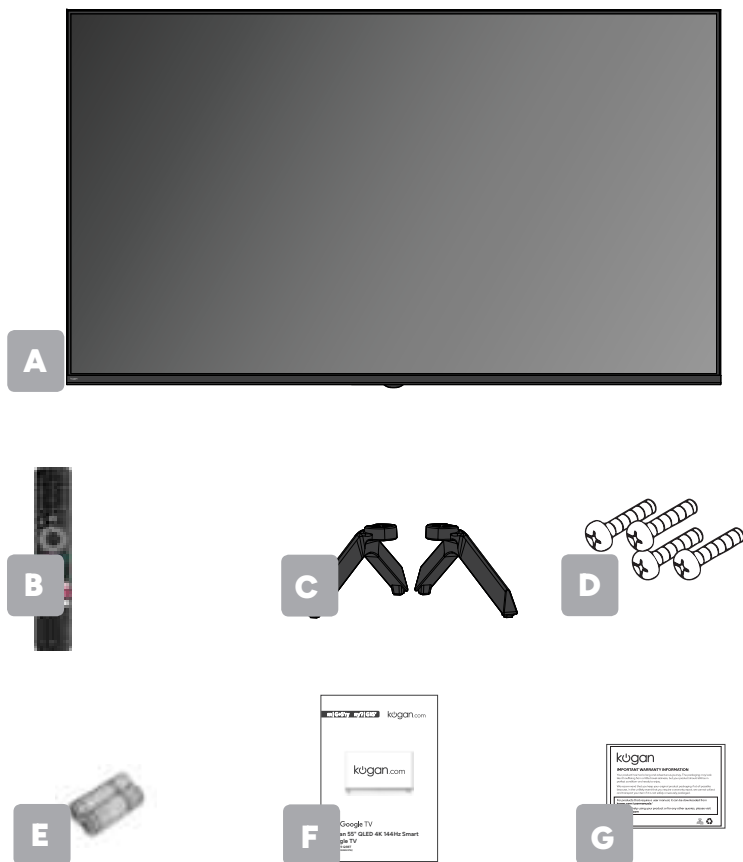

A Kogan 55" QLED 4K 144Hz  
Smart Google TV

B Remote control

C Stand (x2)

D M4 X 16mm screw (x4)

E AAA battery (x2)

F Quick-start guide


G Warranty card

## NOT INCLUDED

 Phillips head screwdriver, antenna cable, broadband internet connection.



- 1 **Power**, press to enter or exit standby mode
- 2 **Source** displays the list of input source channels.
- 3 **Number buttons** to select channels or input passwords
- 4 **Quick Menu** to display TV options with optional, adjustable settings
- 5 **SUBT Subtitles** to select subtitles
- 6 **Account** switch account
- 7 **Google Assistant** to launch the built-in virtual assistant for voice commands
- 8 **Direction buttons** for navigating menus and settings
- 9 **Dashboard** Dashboard contains user account, settings page, input source list, weather panel, image settings, notifications, etc.
- 10 **Back** to the previous menu
- 11 **Enter** select the current item or confirm selection, display Channel list in DTV mode
- 12 **Home** to access the home page
- 13 **Electronic Program Guide** DTV mode

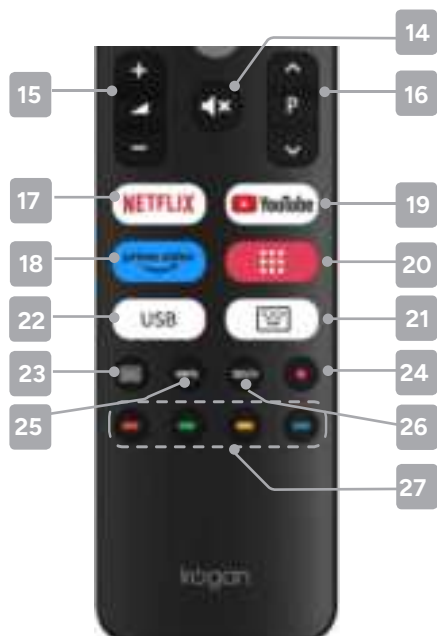



- |   |  |
|---|--|
| <p><b>14</b> <b>Mute</b> to toggle sound on/off</p> <p><b>15</b> <b>Volume</b> to adjust the volume up or down</p> <p><b>16</b> <b>Program</b> to scroll channels</p> <p><b>17</b> <b>NETFLIX</b> to open app homepage</p> <p><b>18</b> <b>prime video</b> to open app homepage</p> <p><b>19</b> <b>YouTube</b> to open app homepage</p> <p><b>20</b> <b>Apps</b> Show all installed apps</p> <p><b>21</b> <b>Virtual keyboard</b> open virtual keyboard (only under Live TV)</p> | <p><b>22</b> <b>USB</b> Press to switch to the USB source.</p> <p><b>23</b> <b>Teletext</b> to show/hide Teletext (Teletext not available in Australia or New Zealand)</p> <p><b>24</b> <b>Record</b> in DTV mode;</p> <p><b>25</b> <b>info</b> displays the current program information</p> <p><b>26</b> <b>Audio</b> to select available languages and audio channels.</p> <p><b>27</b> <b>Colour buttons</b> for navigational use within apps</p> |
|---|--|

## BEFORE YOU GET STARTED

  Spread cushioning flat to lay the TV on. This will help to prevent damage.

### 1. Stand assembly




- Attach stands to base of TV, ensuring 'L' and 'R' markings on the TV and stands match.
- Insert two 16mm screws for each stand and use a Phillips head screwdriver (not supplied) to tighten.

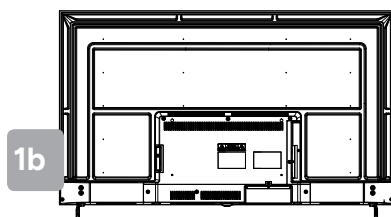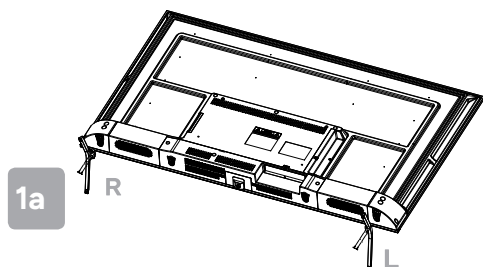

### 2. Remote control assembly


- Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

   Please use Lithium AAA Batteries for the Remote

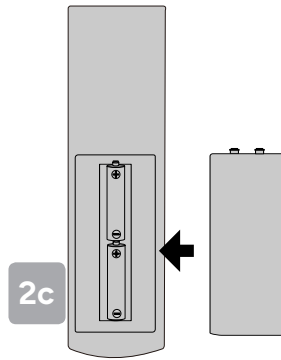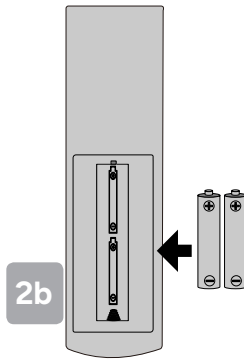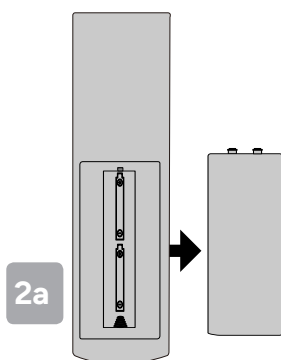


### 3. Connect to antenna

 
- a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

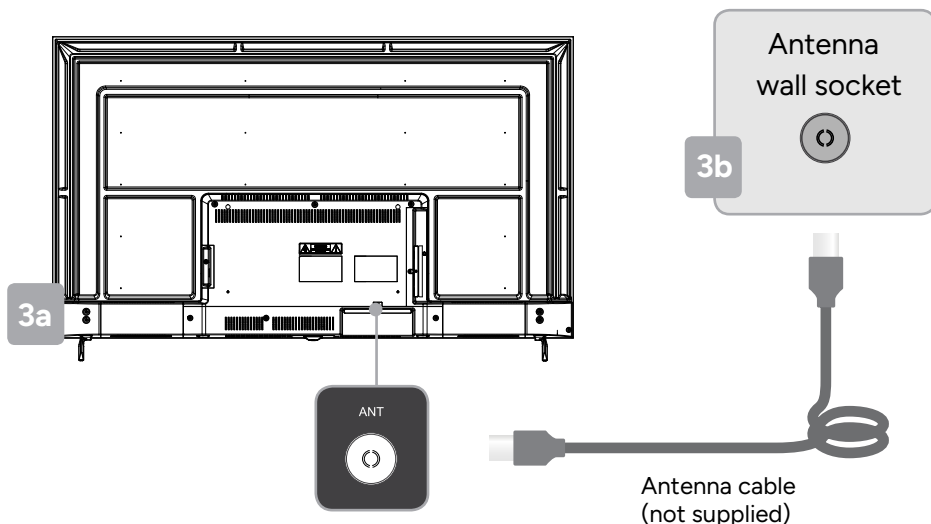

### 4. Turning TV on

Plug the power cord into a suitable power outlet, then press the POWER (  ) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.

#### TURNING TV OFF

Press the POWER (  ) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

## >Gnry yGZ5 r5y|k

When turning the TV on for the first time, the Welcome screen will appear. Use the **^** **∨** and **OK** buttons to navigate the following options.

### **Language**

Select your menu language.

### **The entertainment you love**

In your Google account you get movies and TV shows from your favourite streaming apps, personalised recommendations, Google Assistant, search and control your TV with your voice, live TV, external devices and basic TV.

### **Select Wi-Fi network**

Your Google TV will automatically scan for wireless networks nearby. Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.

If you'd prefer to connect an ethernet cable to connect to the internet, simply insert the cable (not supplied) to the LAN input port at the back of the TV **(4b)**, and ensure that it is correctly connected to the internet.

### **Select terms**

This page will allow you to read each of the Google Terms of Service, Privacy Policy, and Google Play Terms of Service in full, and to accept.

### **Search across all your TV apps**

Allow it to share your requests with your TV's apps. Without this permission, Google Assistant may not be able to find all the content from your TV's apps.

 
### **Choose your subscriptions**

Your subscribed apps will be installed on your device. Additionally, the apps that came with your device will also be installed during installation.

### **Remote & accessories**

Your Google TV remote control has bluetooth capabilities with the onscreen prompts to pair the remote with the TV. This will allow you to use voice commands with your remote via the Google Assistant button.



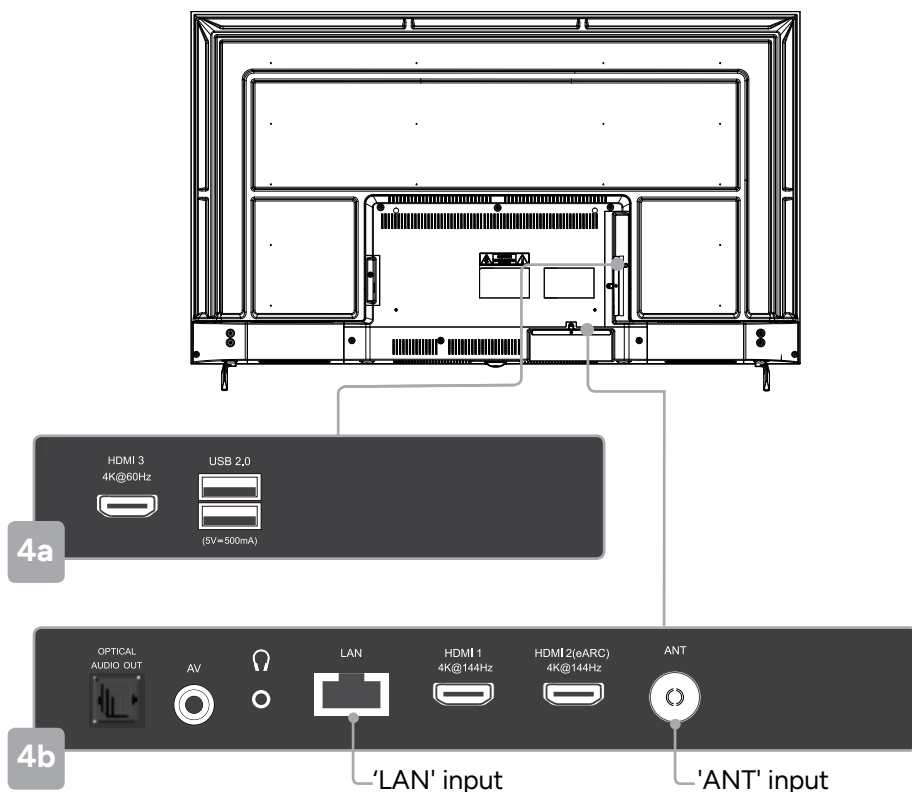


Following these options, the **Auto Tuning** screen will appear. Ensure you have an antenna cable connected to the 'ANT' input port at the back of the TV **(4b)**.

The auto tuning function will search for and save all available free-to-air TV channels. After confirming your settings, the process will automatically begin. The number of searched channels will be displayed on the screen.

When setup is complete, you will be able to access the **Home** page.

**eARC** Enhanced Audio Return Channel.

 If you want to use the eARC function, set the EDID version to EDID version 2.1 (Settings-> Channels & Inputs-> Input -HDMI EDID Version). In addition, the eARC switch needs to be turned on (Settings-> Display & Sound -> Sound->eARC).

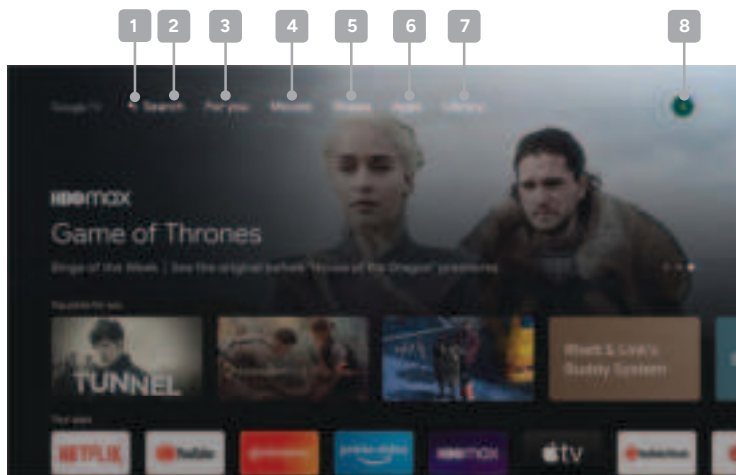

## 1 Google Assistant

Click to launch the built-in virtual assistant, which will begin listening for voice commands. Give it a try, ask "What's the weather today?"

## 2 Text search

Enter text manually to search TV apps.

## 3 For you

Displays application recommendations, new episodes of the daily courtroom spin-off, resume, top picks for you, your apps.

## 4 Movies

You can watch popular movies, new movies, and more.

## 5 Shows

You can watch popular programs, new programs, etc.

## 6 Apps

Access the App Centre to display all installed apps. Free -to-air channels can be accessed under the "Live TV" option.

## 7 Library

View records, manage watch list.

## 8 Dashboard

Dashboard contains user account, settings page, input source list, weather panel, image settings, notifications, etc.

### Note:

 
The layout and functions of the home page will change dynamically with the version of the launcher. All pictures in the quick start guide are for reference only.

# SETTING

## Global settings

To access the global settings menu (**5a**), Under the Home interface, Press the > key until the **Dashboard** menu appears, then press the arrow keys to move to the Settings icon, Here you will find all of the adjustable options for Google TV's interface, connectivity, and apps.

In live tv mode you can also press the ≡ **Quick Menu** button on your remote control and use the </> buttons to navigate to the Settings option.

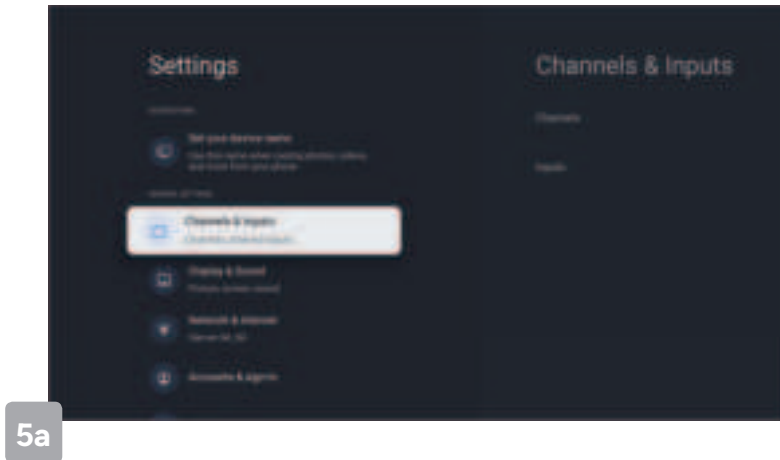

## Quick Menu

Options for your Live TV (Input,picture,sound,Power,Advanced Options) can be accessed by pressing the ≡ **Quick Menu** button on your remote control. Use </> buttons to navigate through the submenus, and ^/∨ buttons to access Channel and Recording/ Time Shift options.

## **Poor picture and sound quality**

- Try a different channel
- Adjust the antenna
- Check all connections

## **No picture or sound in TV status**

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

## **No sound or sound is too low at maximum volume**

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

## **No colour, wrong colour or tints**

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the HUE and Color Tuner

## **Picture rolls vertically**

- Check all connections

## **Blurred or snowy picture, distorted sound**

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

## **Remote control malfunctions**

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

## **Image is not centred on the screen**

- Adjust the horizontal and vertical position

## **"No Signal" on HDMI source**

- Test the device with a different HDMI cable :
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

**For our full TV troubleshooting guide and extended User Manual for this TV, head online to [help.kogan.com](http://help.kogan.com)**



Dolby, Dolby Vision, Dolby Atmos, and the double -D symbol are registered trademarks Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.

Confidential unpublished works. Copyright © 2012 -2021 Dolby Laboratories. All rights reserved.

[ay5r

Handwriting practice lines consisting of 20 horizontal lines.

[ay5r

Handwriting practice lines consisting of 20 horizontal lines.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

### **Need more information?**

This is a **Quick Start Guide**, and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **[help.kogan.com](https://help.kogan.com)**

kogan.com