 


Fanttik

E1 NEX Workstation

Electric Screwdriver Set

User Manual

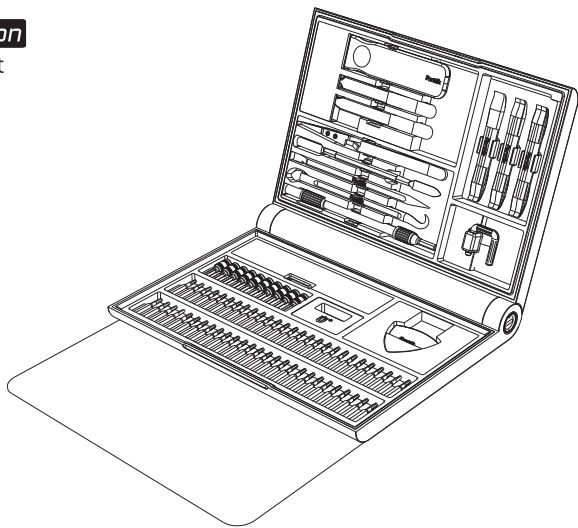

Contents


1. Safety Warnings	02
2. Package Contents	03
3. Product Overview	04
4. How to Use	05
5. Specifications	07
6. Troubleshooting	08

1.Safety Warnings


- Avoid moisture, dust, and drop.
- Do not store the product in extreme temperature environment.
- Stay alert, watch what you are doing and use common sense when operating. Do not operate while you are tired or under the influence of drugs, alcohol or medication.
- This product is not a toy and should not be used by kids under 5 years old.
- Do not dismantle the machine by yourself. Have your tool serviced by a qualified repair person or contact us for advice.

2.Package Contents

 
1. Blunt Tweezers
2. Angled Tweezers
3. Reverse Tweezers
4. Metal Spudger
5. Spudger
6. Halberd Spudger
7. Flex Extension
8. 5/32-inch (4mm) x L28mm *64
9. Jimmy
10. Opening Tool *3
11. Suction Handle
12. Electric Screwdriver
13. Opening Pick *6
14. Magnetic Pad

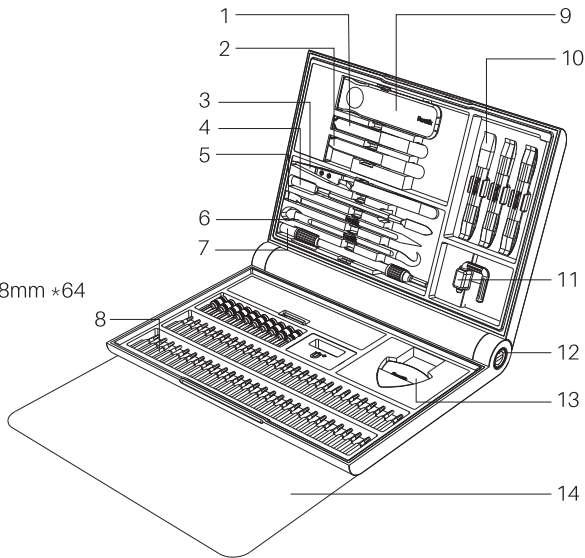

 3.Product Overview




Screwdriver Bit x 64PCS

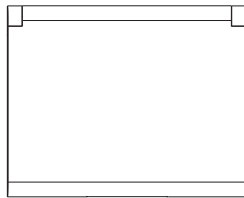 

Inner Box of Storage Box x1





 
Precision Screwdriver x 1

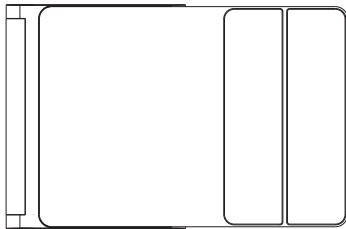

Casing of Storage Box x 1


4.How to Use

   - Open the magnetic pad and workstation
- Press down the screwdriver located on the side of the workstation hinge
- Choose the screwdriver bits and tools you need
- Forward/Reverse rotation button
 - Press ^ button to turn in or tighten screws.
 - Press v button to loosen or remove screws.
- **Magnetizer**
 - Swipe bit tips a few times in the Magnetizer.
- **Torque knob**
 - When the torque knob is set to level  the device will shut down.
 - When the torque knob is set to level L , it is in low torque mode.
 - When the torque knob is set to level H, it is in high torque mode.

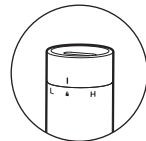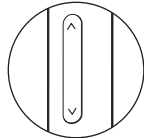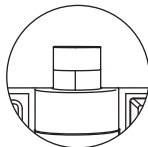


- **Bit Installation**

 - Remove the screwdriver bit from the inner box of storage box then insert the bit into the bit holder.

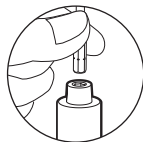


- **Indicator Status**

 - If the battery level is below 20% when the screwdriver is in use, the indicator will blink red quickly for 5 seconds, and it will turn off.
- When the button is released, please charge the battery in time.
- When charging, the indicator will slowly blink red.
- When the battery is fully charged, the indicator will stay white.

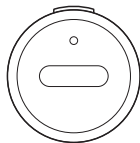

- **LED lights**

 - Press button will turn on LED lights simultaneously. LED light will turn off automatically in 10 seconds without operation.

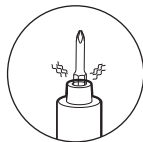

5.Specifications

Product Name	Cordless screwdriver kit
Product Model	E1 NEX Workstation
Color	Deep grey
Product Dimensions	234*188*34mm
Product Net Weight	1045g
Parameters of the electric precision screwdriver	
Screwdriver Dimensions	159 x Φ 16.4 mm
Screwdriver Net Weight	62g
Color	Deep grey
Maximum Torque of Level L	0.05 N·m
Maximum Torque of Level H	0.2N·m
Maximum Torque of Manual	3N·m
Charging power	5V $\equiv$ 0.14A
Rated Voltage	3.7V $\equiv$
Lithium Battery	350mAh
Rotation per Minute(Unloaded)	200rpm
Charging time	2-3H

6.Troubleshooting

Fault	Cause	Solution
Screwdriver not working	Torque knob is set to level or the lithium battery level is low	Set knob to level L or H , or charge the battery if necessary
Bit cannot be installed	Bit size doesn't match the size of the bit holder	Use an bit in C4 specifications
Rust on the surface of bit	High moisture in storage environment	Storage it in dry enviroment, and apply anticorrosive oil on the surface of bit
Can not loosen the screws or screw loose	Torque mode not used properly	Please use low torque level L , if the force is not enough, adjust to high torque level H , or tighten/loosen by manual
Battery won't charge	The USB cable i sn't plugged in properly or spec ified charging voltage isn't being used	Check whether the charging indicator is on, plug the USB cable, use the spec ified charging voltage



Environmental information

Caution: this appliance is marked in accordance with European Directive 2012/19/EU and the Polish Waste Electrical and Electronic Equipment Act with the symbol of the crossed-out waste container. Such labelling indicates that this equipment, after its life time, must not be placed together with other household waste.

Caution: this equipment must not be disposed of with household waste!!! The product must be disposed of by selective collection at a dedicated collection point. Proper handling of waste electrical and electronic equipment contributes to avoiding harmful consequences for human health and the environment due to the presence of hazardous components and improper storage and treatment of such equipment. In order to recycle the materials used for the watch's packaging, follow the rules for sorting materials established locally for this type of waste.

929-693-6066 MON-FRI 9AM-5PM (ET)

www.fanttik.com

support@fanttik.com

METASEE LLC

12 GREENWAY PLZ STE 1161A HOUSTON,

TX 77046-1203

Made in China

