 


SUSTEAS

INSTRUCTION MANUAL

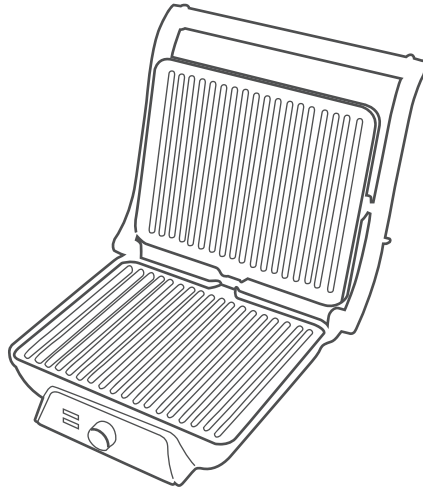

ELECTRIC GRILL

SL-107A

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

SAFETY

•Prior to use, check the appliance for visible external damage. Do not operate an appliance that has been damaged or dropped.

•To prevent accidents, have defective plugs and/or power cables replaced immediately by an authorised specialist technician or our Customer Service department.

•This appliance may be used by children of the age of 8 years or more and by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they are being supervised or have been instructed with regard to the safe use of the appliance and have understood the potential risks.

•Children must not play with the appliance.

•Cleaning and user maintenance must not be performed by children unless they are older than 8 years of age and are supervised,

• Children younger than 8 years of age must be kept away from the appliance and the power cable.

•All repairs must be carried out by authorised specialist companies or by the Customer Service department. Improper repairs may put the user at risk. It will also invalidate any warranty claims.

•Repairs to the appliance during the warranty period may only be carried out by a customer service department authorised by the manufacturer. Otherwise, no warranty claims will be held for any subsequent damages.

•Defective components must always be replaced with original replacement parts. Compliance with safety requirements can only be guaranteed if original replacement parts are used.

•Do not allow the power cable to come into contact with hot appliance parts. NEVER use the appliance near naked flames, a hotplate or a heated oven.

•After use, allow the appliance to cool down completely before cleaning it. Risk of burn!

•Install the appliance as close as possible to an electrical power socket. Ensure that the power plug is quickly reachable in case of danger, and also that there is no danger of tripping over the cable.

•This appliance is intended exclusively for grilling food indoors. Use only for household. The appliance is not intended for any other purpose, nor

for use beyond the scope described.The appliance is not intended for use in commercial or industrial environments.

• Provide a stable location for the appliance.

RISK OF ELECTRIC SHOCK!

►The appliance should only be connected to correctly installed and earthed mains power sockets. Ensure that the rating for your local power supply corresponds with the details on the rating plate of the appliance.

►Arrange for customer service to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged.

►Do not expose the appliance to rain, and never use it in a humid or wet environment.

►Ensure that the power cable never becomes wet or moist during use.

►NEVER immerse the appliance in water or other liquids! This would bring about the risk of a potentially fatal electric shock upon the next use of the appliance should moisture be present in the voltage conducting elements.

►Always take hold of the plug when handling the power cable. Do not pull on the cable itself and never touch the power cable with wet hands, this could result in either a short circuit or an electric shoc.

►Do not place the appliance itself, furniture items or similar objects on the power cable, and take steps to ensure it cannot become jammed or trapped in any way.

►Do not open the appliance housing or attempt to repair or modify the appliance . If the housing is opened or improper modifications are made, you run the risk of receiving a potentially fatal electric shock and the warranty will be void.

►Protect the appliance from drips or splashes of water . Thus, do not place any vessels containing liquid (e.g. flower vases) on or near the appliance.

►Always pull the plug out of the power socket during each interruption, as well as after use and before any cleaning.

RISK OF BURNS!

►The surfaces of the appliance become extremely hot during use. Touch the appliance using only the handle.

CAUTION! MATERIAL DAMAGE!

►Do not use an external timer switch or a separate remote control system to operate the appliance.

►Never leave the appliance unattended during operation.

►Ensure that the appliance, the power cable and the plug do not come into contact with heat sources such as hotplates or naked flames.

►Do not use charcoal or similar fuels to operate the appliance!

►To protect the non-stick coating, do not use metallic tools such as knives, forks, etc. Should the nonstick coating become damaged, stop using the appliance.

►Only operate the appliance with the original accessories supplied.

UNPACKING

WARNING!

►Packaging material may not be used as a plaything. There is a risk of suffocation.

•Remove all parts of the appliance and the operating instructions from the box.

•Remove all packaging materials and any films and labels.

HANDLING AND OPERATIO

This section provides you with important information on handling and using the appliance.

Before initial use

1)Clean all accessories as described in the section "Cleaning and care" to remove any production residues.

2)Read these operating instructions carefully.

3)Install the appliance in accordance with the safety instructions.

4)Open the appliance.

5)Wipe the hotplates 8 with a damp cloth.

6)Close the appliance.

7)Insert the power cable plug into a properly connected and earthed mains power socket which supplies the voltage stated in the "Technical data" section. Allow the appliance to heat up for about 5 minutes on the maximum temperature setting by turning the heat level control 5 to MAX.

NOTE

 
►The first time the appliance heats up, a small amount of smoke and odour may be generated due to productionrelated residue. This is normal and is completely harmless. Ensure sufficient ventilation; for example, by opening a window.

8)After heating, pull the plug out of the mains socket and allow the appliance to cool down completely.

9)Clean the appliance again with a damp cloth.

Heat level control

The temperature is set using the heat level control 5, from Min to Max

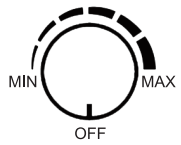

NOTE

►As soon as you set the heat level control 4 to the desired position, the green control lamp "Ready" 4 goes out until the temperature has been reached.

►The green control lamp "Ready" 4 may switch off again in the interim. This indicates that the temperature has fallen below the set temperature and the appliance is heating up again.

►The red control lamp "Power" 5 lights up as soon as the appliance is connected to the mains.

Operation

1)Close the appliance lid using the handle.

2)Slide the fat collector tray 6 into the applianc.

3)Replace the plug in the mains power socket. The red control lamp "Power" 3 lights up.

4)Set the desired level on the heat level control5. The green control lamp "Ready" 5 comes on as soon as the set heating level is reached.

NOTE

►As soon as you set the heat level control 5 to the desired position, the green control lamp "Ready" 4 goes out until the temperature has been reached. The green control lamp "Ready" 4may switch off again in the interim. This indicates that the temperature has fallen below the set temperature and the appliance is heating up again.

NOTE

 
 
You can use this grill in 2 different ways:

-Fully open so that both hotplates 8 can be used as a table grill with the upper hotplate 8 as a contact grill so that, for instance, meat is grilled from both sides.

NOTE

► If you are grilling food where liquids such as fat escape, fold out the stand extensions e . Due to the slight inclination of the lower hotplate 8, liquids flow better in the direction of the fat outlet 7 into the fat collector tray 6.

"Table grill" position

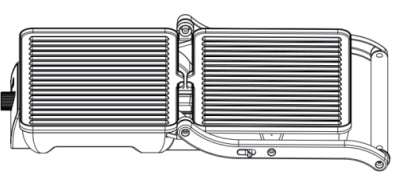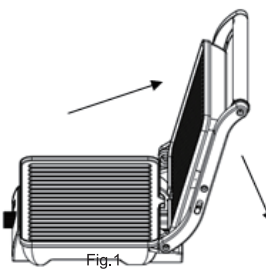

1)Fold out both support feet 1 (Fig.1).

2)Push the unlocking button 180° 2 (Fig.1) and open the appliance lid until both hotplates 8 can be used as a table grill.

3)The hotplates 8 are now positioned next to each other and can be used as a table grill (Fig. 2).

4)Place the food to be grilled onto the hotplates 8.

5)Turn the food to be grilled from time to time and remove it from the hotplates 8 once it is cooked.

CAUTION!

Damage to the appliance!

►Do not use pointed or sharp objects to turn or remove the grilled food. These could damage the surfaces of the hotplates 8!

6)Turn the heat level control 5 to OFF and remove the plug from the mains power socket .

CAUTION!

►Always remove the plug from the mains power socket when the appliance is not in use . It is not sufficient to simply set the heat level control 5 to OFF!

TIPS AND TRICKS

• To make meat more tender and speed up the grilling process, you can marinate it beforehand. An ideal basis for this can be sour cream, red wine, vinegar, buttermilk or fresh papaya or pineapple juice, for example. Add herbs and spices according to taste. Do not add salt as this can draw water out of the meat and make it dry. Place the meat in the marinade so that it is completely covered and close the container. Ideally, leave it overnight.

• The hotplates 8 have a nonstick coating, therefore extra fat is not necessary. If you still wish to use fat, please ensure that the fat/oil is suitable for grillroasting, e.g. rapeseed oil.

• If you are not sure whether the grilled food is cooked all the way through, you can use a commercially available meat thermometer.

CLEANING AND CARE

Safety Instructions

WARNING!

DANGER TO LIFE DUE TO ELECTRIC SHOCK!

Risk of injury when cleaning the appliance!

To avoid risks, observe the following safety instructions:

►Before cleaning, pull out the plug and wait until the appliance has completely cooled down. Risk of injury!

►Never clean the appliance under running water and never immerse it in water. The appliance could be irreparably damaged!

CAUTION!

Damage to the appliance!

►To avoid irreparable damage to the appliance, ensure that no moisture can penetrate the appliance during cleaning.

►When cleaning the surfaces use neither abrasive or chemical cleaners, nor sharp or scratchy objects.

• Wipe the hotplates 8with a damp cloth. Do not use any abrasive cleaning agents, rough sponges or sharp objects for cleaning as these could damage the nonstick coating.


• To clean the outer surfaces of the appliance, wipe it down with a damp cloth and a small amount of washingup liquid. Wipe off any detergent residues using a cloth moistened with clean water.

Ensure that all parts are completely dry before reusing the appliance

• Clean the emptied fat collector tray 6 in hot water and washingup liquid. Rinse off detergent residues with clean water and dry it well.

• Do not clean the machine in the dishwasher.

NOTE



For gentle cleaning of the fat collector tray 6 we recommend that you wash it by hand as described above. You can, however, also clean the fat collector tray 6 in the dishwasher.

Storage

• Always unplug the Electric Grill before storage.

• Always make sure the Electric Grill is cool and dry before storing.


• Store the cleaned appliance in a dry place.

Product Specification

• Voltage: AC 120V

• Frequency: 60Hz

• Power: 1500W



To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these marked with crossed out items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government

office, for details of where and how they can take this item for environmentally safe recycling.

If you need assistance with the product, please contact us immediately and we will resolve your issues to your satisfaction.

Sales company : SUSTEAS

E-mail : shipengmaoyi@outlook.com