

# Maintenance Manual for Corded 8 - in - 1 Steam Mop with 7 Brush Heads

**1. Cleaning and Component Maintenance**  
**After - Use Cleaning:** Unplug the steam mop from the power source immediately after use. Empty the water tank to prevent mold and bacteria growth. Wipe down the exterior of the mop, including the handle, body, and water tank area, with a soft, damp cloth to remove dirt, dust, and cleaning residue.  
**Brush Head and Nozzle Care:** Each of the 7 brush heads can accumulate debris during use. Remove hair, lint, and stuck - on dirt from the brush bristles. Soak them in warm, soapy water for a few minutes if needed, then rinse thoroughly and air - dry. Inspect the steam nozzles (cone nozzle, small nozzle, etc.) for blockages. Use a thin object like a toothpick to gently clear any mineral deposits or debris that may be clogging the openings.

**2. Water Tank and Steam System Upkeep**  
**Water Quality:** Always use clean, distilled water in the steam mop. Tap water contains minerals that can cause limescale buildup inside the water tank, heating elements, and steam lines over time. If you notice a white, crusty residue in the water tank, it's a sign of mineral deposits.  
**Descaling:** Periodically descale the steam mop according to the manufacturer's instructions. Usually, this involves filling the water tank with a descaling solution (compatible with your steam mop) and running the mop for a short cycle. After that, empty the tank and rinse it several times with clean water to ensure all the descaling agent is removed. This helps maintain efficient steam production and prolongs the lifespan of the internal components.

**3. Storage and Cord Management**  
**Proper Storage:** When the steam mop is not in use for an extended period, clean it thoroughly as described above. Ensure the water tank is completely dry. Store the mop in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing it in a location where it could be knocked over or damaged. Keep the 7 brush heads organized, either in a storage bag or in a designated area with the mop.  
**Cord Care:** Regularly check the power cord for signs of fraying, cuts, or exposed wires. If any damage is detected, stop using the steam mop immediately to avoid the risk of electric shock. When storing the mop, coil the cord neatly, avoiding kinks and twists. Do not yank the cord to unplug the mop; always grasp the plug firmly to pull it out of the outlet.