

# **HAYLOU** G3

True Wireless Gaming Earbuds

User Manual

Problem	What to do
My G3 cannot be charged	Insert the USB-C (smaller end) connector firmly into the charging port at the rear of the charging case. And make sure the USB-A (larger end) connector is connected to a power source.
	<ul> <li>Make sure both ends of the charging cable are connected properly.</li> </ul>
	If your G3 has been exposed to extreme temperatures, please wait for it to return to room temperature before charging.
My G3 cannot automatically pair with my mobile device again after the Bluetooth function is restarted manually.	The mobile device will need to initiate the connection by itself after restarting the Bluetooth function. G3 will not initiate a connection automatically.
	Increase the volume on your device.
There is no sound from my G3	Make sure that your G3 is connected with your mobile device, and the correct device is being used.
	Try connecting to a different device.

# 01 Bluetooth Pairing

## Pairing Mode

- 1. Open the lid of the charging case, the earphones enter pairing mode.
- 2. Select "Haylou G3" on the new Bluetooth device list and tap it to pair.
- 3. Havlou G3 is now paired.



# 02 Touch Sensor



Press for 2 secs	( 2s )	Power ON*
Press for 10 secs	( 10s	Power OFF**

<sup>\*</sup> Haylou G3 will automatically power ON when the charging case is opened.

# Playback Control

	· .	
(Settings	Bluetooth	
Bluetooth		-
PAL DEVICES		
Haylou G3	Not Cor	nnected ①
	βļm	

RIGHT \* You can only switch between Music/Cinema Mode after turning OFF Gaming Mode.

.

. .

Play/pause

Skip track backward

Music/cinema mode

Enter/exit gaming mode\*

Skip track forward

### Call Control

Double tap the left earbud

Double tap the right earbud

Press and hold the left earbud

Press and hold the right earbud

Tap once


Tap once	•	Answer an incoming call
Tap once	•	Hang up a call
Double tap	• •	Reject an incoming call
Double tap	• •	Switch a third-party call

# **Restore Factory Settings**

- 1. Put the earbuds back into the charging case and ensure the earbuds have sufficient power; 2. Press and hold both earbuds for 10s to power off, then release after LEDs flash rose red twice;
- 3. Press and hold again for 5s; please do not release when LEDs flash other color during the process; after 5s, LEDs flash rose red twice and the reset is completed;
- 4. Close the charging case after reset; open the charging case again to pair after the breathing lights of the earbuds are on:

### \*If the operation is unsuccessful, please repeat the above steps; or log in to the official flagship store, contact customer service, and view the reset operation video.

# 03 Led Status

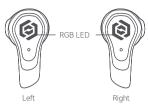

Pairing mode	Flash yellow and rose red alternately
Power on	Flash blue 3 times
Pairing is successful, connect the mobile device	Flash yellow
Play music (in music/cinema mode)	Yellow breathing light effect
Gaming mode	Green breathing light effect
Low battery (less than 10%)	Flash red periodically
The charging case is closed and the earbuds are charging	Yellow breathing light effect
The earbuds are fully charged	LED goes out

# 04 Charging Case



4-stage breathing light Power display of charging case When opening the lid, LED of Low battery (less than 10%) the charging case flashes 3 times The running water light effect displays the power in real time Charging case is charging

The charging case is fully charged LED goes out

LED indicator

# 05 Charging

- 1.Connect the Haylou G3 charging case to a power source with the provided charging
- 2.The earbuds and the charging case should be fully charged in around 2 hours. 3. More than 4 hours of playtime when fully charged, up to 20 hours of playtime with a fully charged charging case.
- 4.Put the earbuds into the charging case, and they will start charging after closing
- \*Please make sure to remove the insulation film on the earbuds before charging.

Warning: The rechargeable battery contained in this product must be properly disposed of in order to be recycled. Please do not put the battery in the fire to avoid explosion. Recommendation: In order to maintain a good level of performance of the lithium battery in this product, it should be charged once every three months even it is not in use.

# 06 Product Specifications

Brand name: HAYLOU Product model: G003

Product description: true wireless gaming earbuds

Bluetooth pairing name: Havlou G3

Bluetooth version: Bluetooth5.2

Sound modes: game/music/cinema Low latency: 45ms\*

Frequency response: 20Hz - 20,000Hz

Driver parameters: 13mm composite diaphragm dynamic driver

Product dimensions: 65 x 62 x 24 mm

Product weight: 56g (total weight of earbuds and charging case)

Earbud battery capacity: 45 mAH

Charging case battery capacity: 500 mAH

Charging time: ≤ 2 hours, The charging time of the earbuds and the charging case

Box content: Charging case, Earbuds, Charging cable USB-C to USB-A, User manual



\* The data tested by different instruments and different methods will be different. This data is tested by the built-in Bluetooth box of AudioPrecison.

### 07 Troubleshoot

Problem	what to do	<ol> <li>Do not disassemble, repair or modify</li> </ol>	
My G3 cannot be charged	Insert the USB-C (smaller end) connector firmly into the charging port at the rear of the charging case. And make sure the USB-A (larger end) connector is connected to a power source.	cause fire or even completely destroy  2. Do not expose the product to enviror too high (below 0°C or above 45°C).  3. Keep the indicators away from the ey	
	Make sure both ends of the charging cable are connected properly.	earphones.	
	If your G3 has been exposed to extreme temperatures, please wait for it to return to room temperature before charging.	Do not use this product during thund product to malfunction and increase the product to make the prod	
My G3 cannot automatically pair with my mobile device again after the Bluetooth function is restarted manually.	The mobile device will need to initiate the connection by itself after restarting the Bluetooth function. G3 will not initiate a connection automatically.	5. Do not wipe and clean the earphones liquids.     6. Avoid any contact with liquids.	
	Increase the volume on your device.		
There is no sound from my G3	Make sure that your G3 is connected with your mobile device, and the correct device is being used.	Note 1. Please read this user manual careful	
	• Try connecting to a different device.	properly store it.  2. When using for the first time, please	

### 08 Precautions

### Warning

- ify the product for any reason, as this may ov the product.
- onments where the temperature is too low or eyes of children and animals while using the
- nderstorms. Thunderstorms may cause the
- the risk of electric shocks. nes or their case with alcohol or other volatile

- efully before using the product and please
- fully charge this product.
- 3. Please charge the product, in case it has not been used over two weeks.

Manufacturer: Dongguan Liesheng Electronic Co., Ltd.

Address: Room 401-410, Building 1, No. 86 Hongtu Road, Nancheng District,

Dongguan City, Guangdong, China

<sup>\*\*</sup> Put the earbuds into the charging case and close the lid, they will automatically power off