


AkuvoxSmart Intercom

EC32Quick Guide

Installation

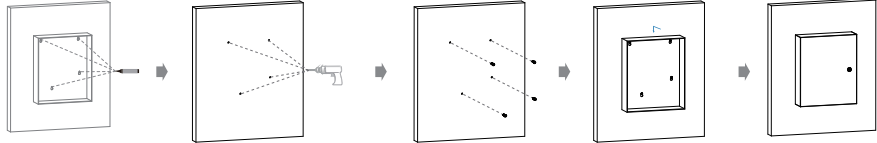

Place the EC32 in the position where it needs to be installed and mark four holes of the back cover on the wall.

Take down the EC32, and use a hand drill with 3mm diameter, and the hole depth should be determined according to the length of M4 screw selected.

Insert four M4 self-tapping screws, and reserve about 2 mm.

Fix the EC32 with four M4 self-tapping screws.

Finish.

Configuration

1. **Access the Akuvox Intercom website:** launch a browser and type in the IP address of R29/R20A then enter the username and password to login. (username/password:admin/admin by default)

2. **Set up Lift access control function:** on web UI of R29/R20A, go to the path: **Intercom > Lift Control > Akuvox EC32 Action** and fill the username and password of EC32.

3. **Setting user access rights:** on web UI of R29/R20A, go to the path: **Intercom > Card Setting** or go to the path: **Intercom > Private Key** (R29 only) or go to the path: **Intercom > Face** (R29 only) to set up the Lift Floor Number for the corresponding user.


4. **Access the EC32 website:** launch a browser and type in the IP address of EC32 then enter the username and password to login. (username/password: admin/888888 by default)

5. **Set up relays' s delay time:** on web UI of EC32, go to **Config** page to set the **Intercom open time** as your need.

6. **Disable Auto reboot:** on web UI of EC32, go to **Hardware > Device > Restart** everyday page to disable the auto reboot. This Setting is enabled by default.

Notice Information


Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website: <http://www.akuvox.com>  
© Copyright 2021 Akuvox Ltd. All rights reserved.



AKUVOX (XIAMEN) NETWORKS CO., LTD.

ADD: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA

[www.akuvox.com](http://www.akuvox.com)



YS32000011

 
反面

AkuvoxSmart Intercom


EC32Quick Guide

Unpacking

Before you begin using the device, please check the version you got and ensure that the following items are included in the shipped box:




EC32 x 1



Key x 1

Note: Please prepare four M4x20 self-tapping screws or longer M4 self-tapping screws by yourself.

Device Wiring

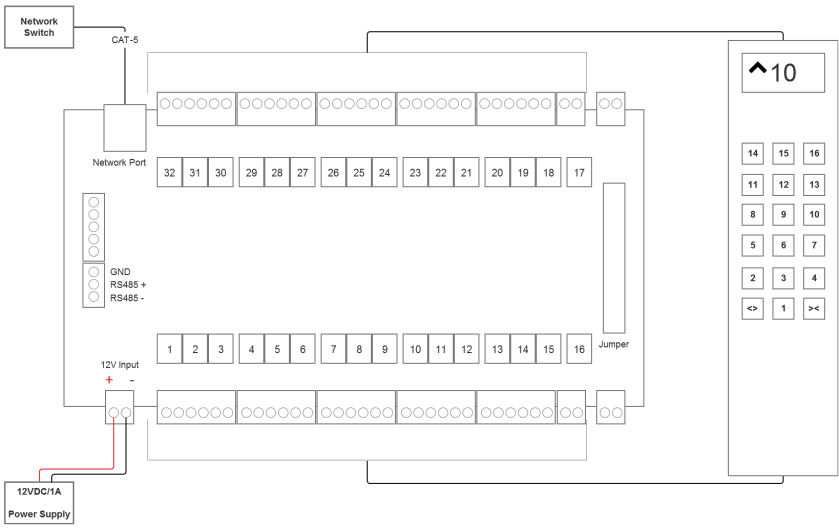

正面

技术要求

1.双面黑白印刷

2.材质为120克进口双胶纸

3.幅面尺寸180x130mm

4.产品要经设计确认方可量产

旧底图单号	
底图总号	
日期	签名

更改标记	数量	更改单号	签名	日期	EC32 AK版快速安装手册	TZ-SM-002296		版本
								V1.0
						等级	标记	重量
						第 1 张	共 1 张	比例
						料号: YS32000011		福建星网锐捷通讯股份有限公司
设计	周豪杰	2021.10.25						
审核	陈凌谨	2021.10.25						
工艺								
标准化	余芳	2021.10.25						
批准	翁震曦	2021.10.25						