 
 
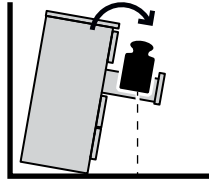 


GULLABERG

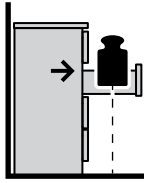

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

 
 
 
 
 
DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

English

Read and follow each step of the instruction carefully.

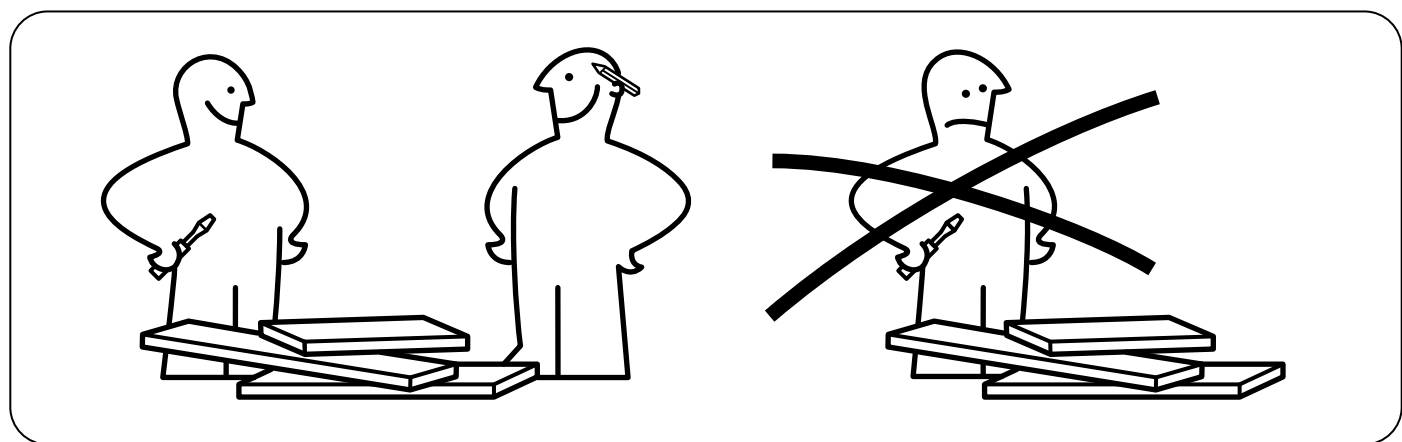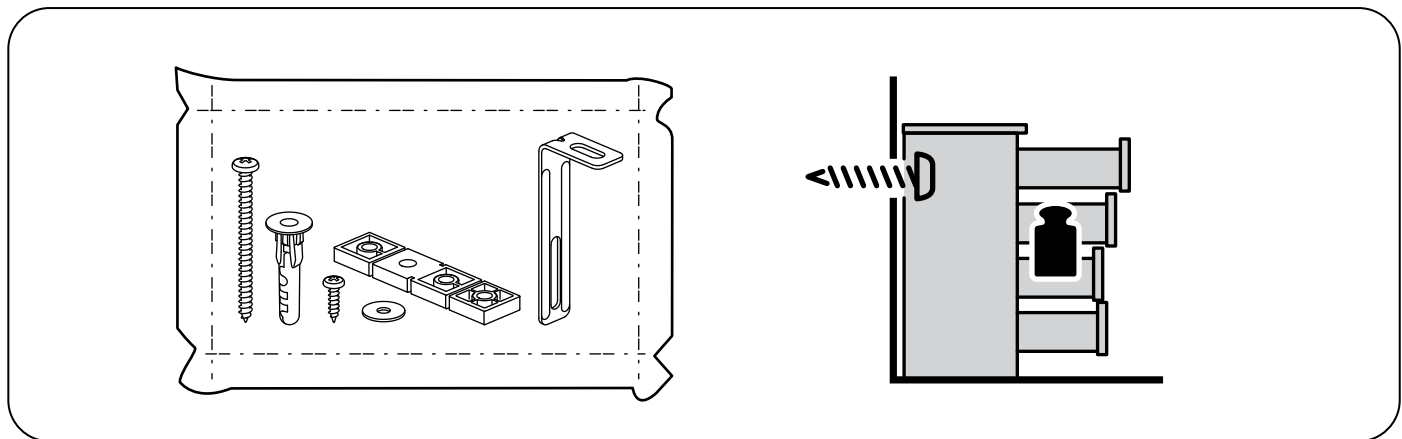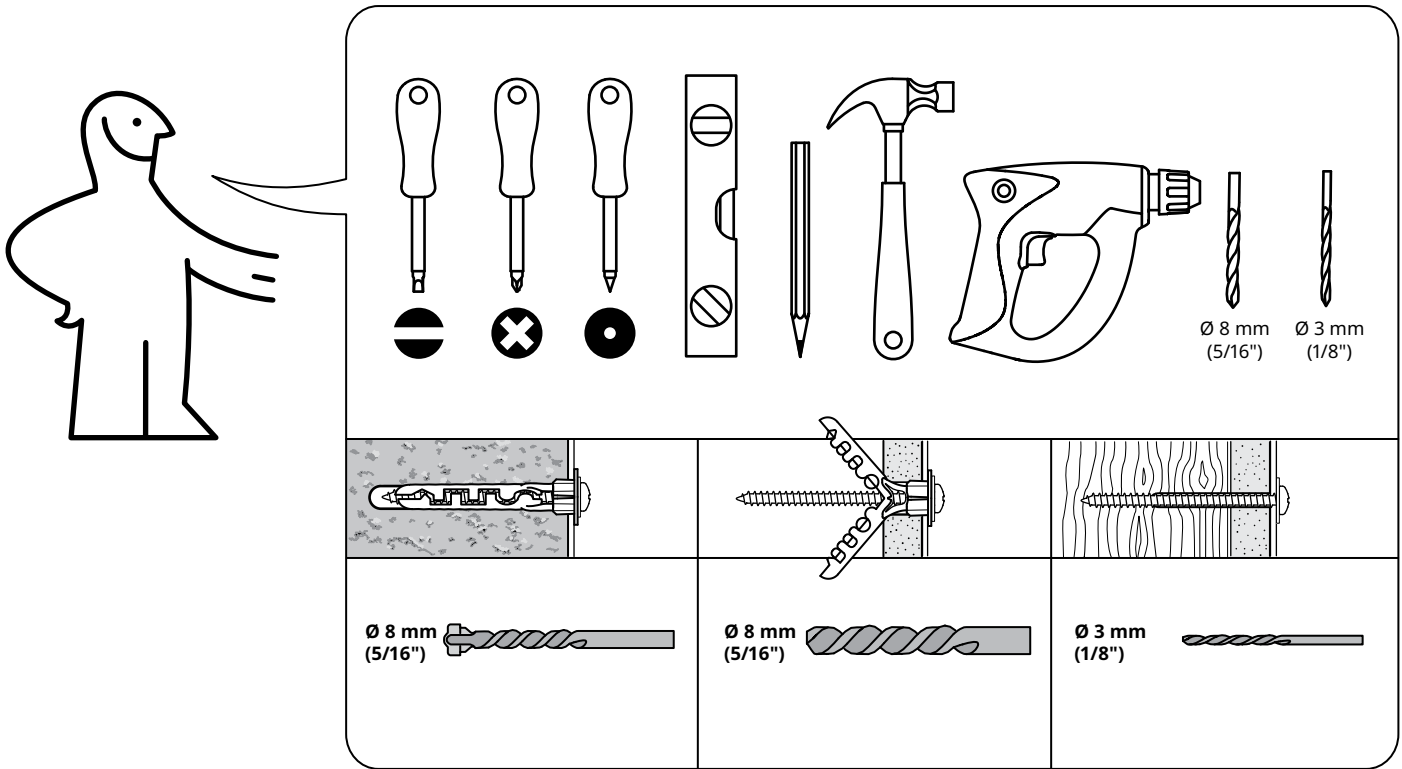


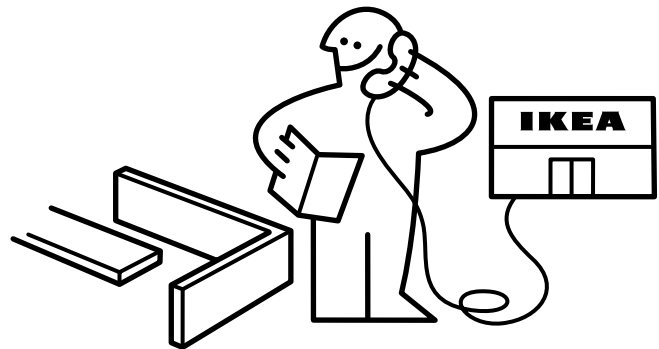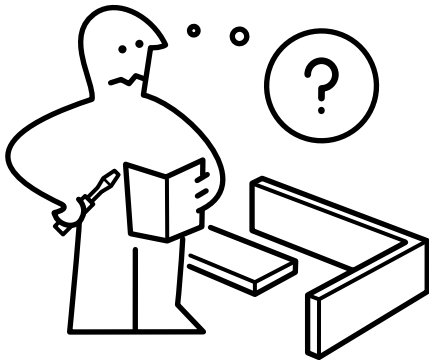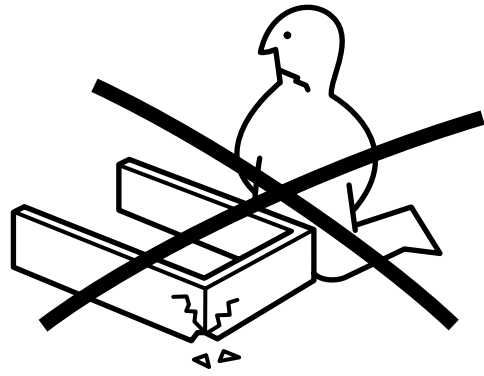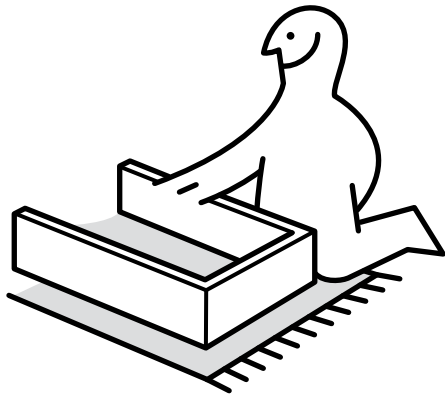


2x



 
2x



1x

 


2x

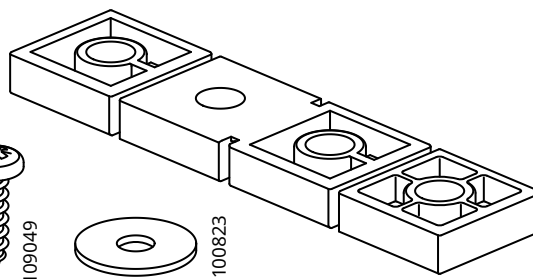 

1x

 10102070

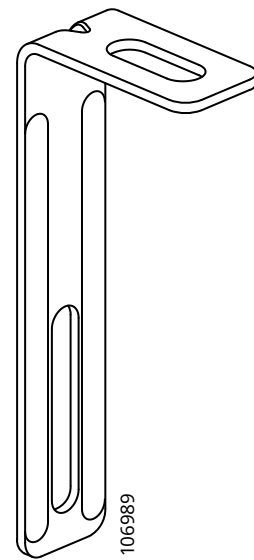

1x

106989

 
370173

1



118331

14x



100211

6x



101345

26x



 
146114

18x



105811

8x

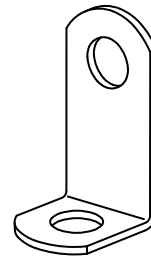

102553

3x



 
119250

4x



192800

10x




144574

6x




144575

 6x

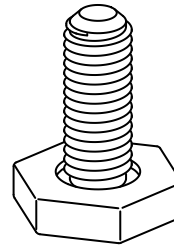


194970

 4x

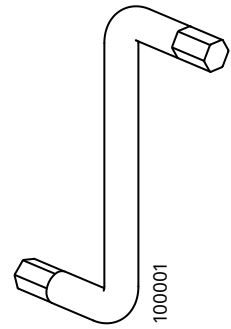


100001

 1x

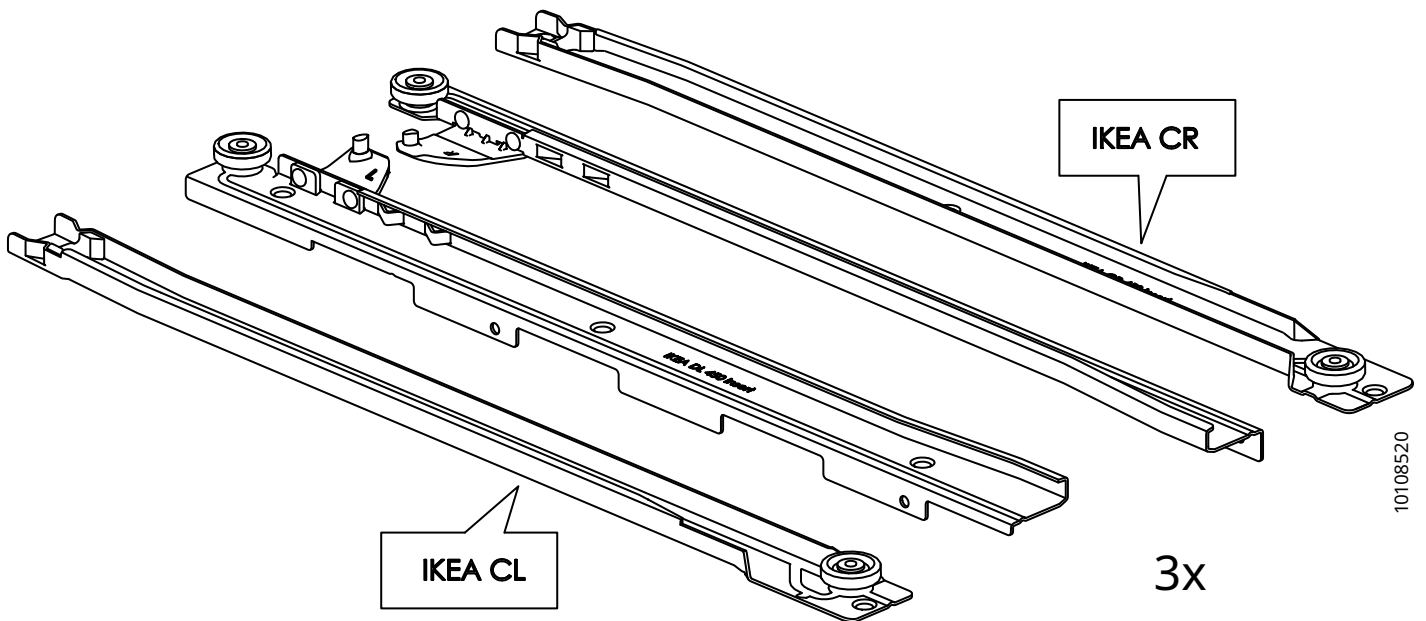


10108520

 
2




12x

 


12x

 

6x

 

12x

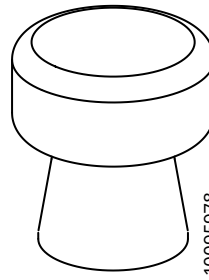 

6x

 
10095978
10096248
10118153



24x




18x

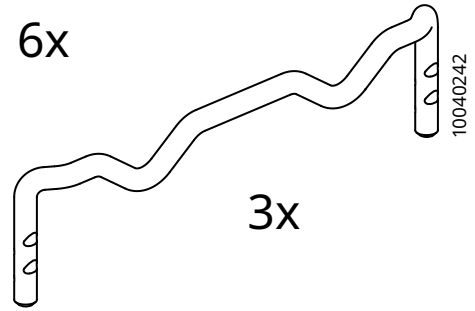

3x





 
10040242

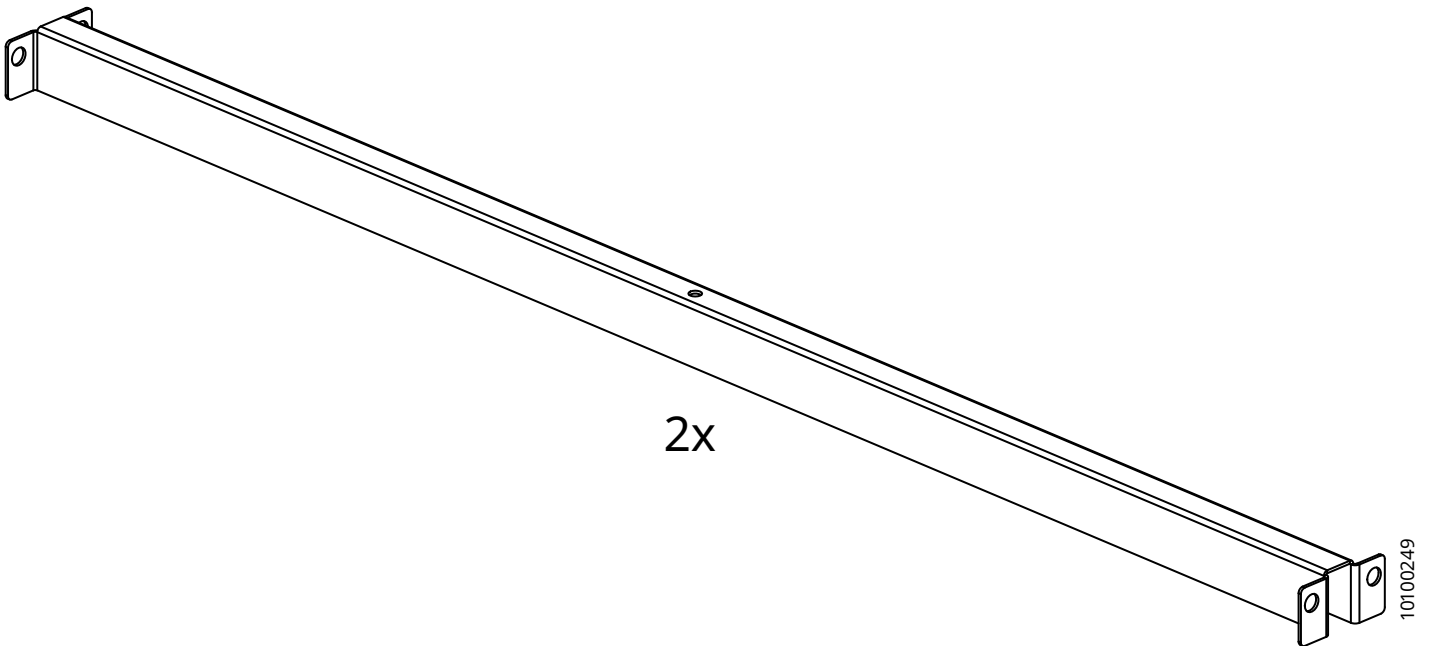


2x

10100249

     
1

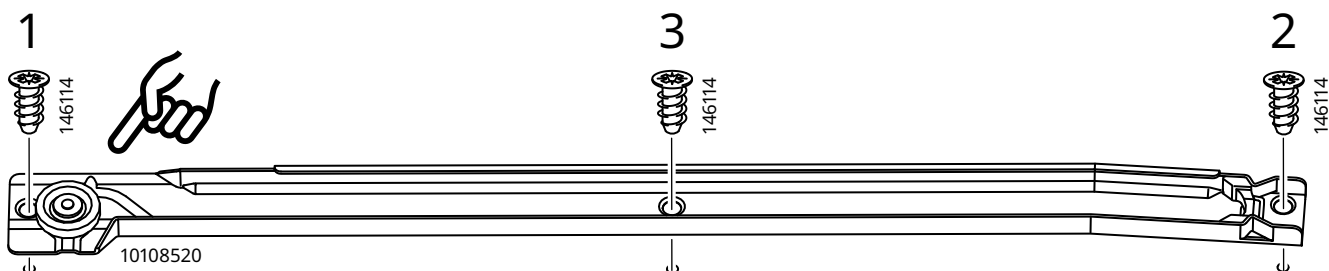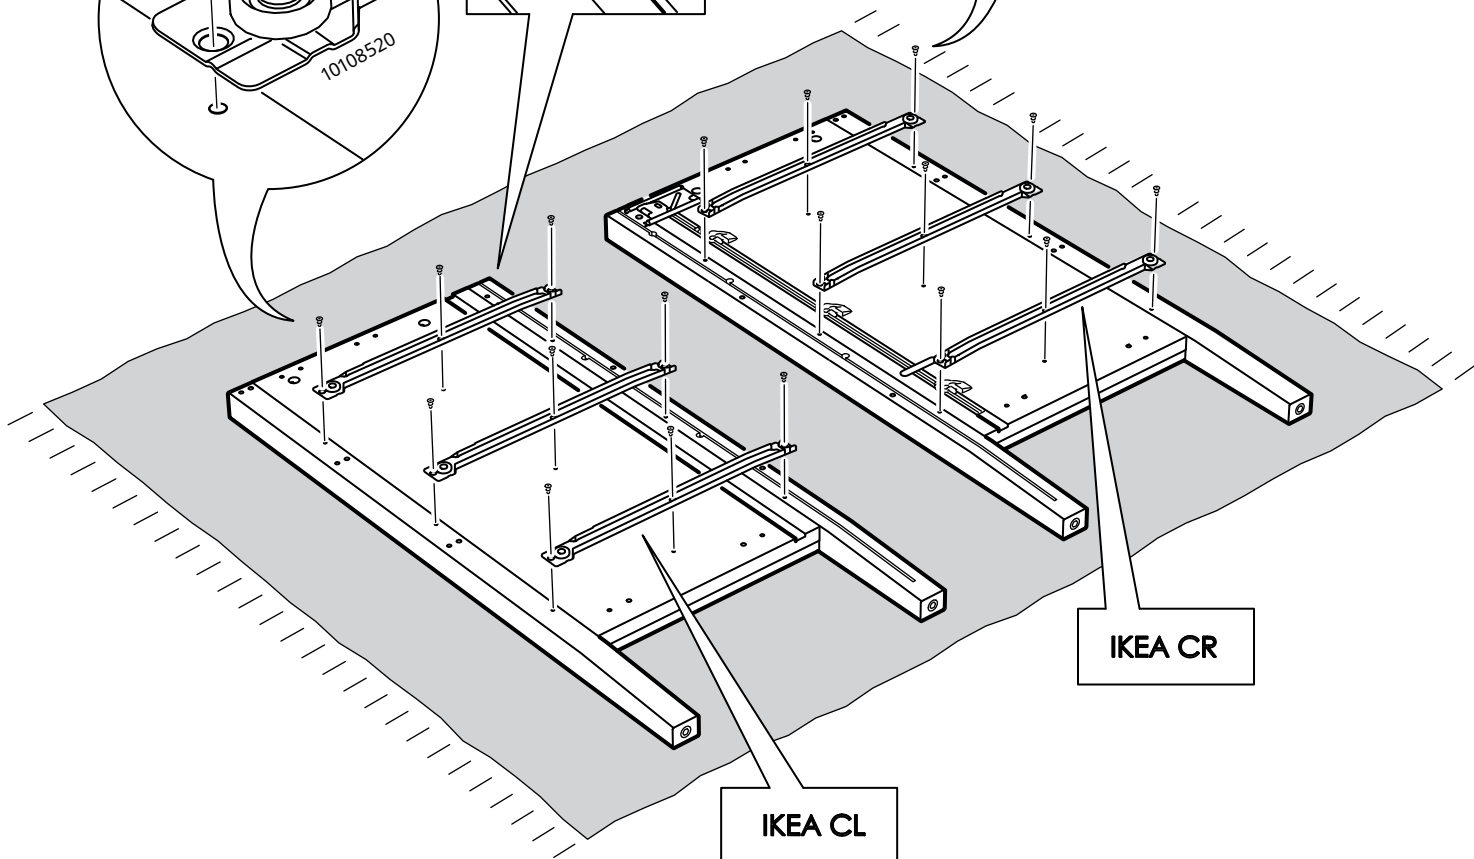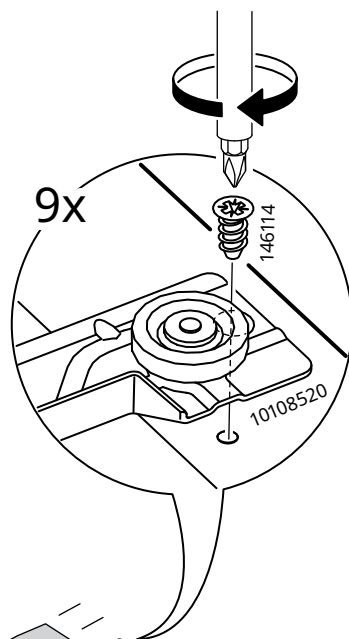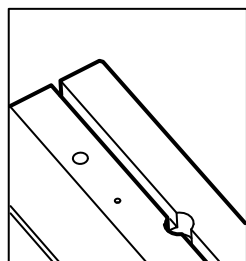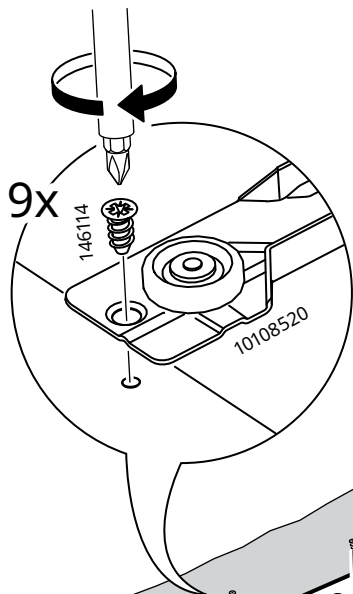


2

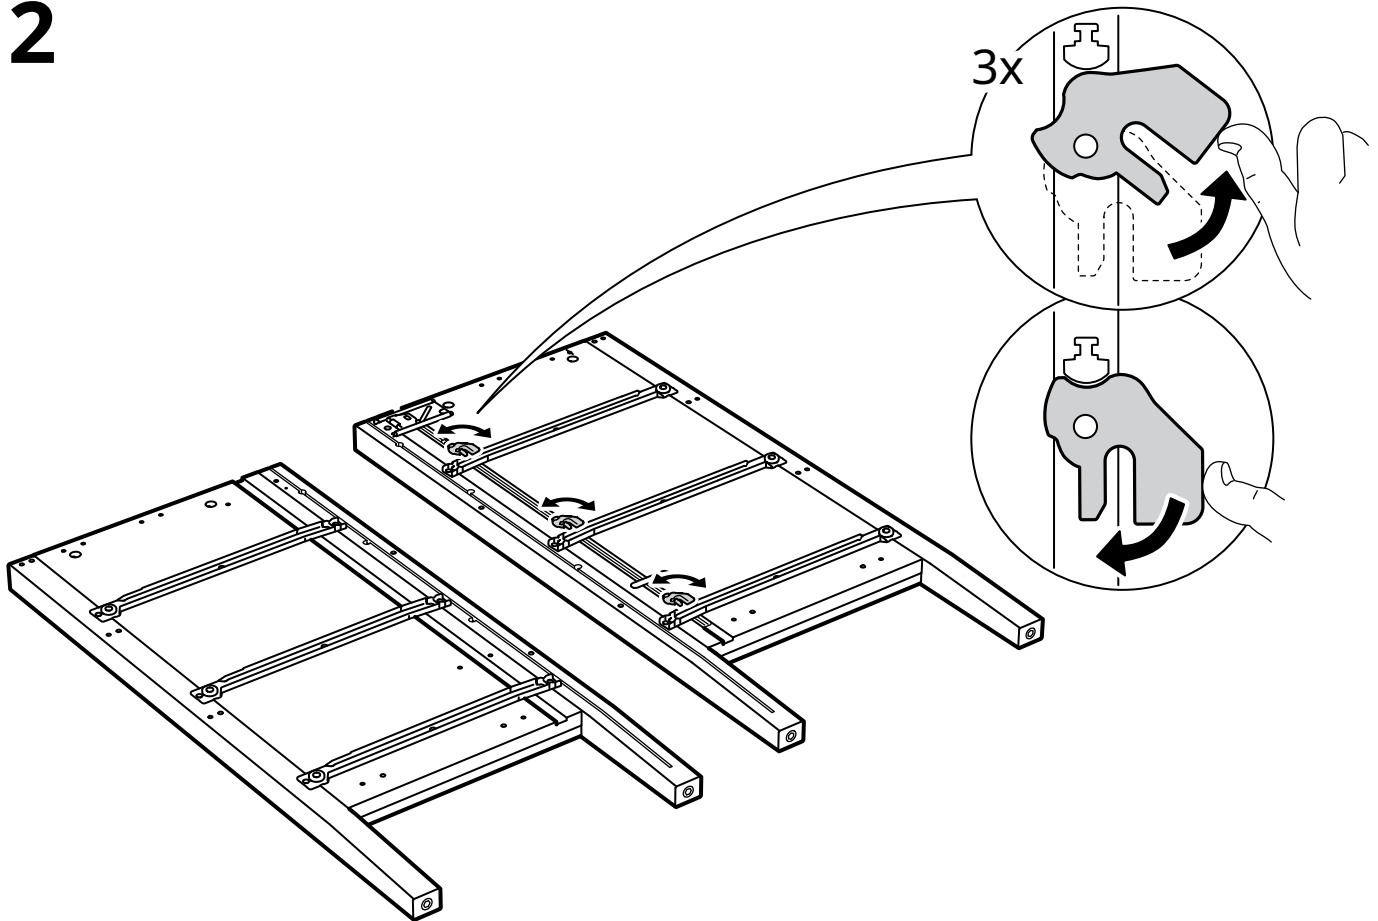 


3

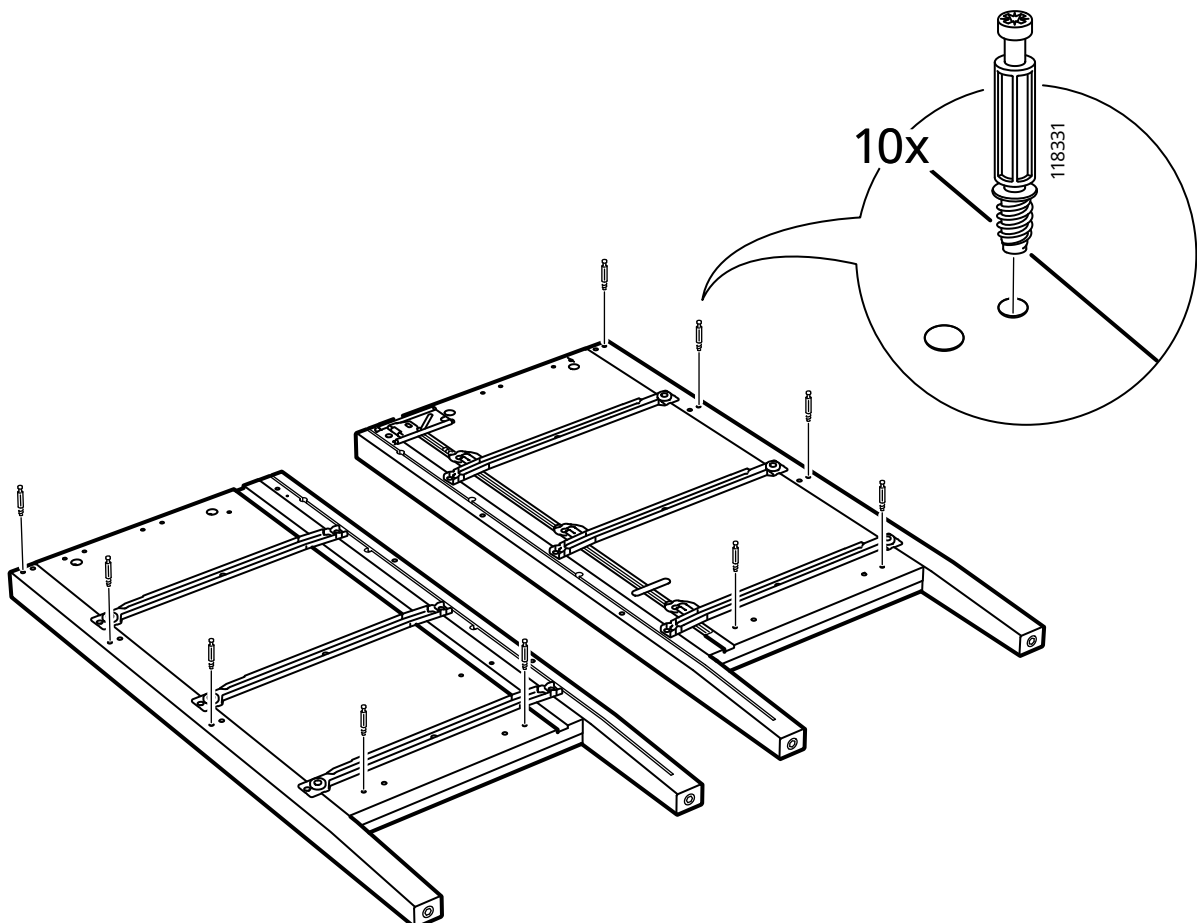 


4

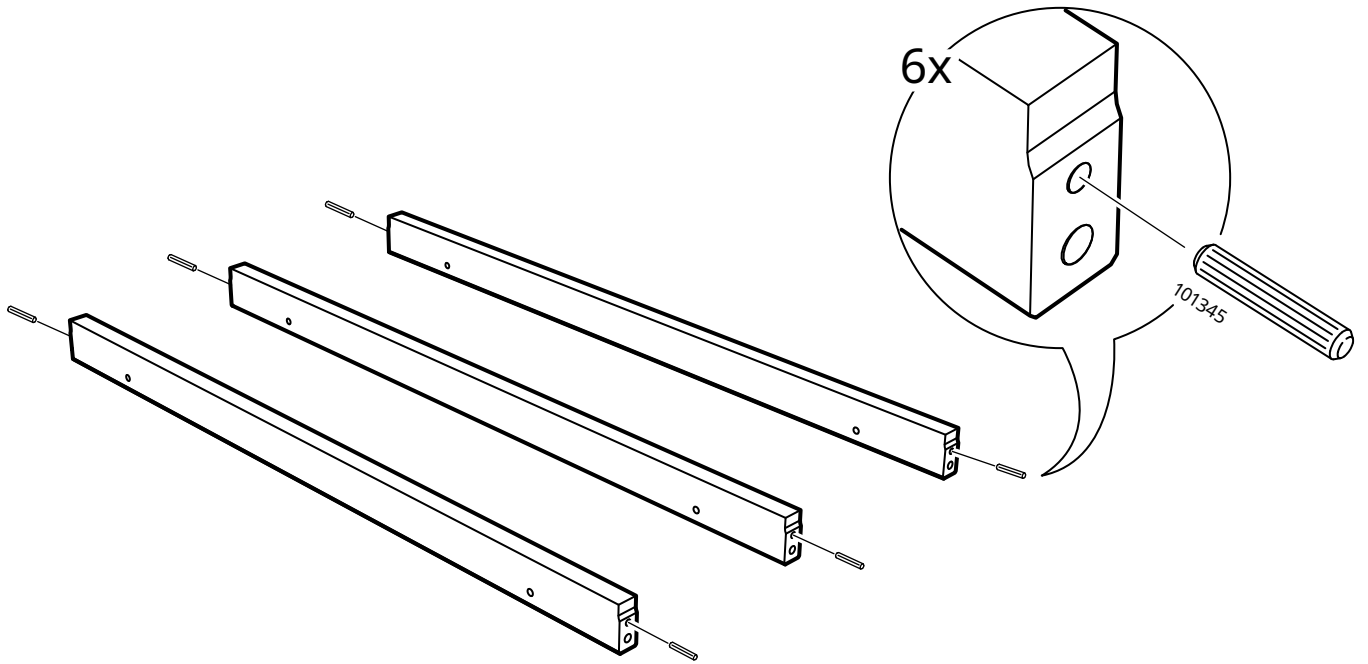 


5

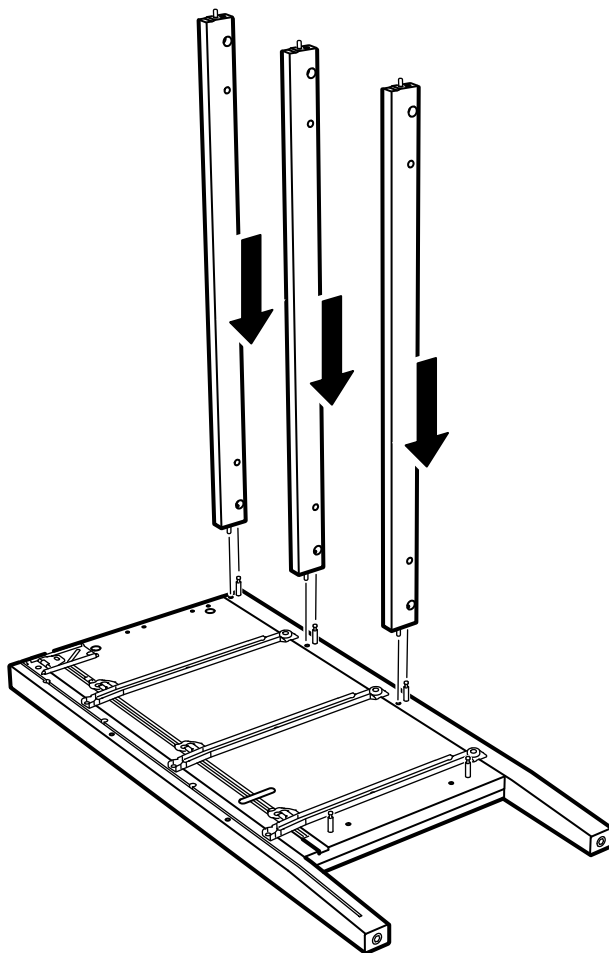 


6

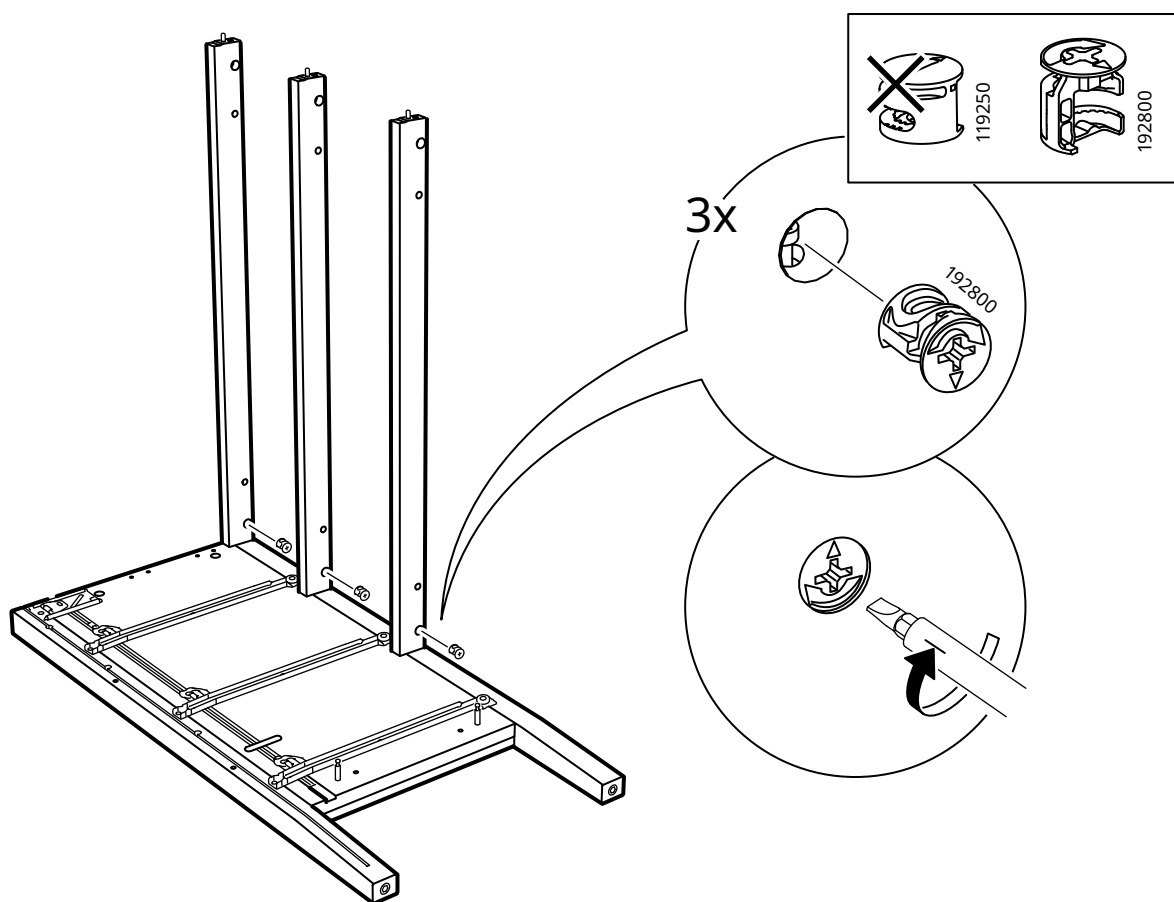 


7

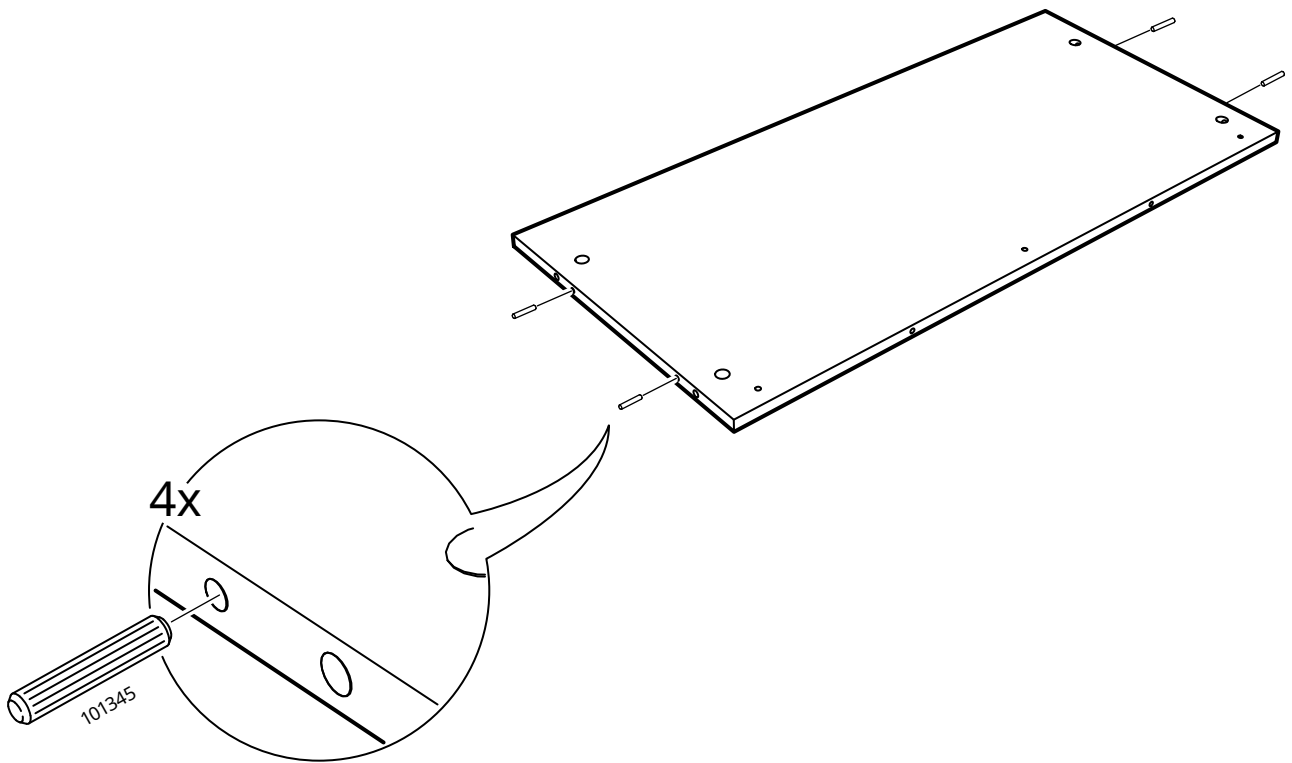 


8

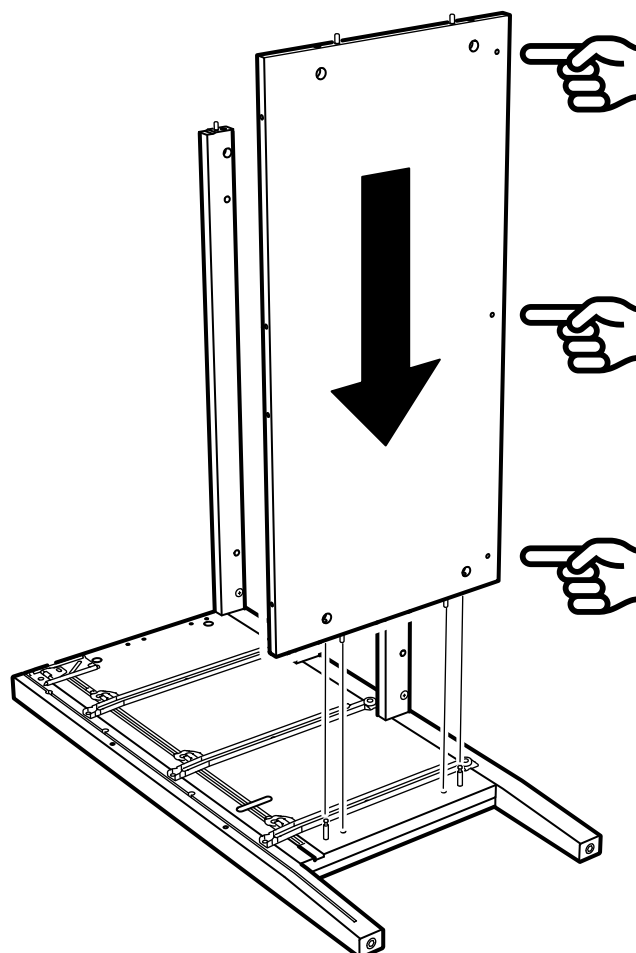 


9

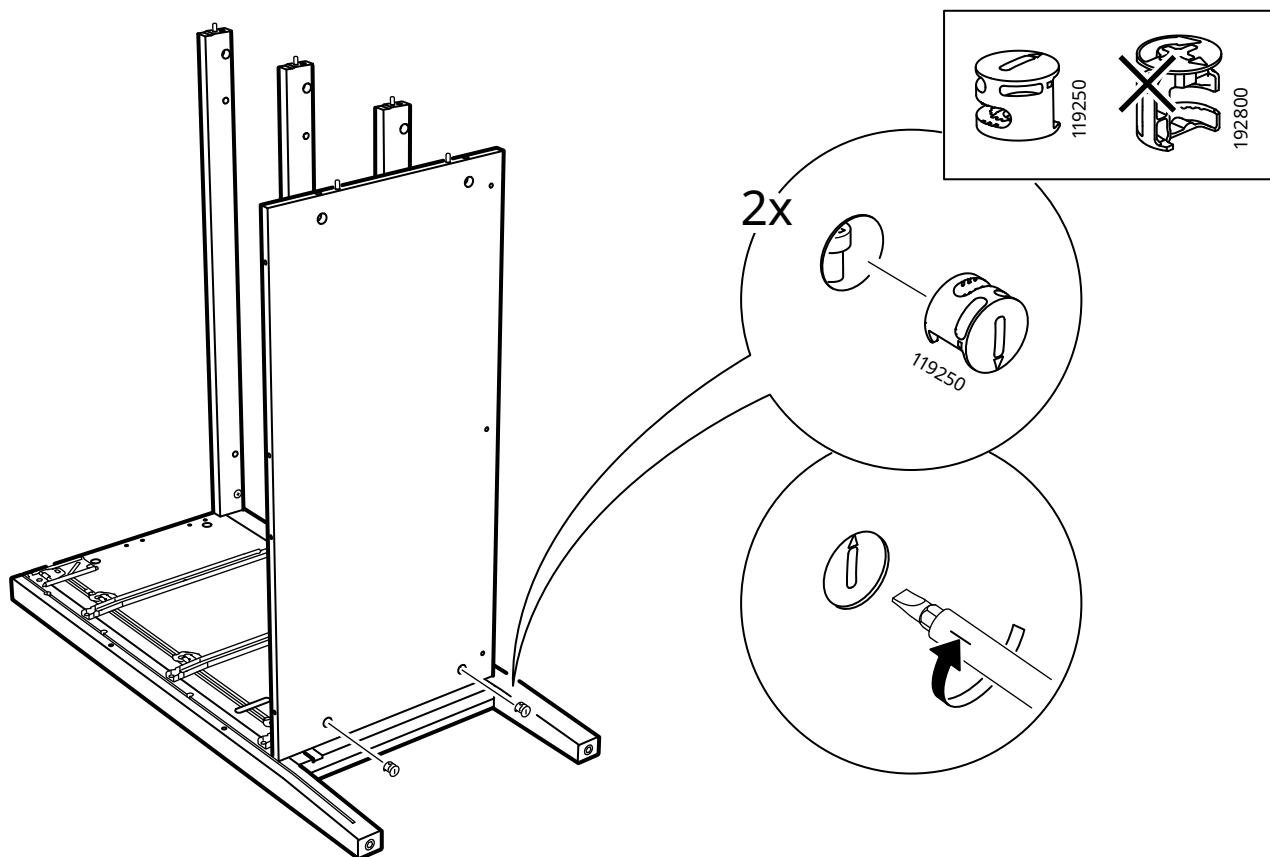 


10

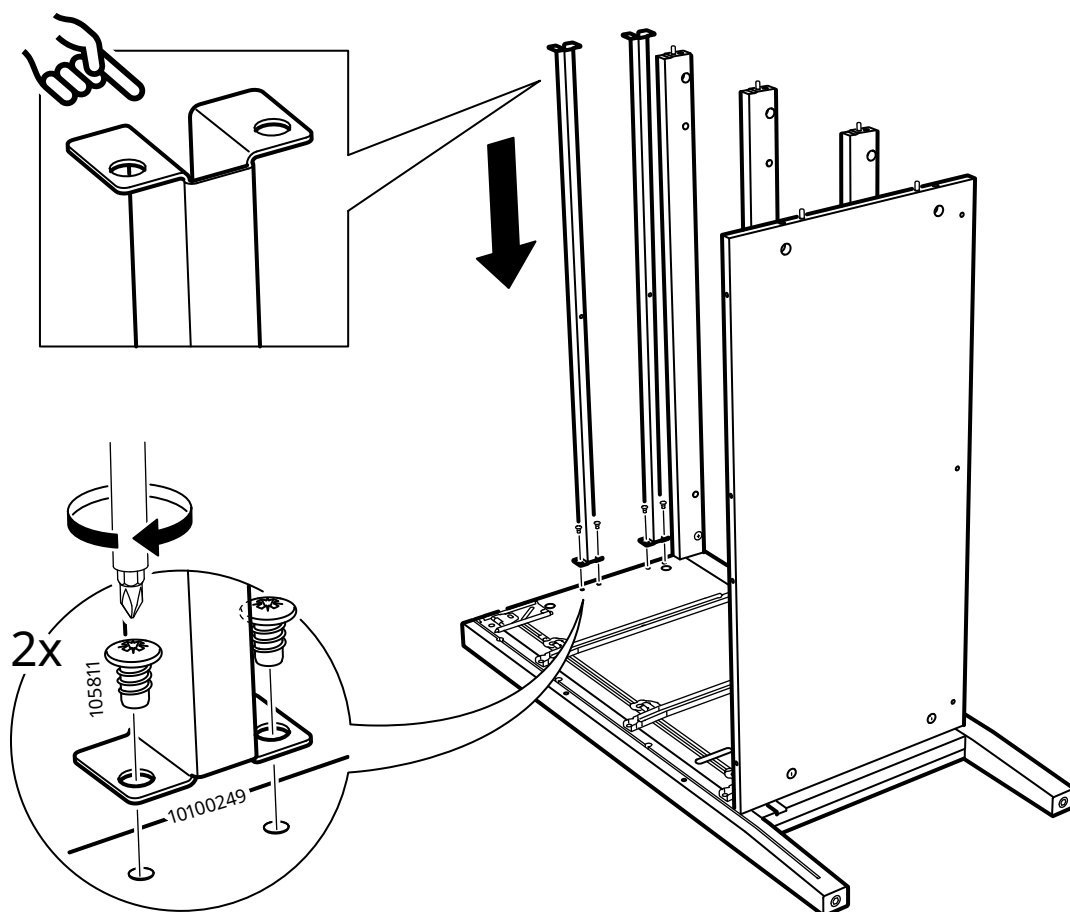 


11

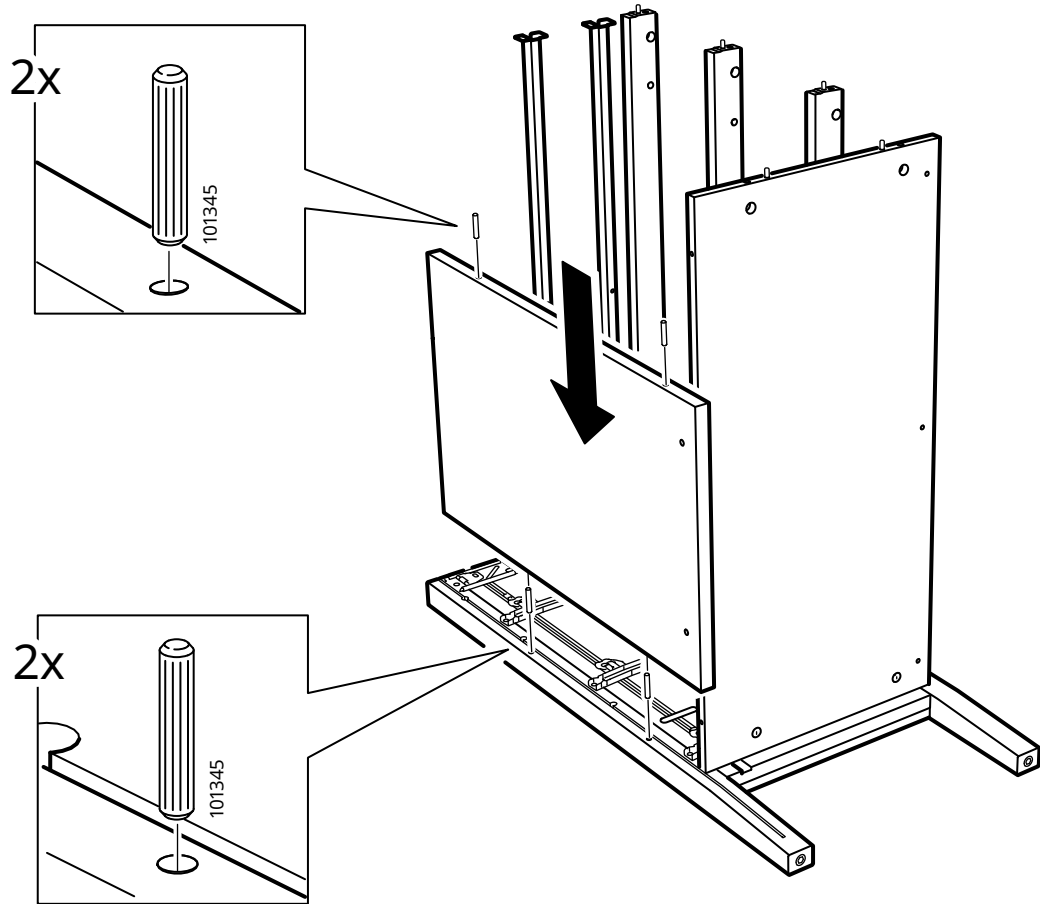 


12

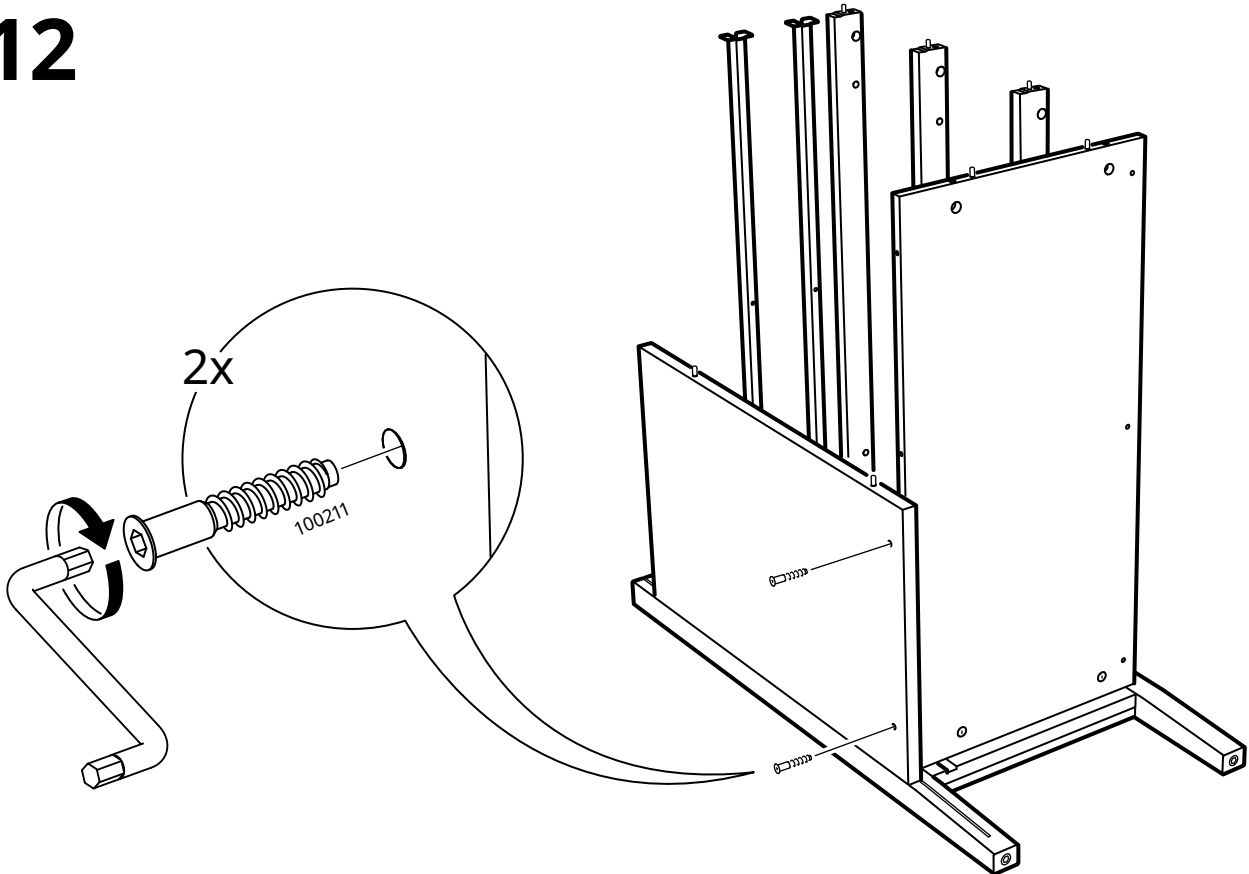 


13

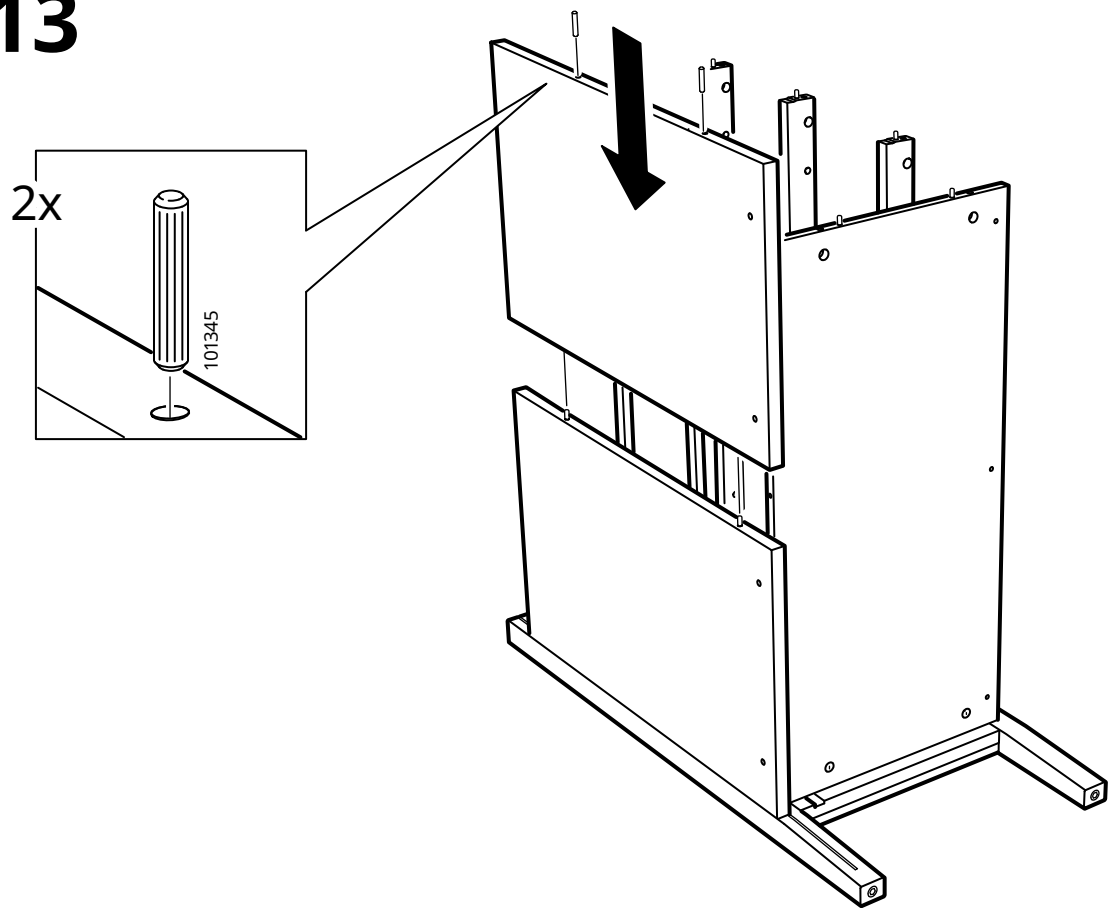 


14

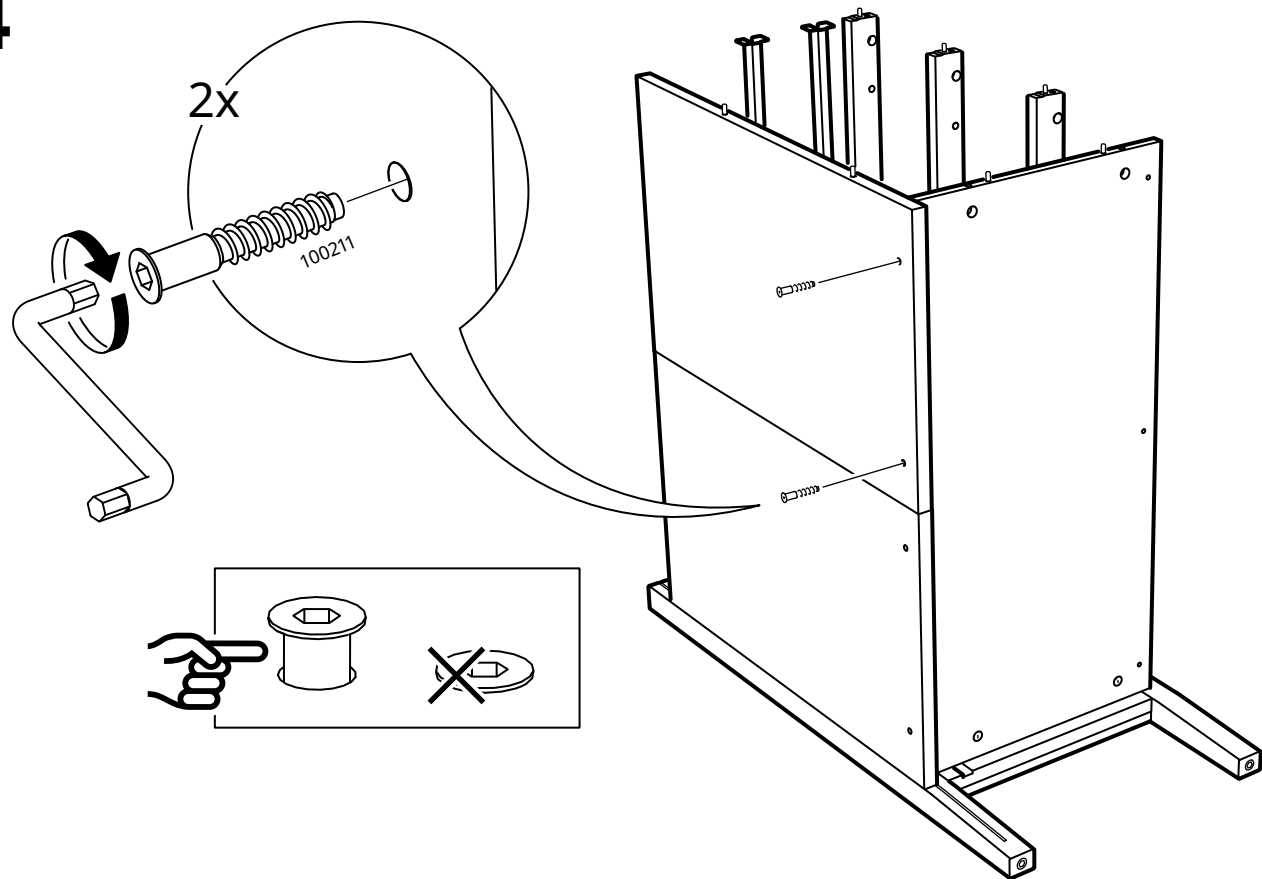 


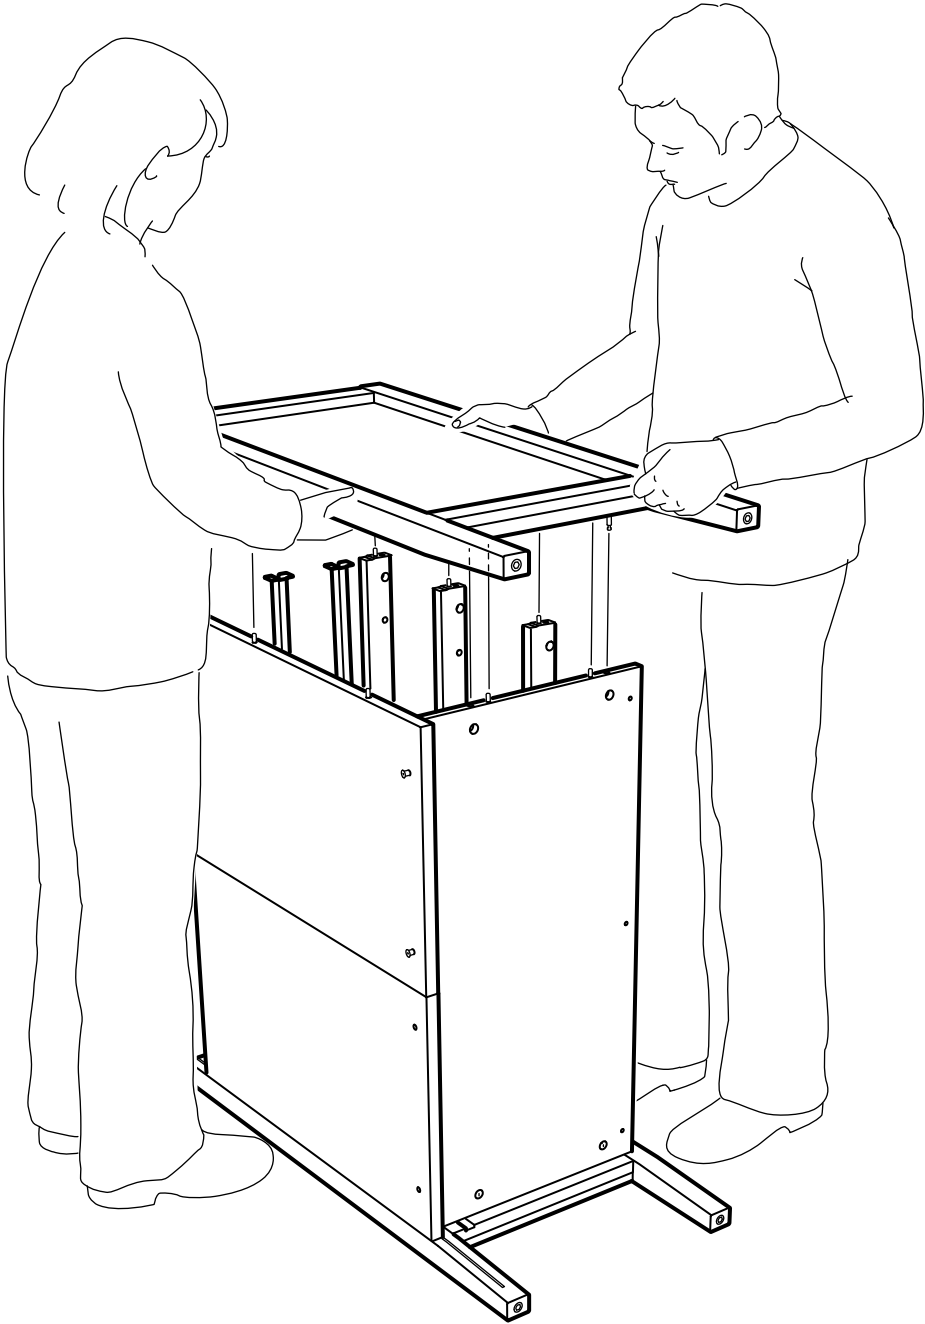 


16

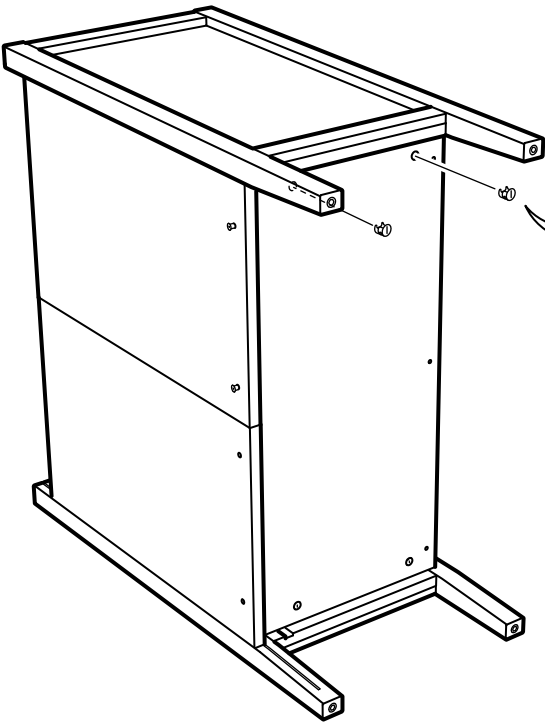 


2x

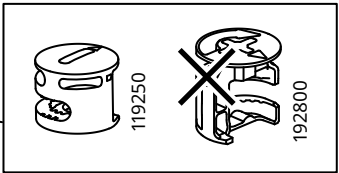 



119250

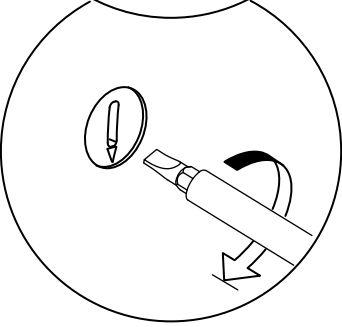 


17

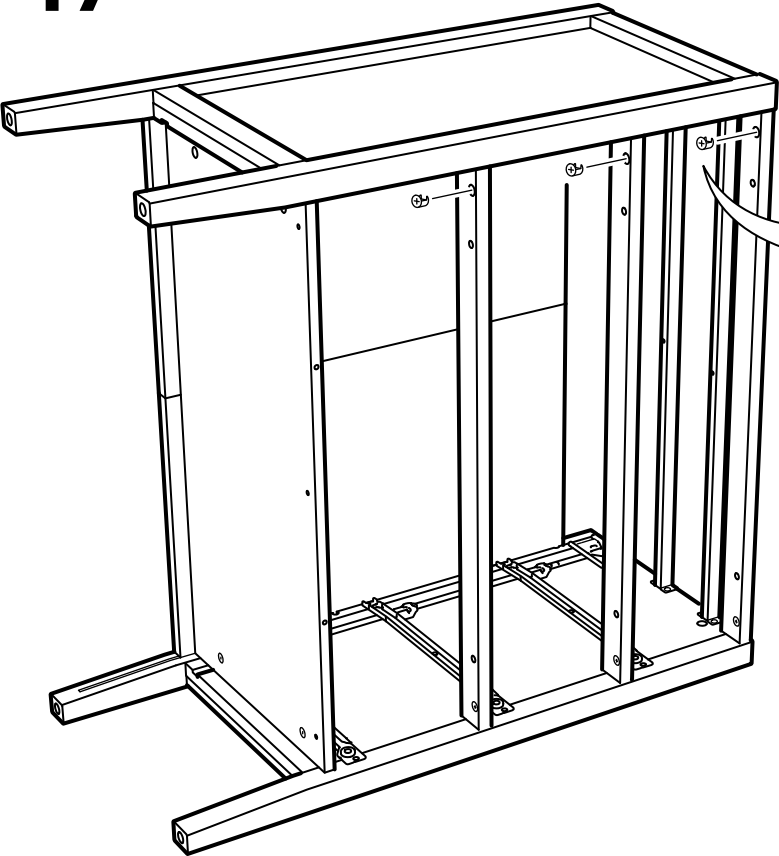 


3x

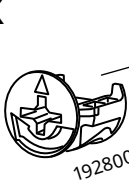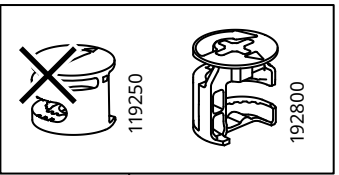  


192800

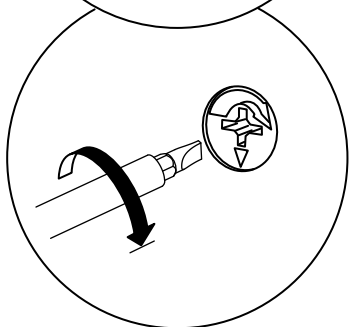 


18

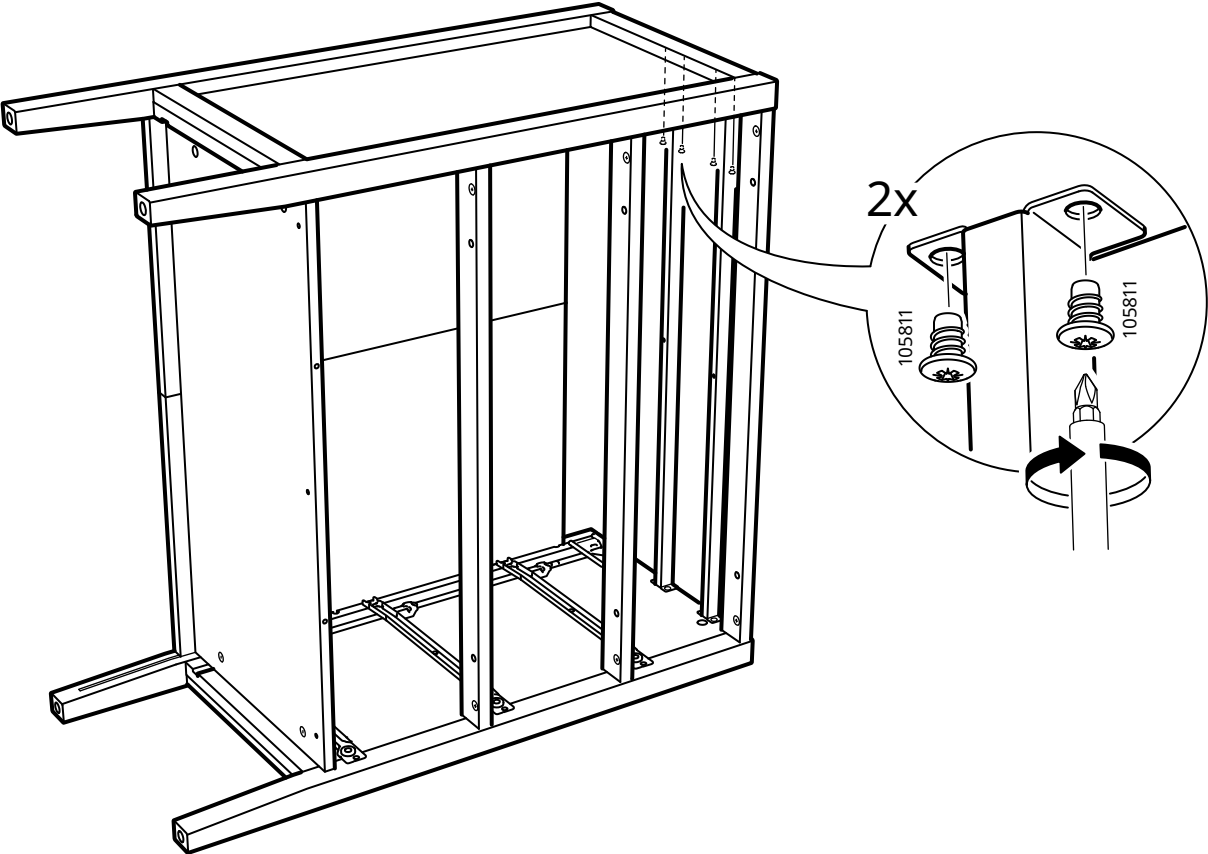 


19

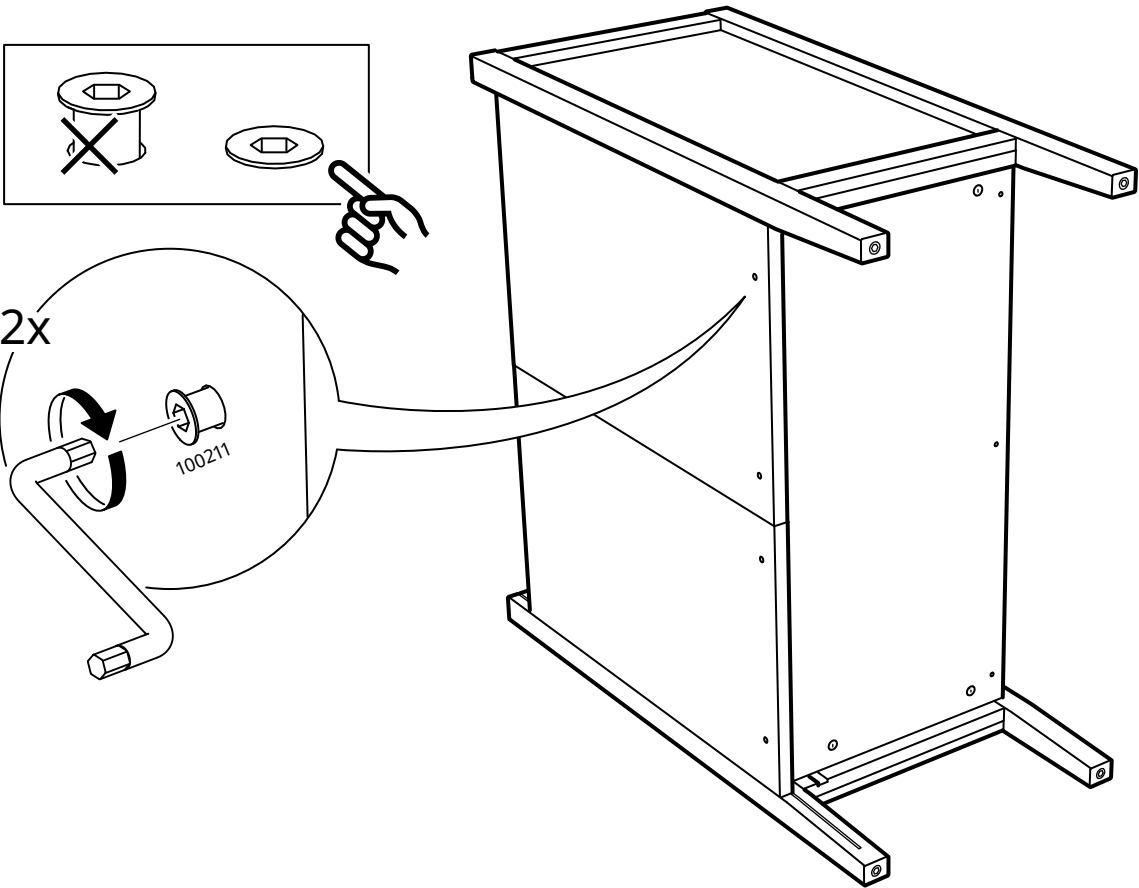 


20

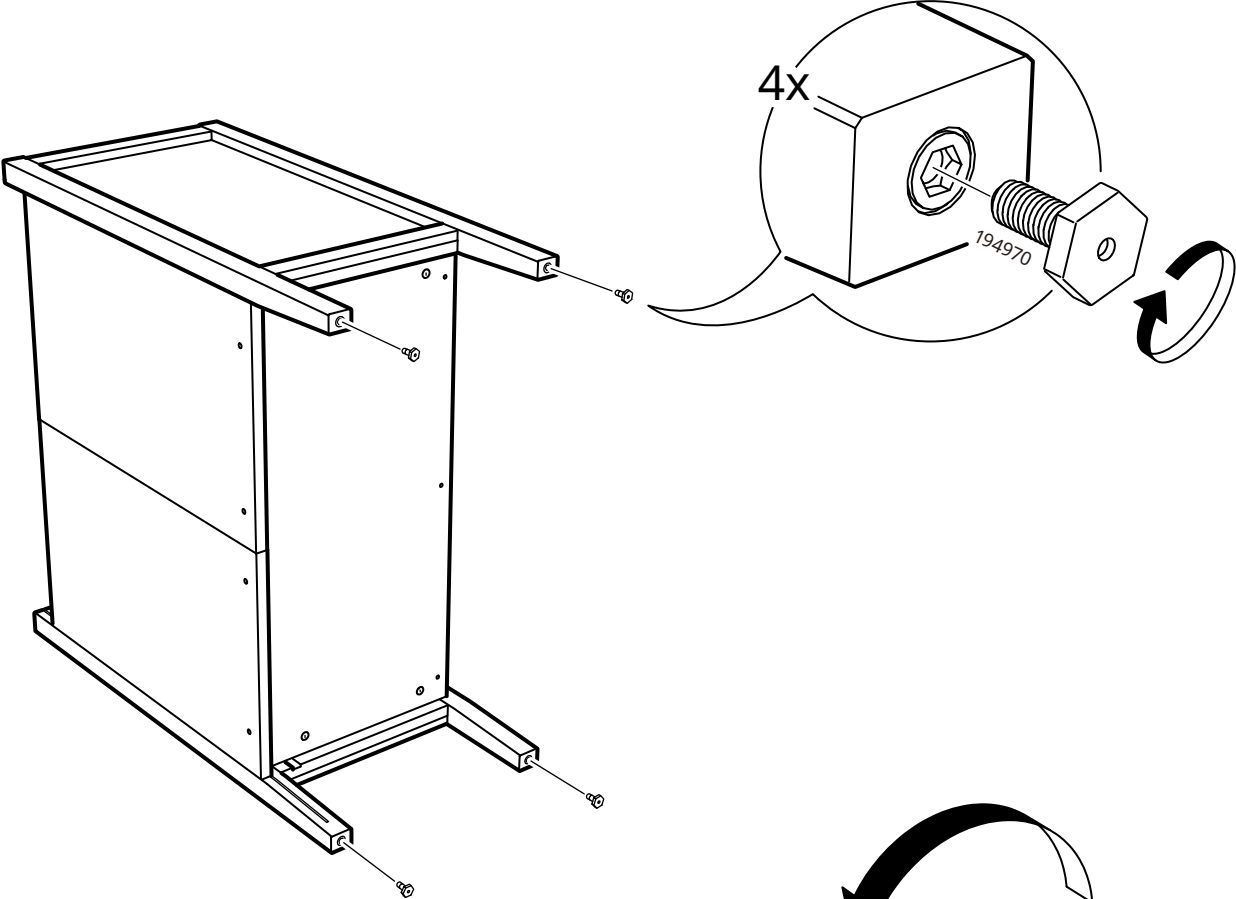 


21

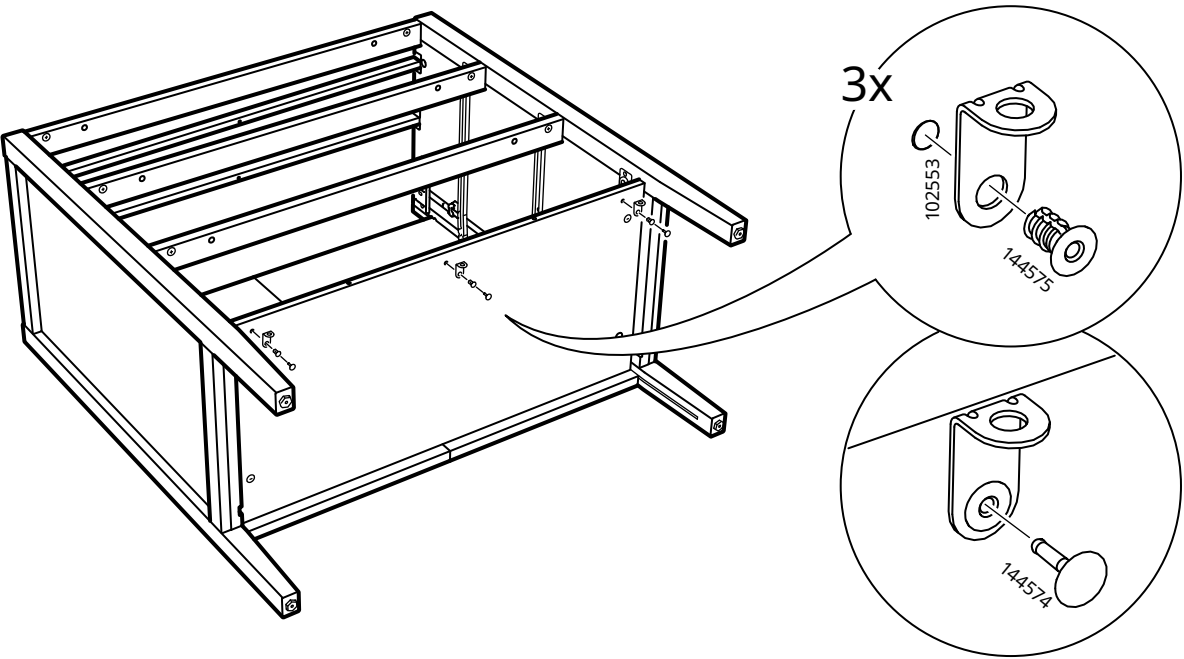 


22

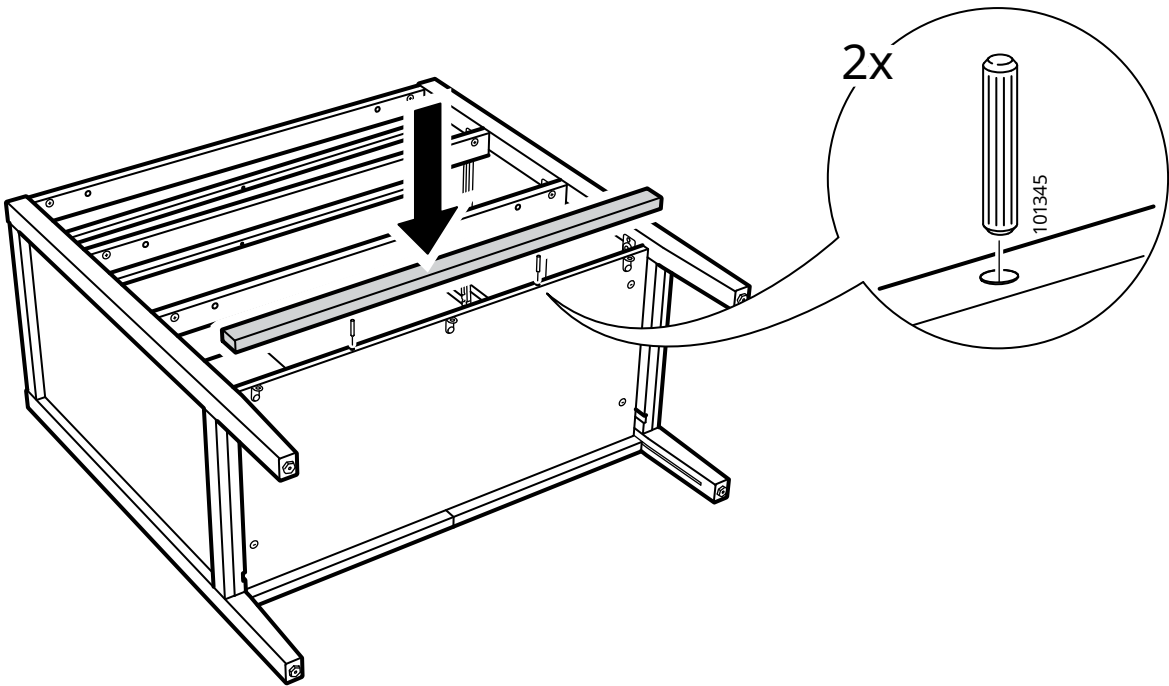 


23

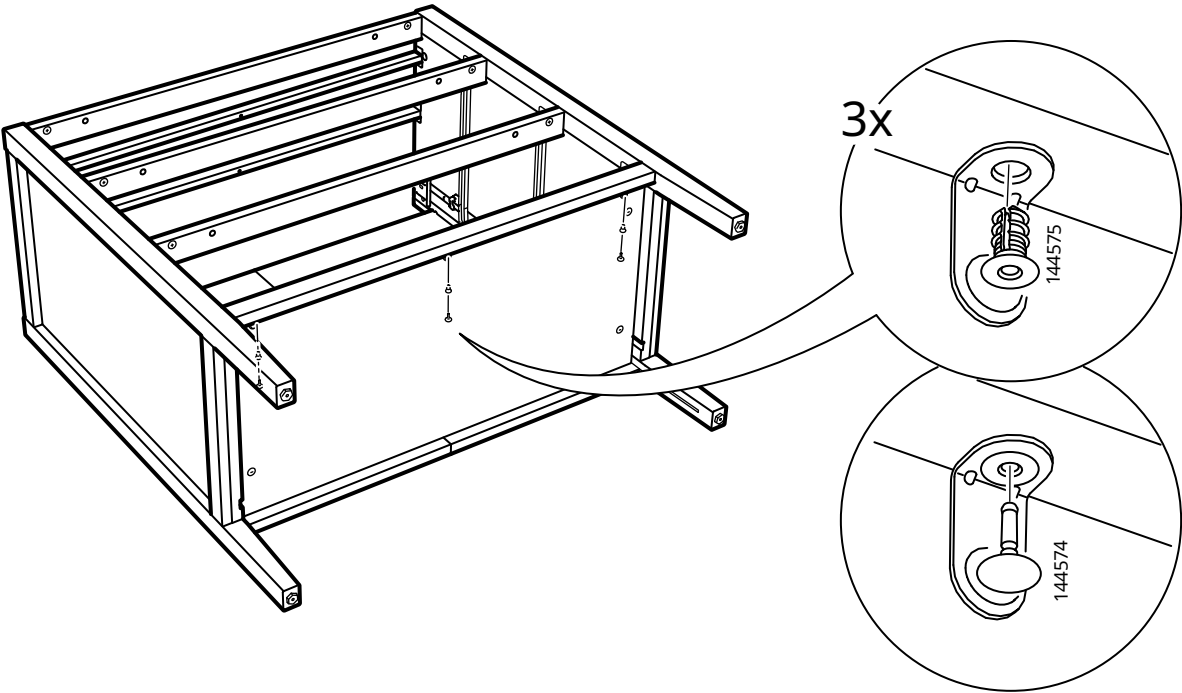 


24

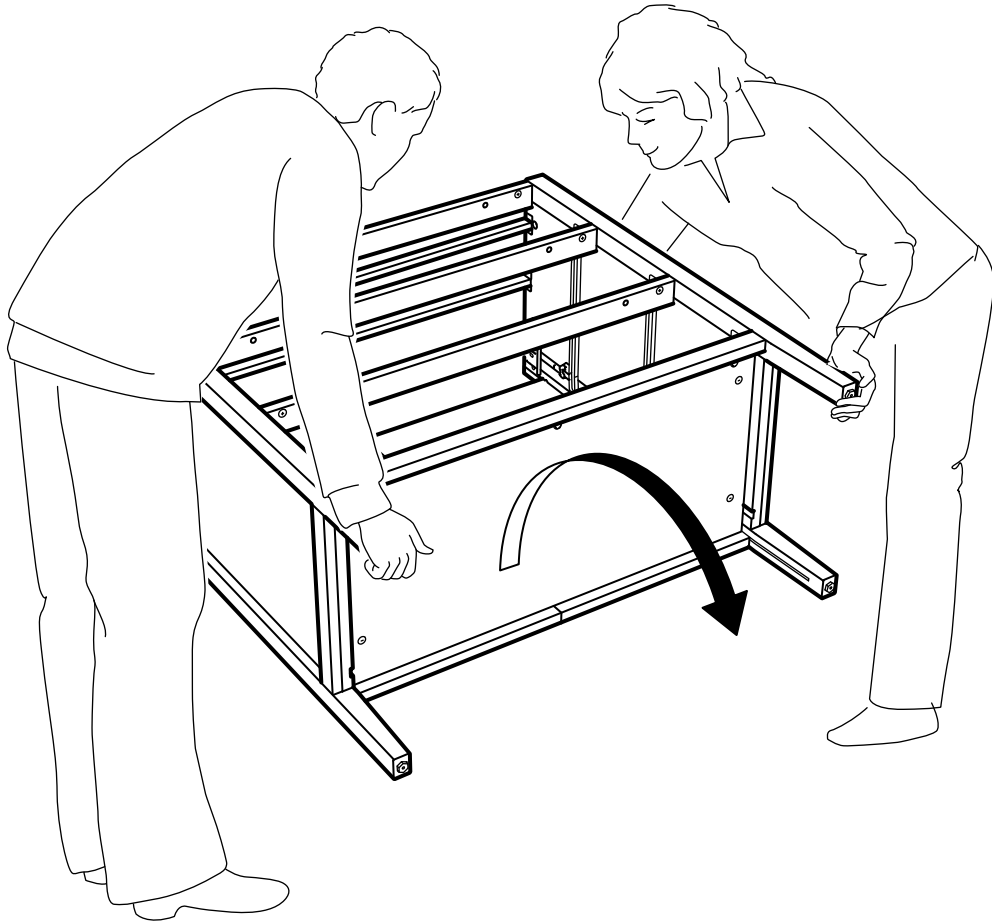 


25

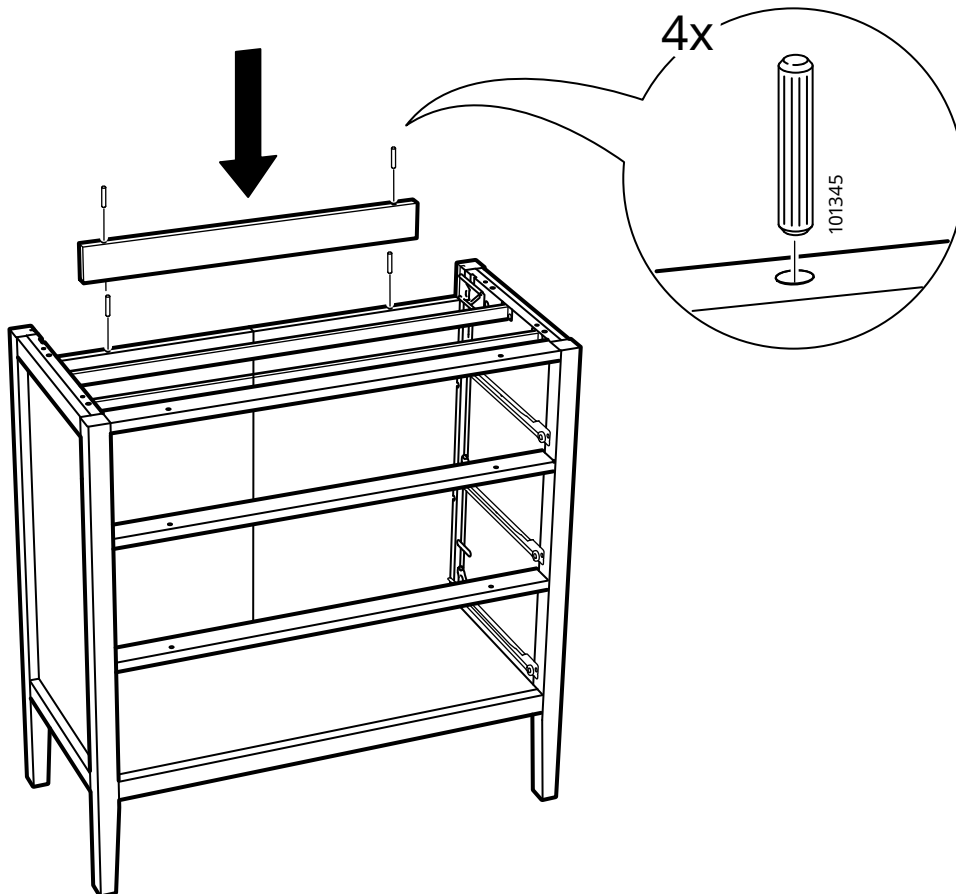 


26

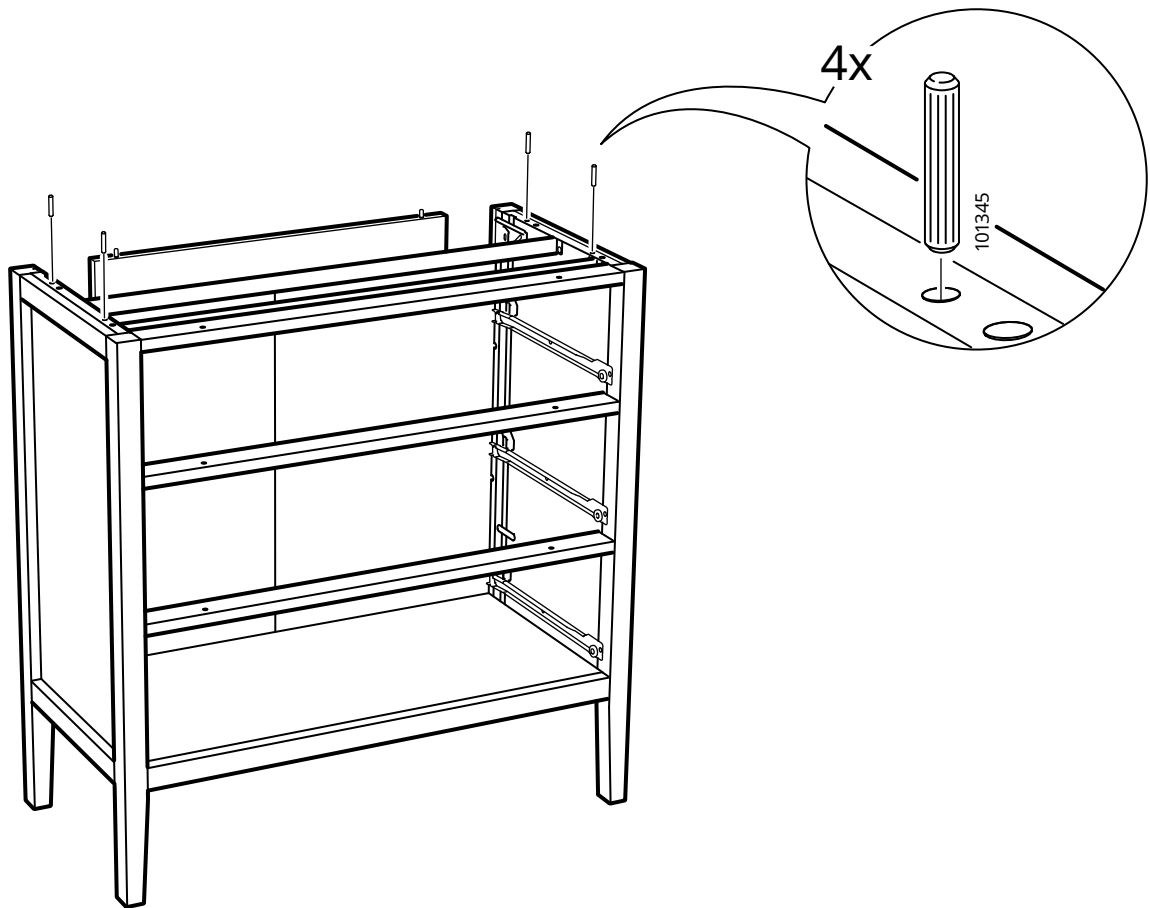 


27

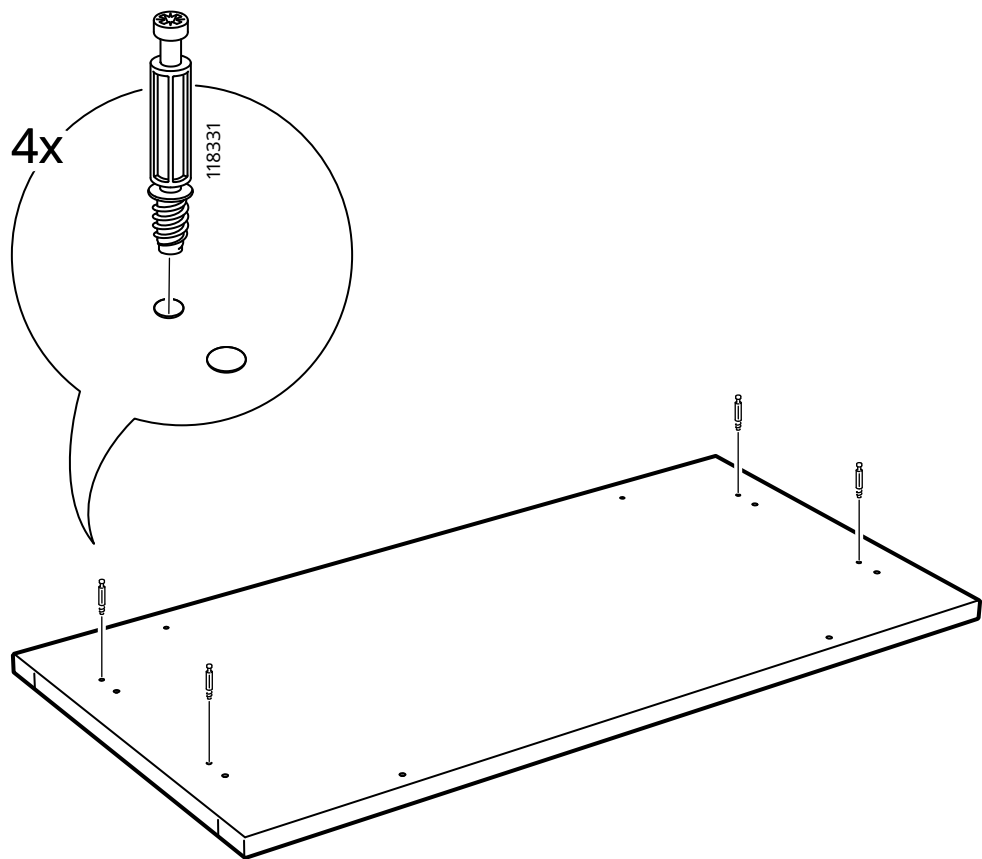 


28

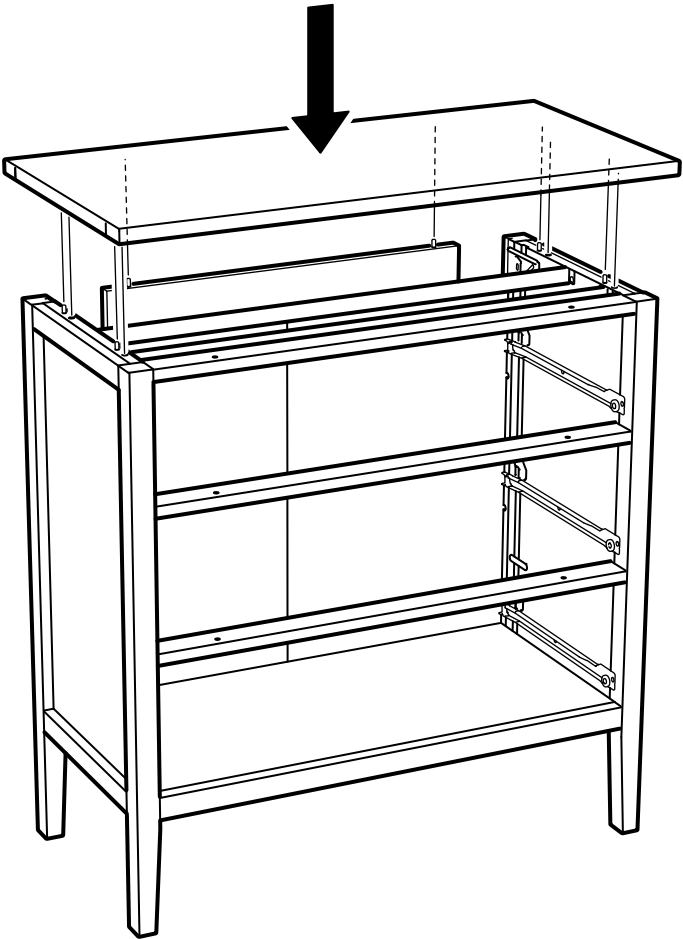 


29

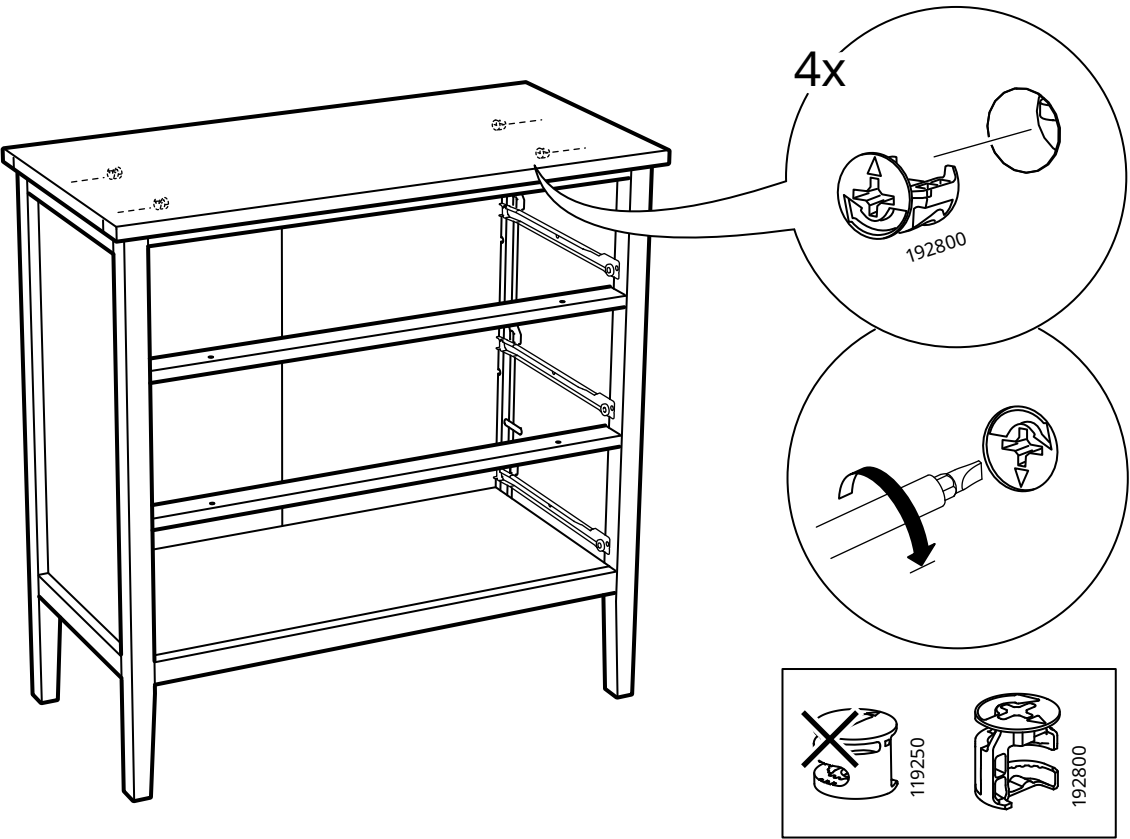 

30

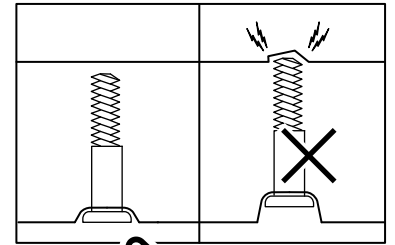 


2x



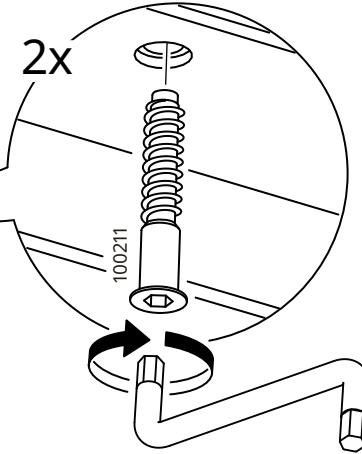 


31







    4x




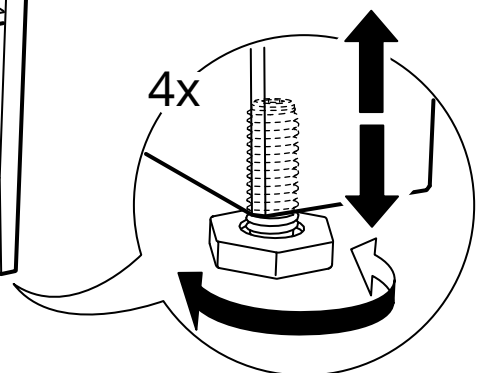


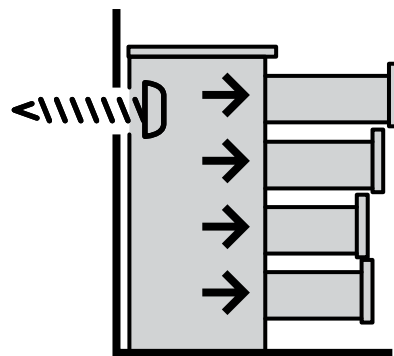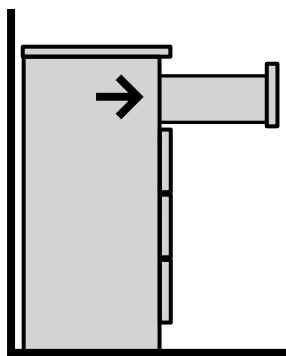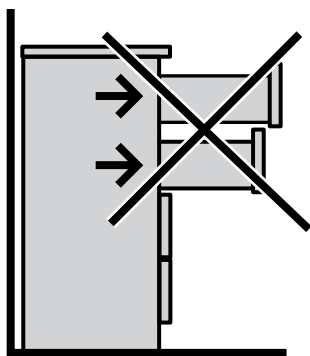


32

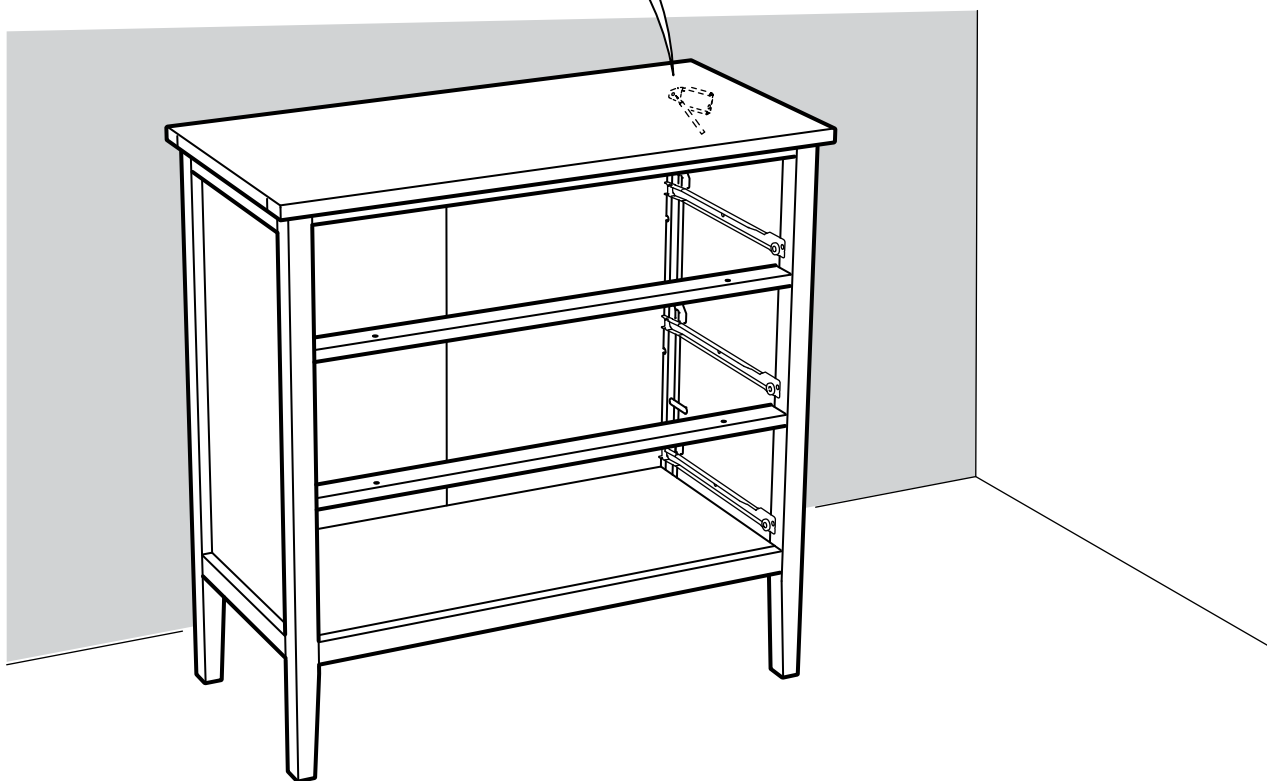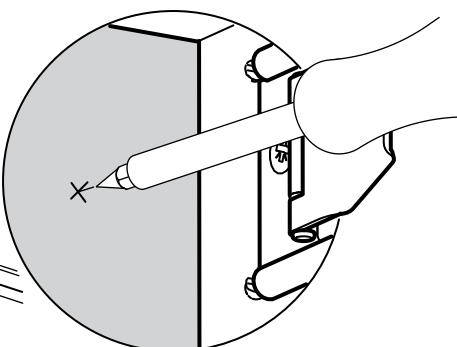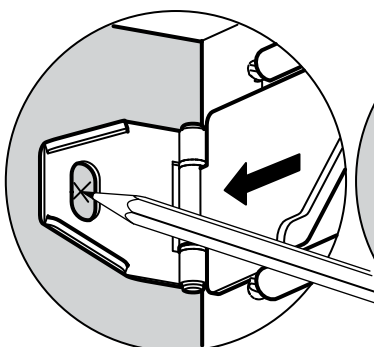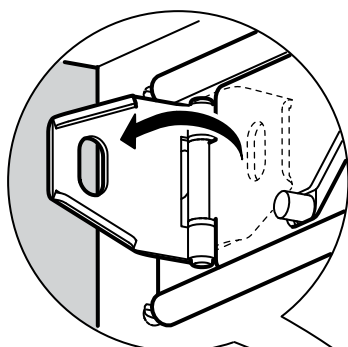    

33

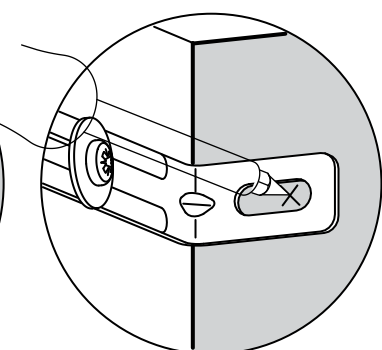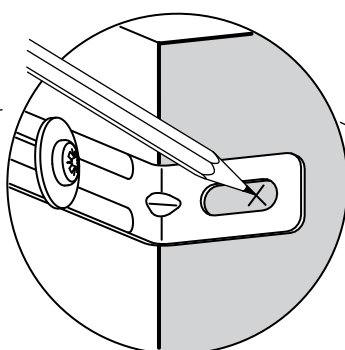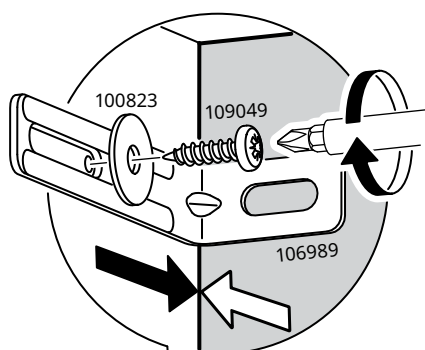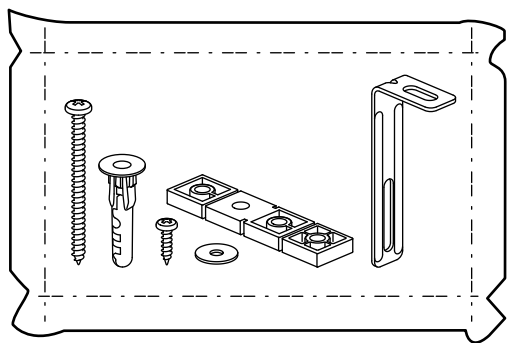    

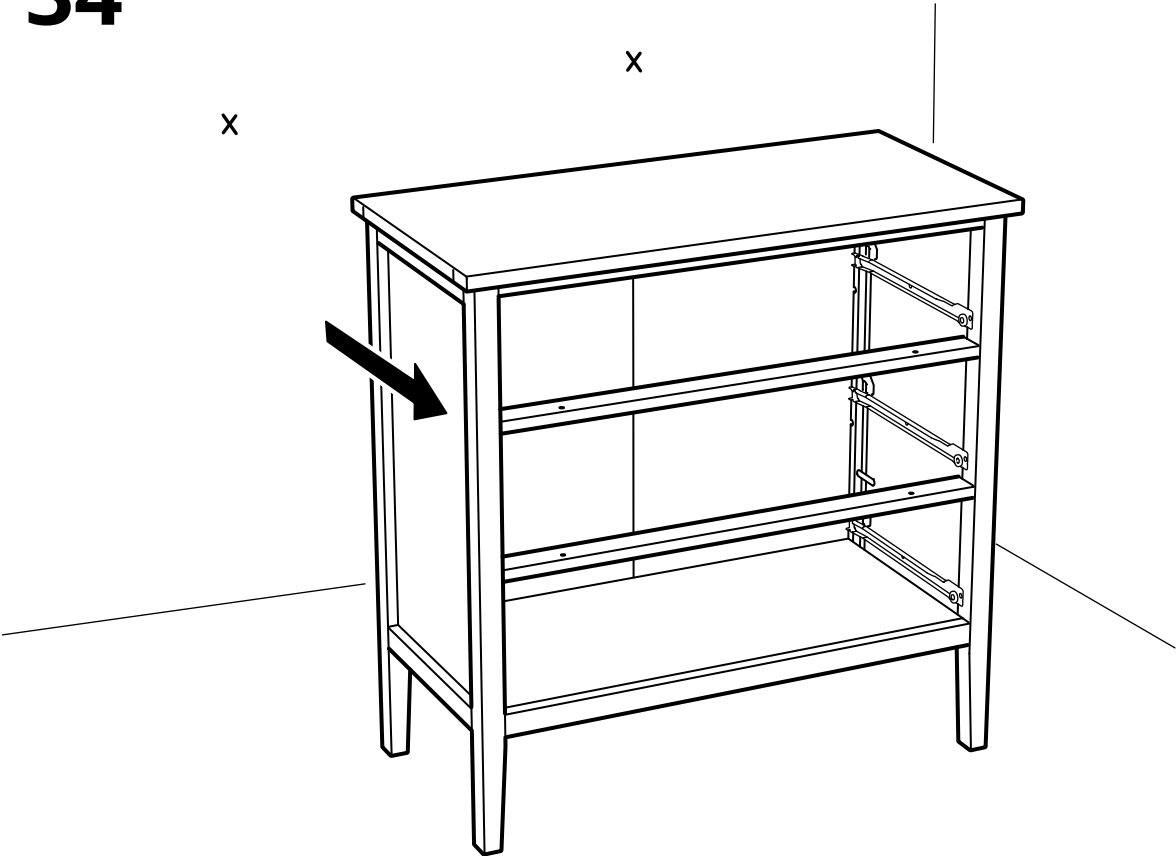 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

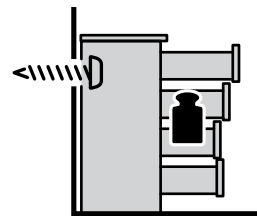

35

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

2

70 mm (2 3/4")

3

B

Ø 8 mm (5/16")

1

2

≈ 30 mm (≈ 1 1/4")

3

 
 
C

Ø 3 mm (1/8")


1


2


≈ 30 mm (≈ 1 1/4")

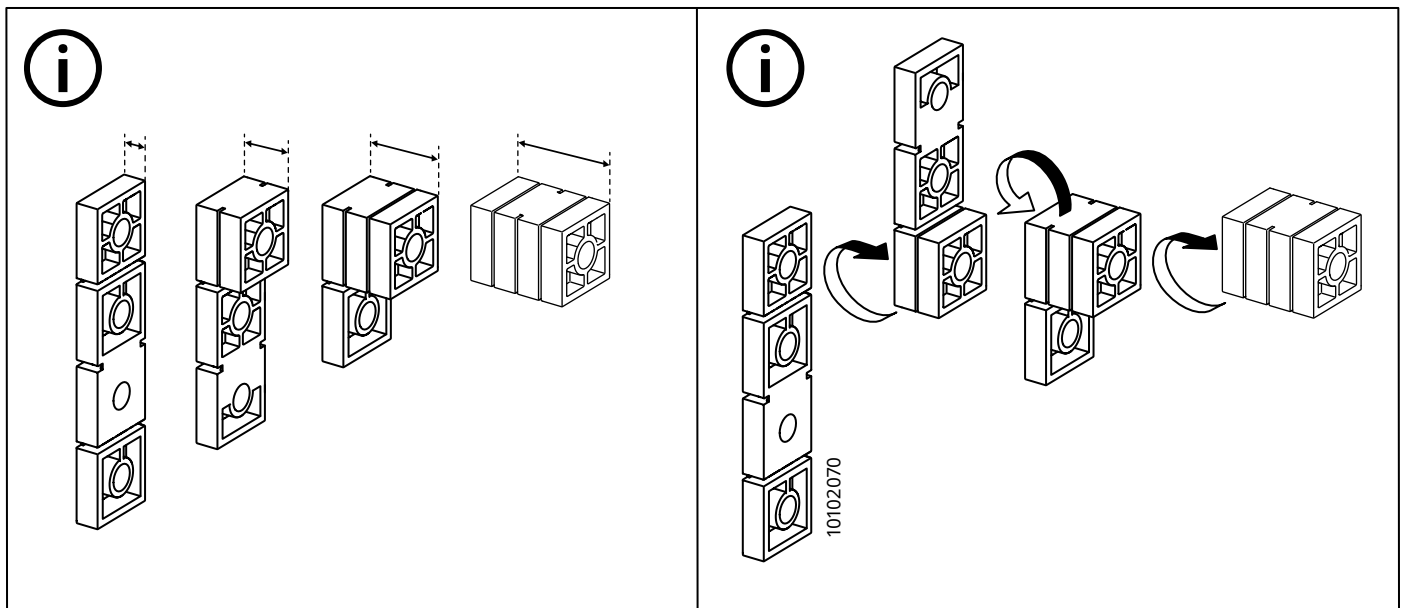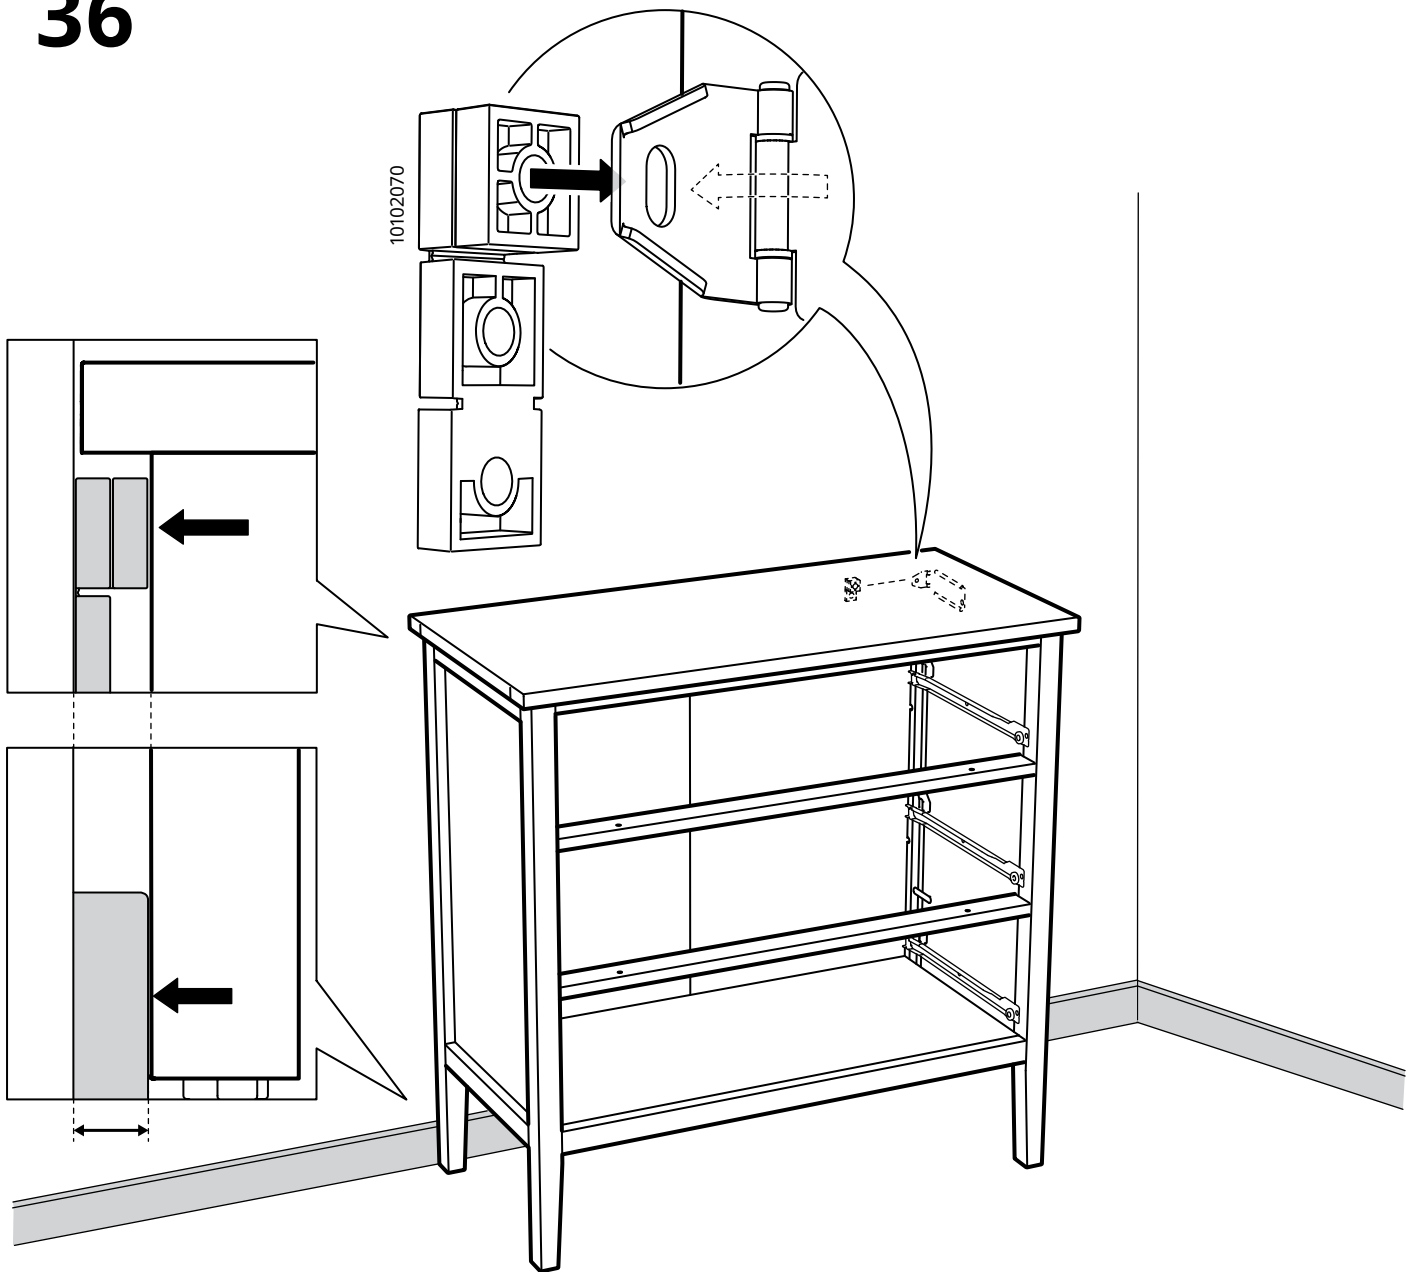


37

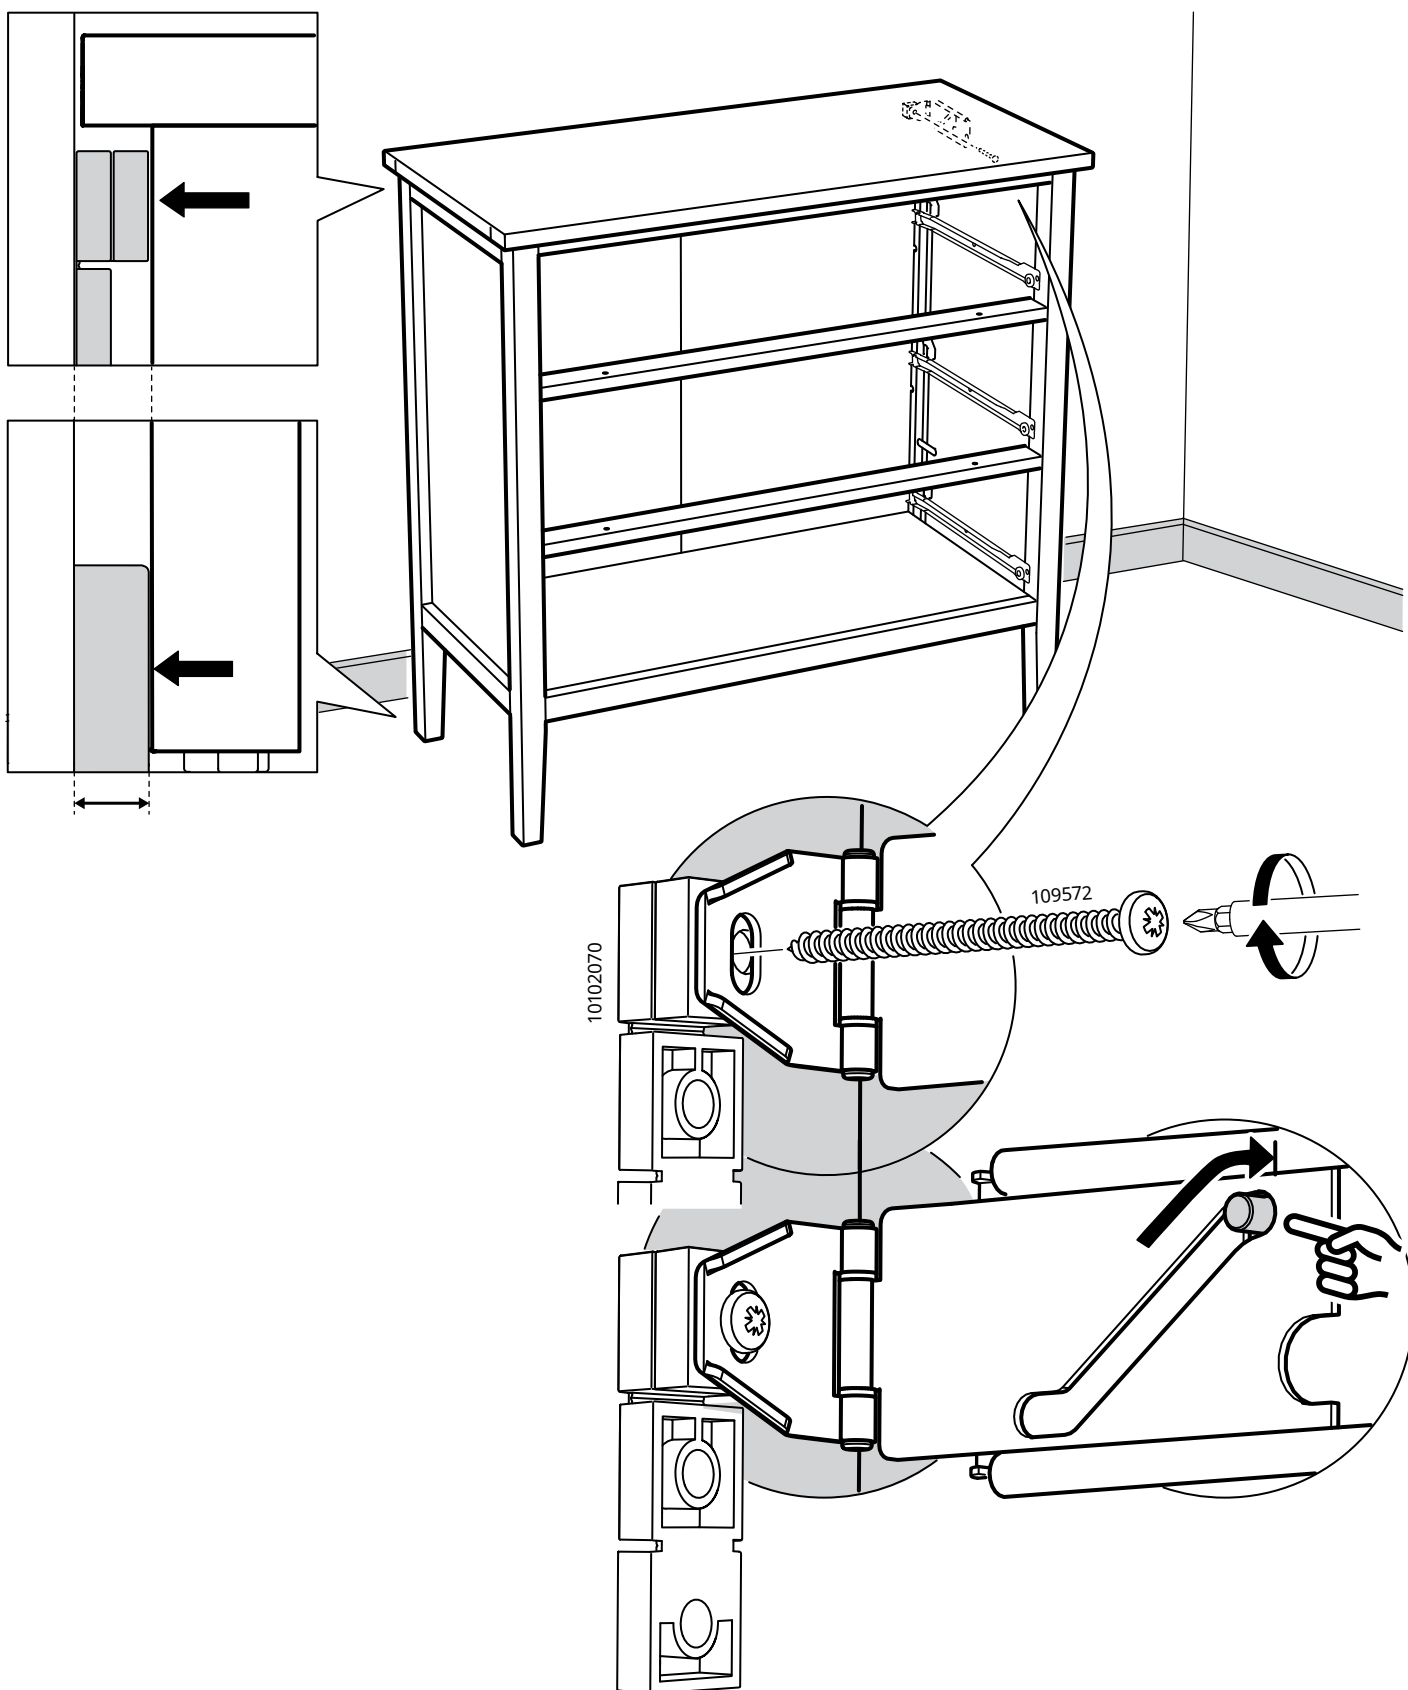 

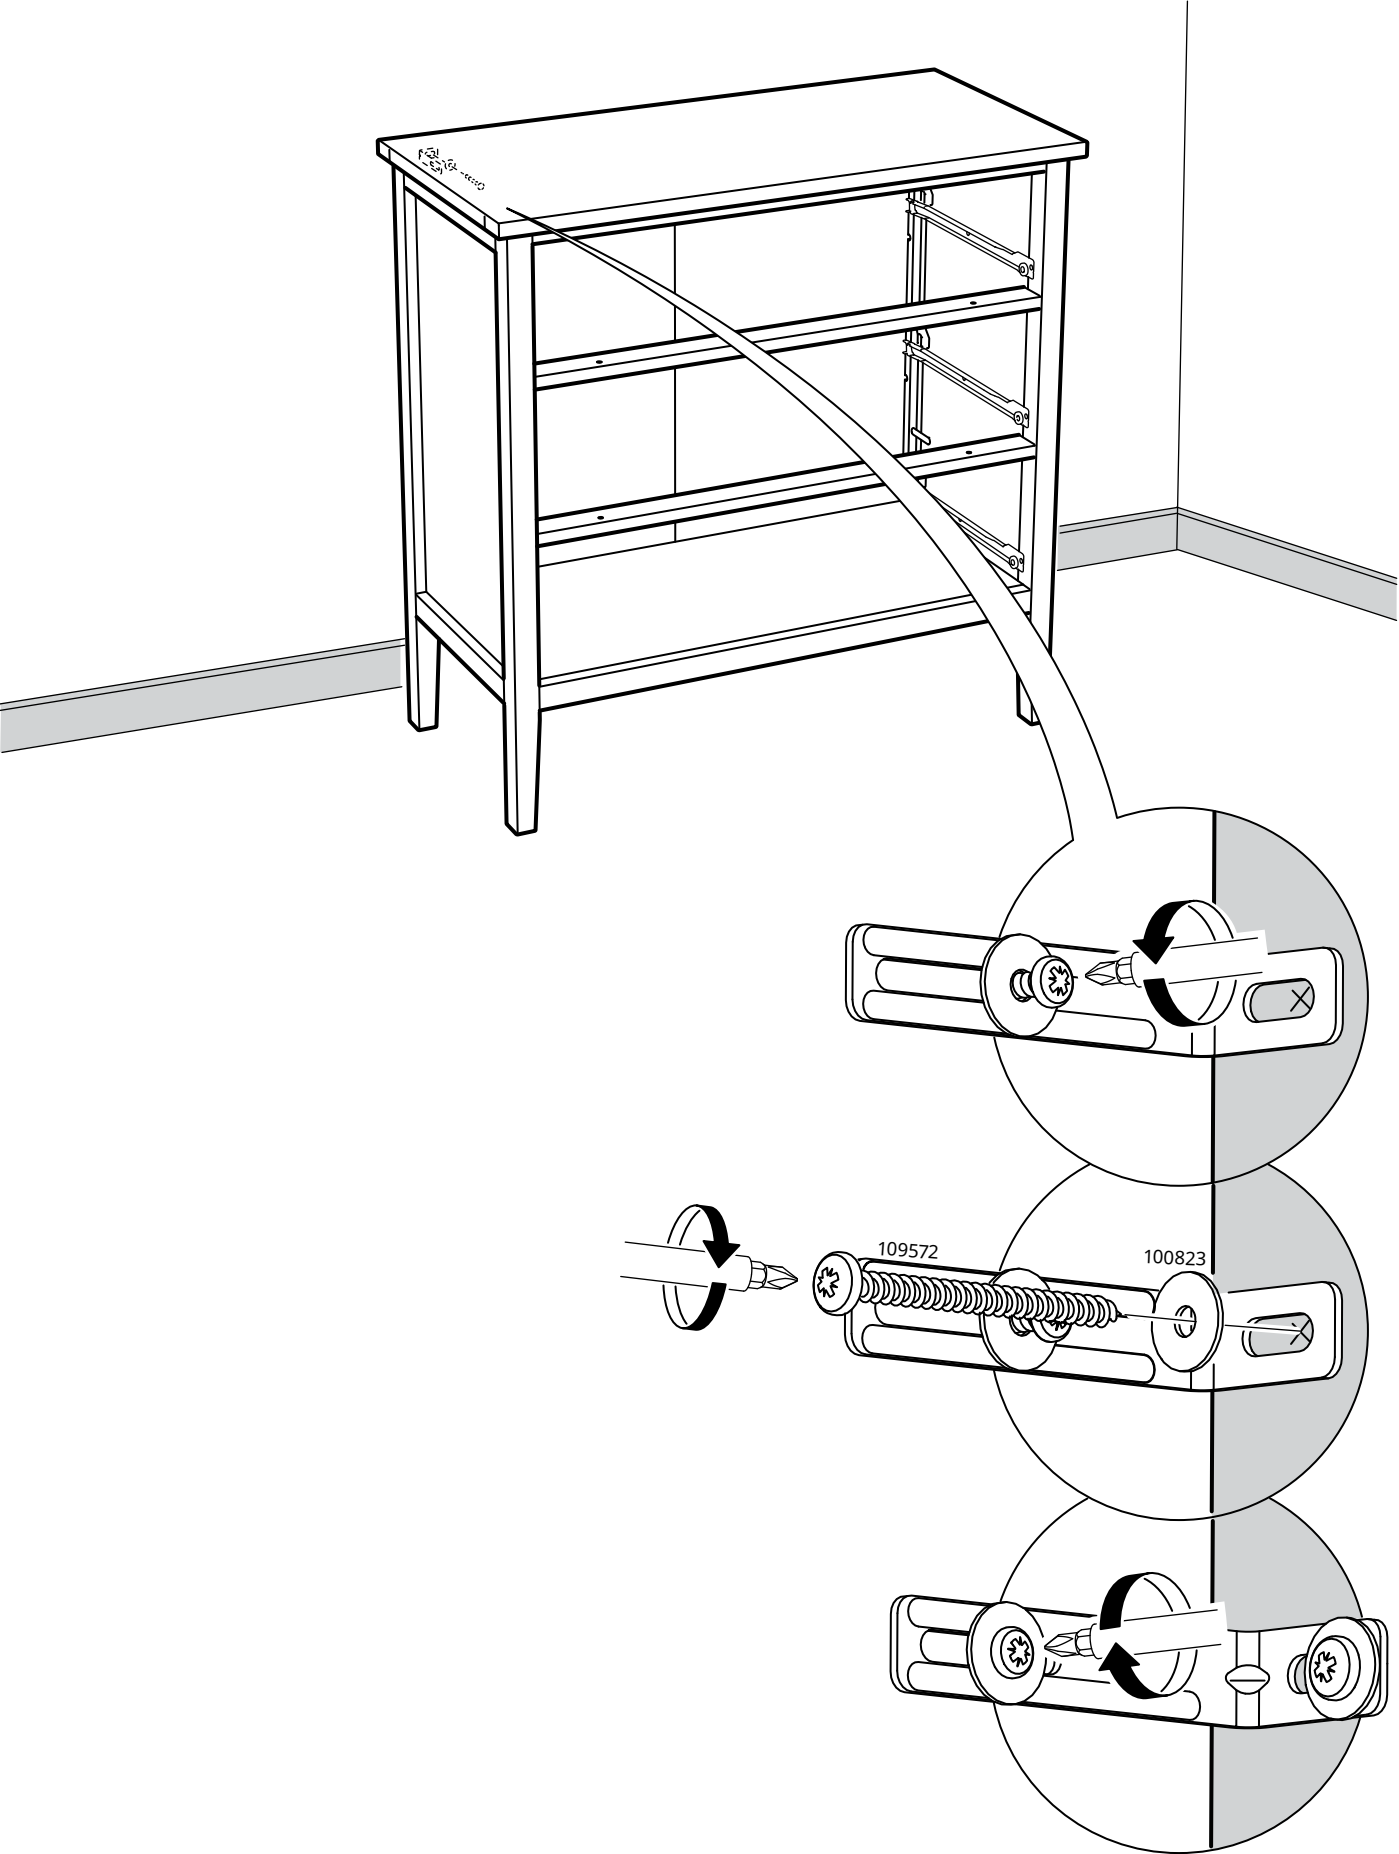 



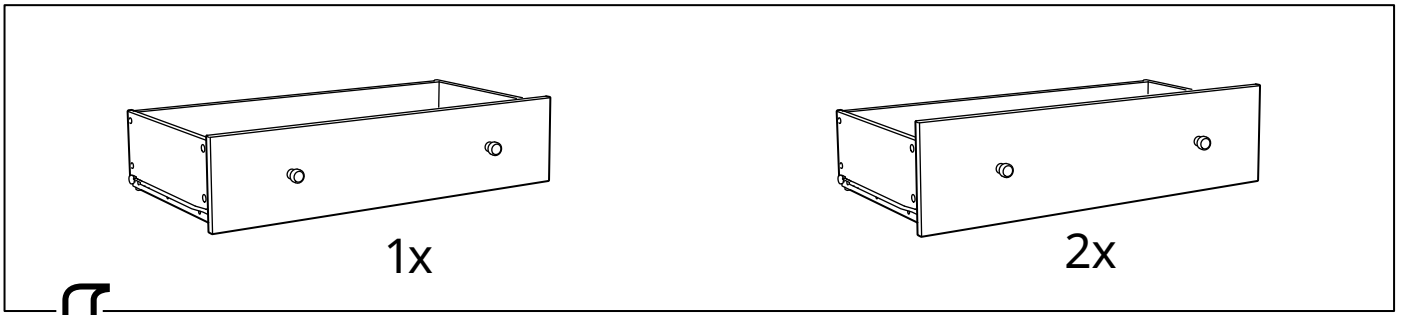 


39


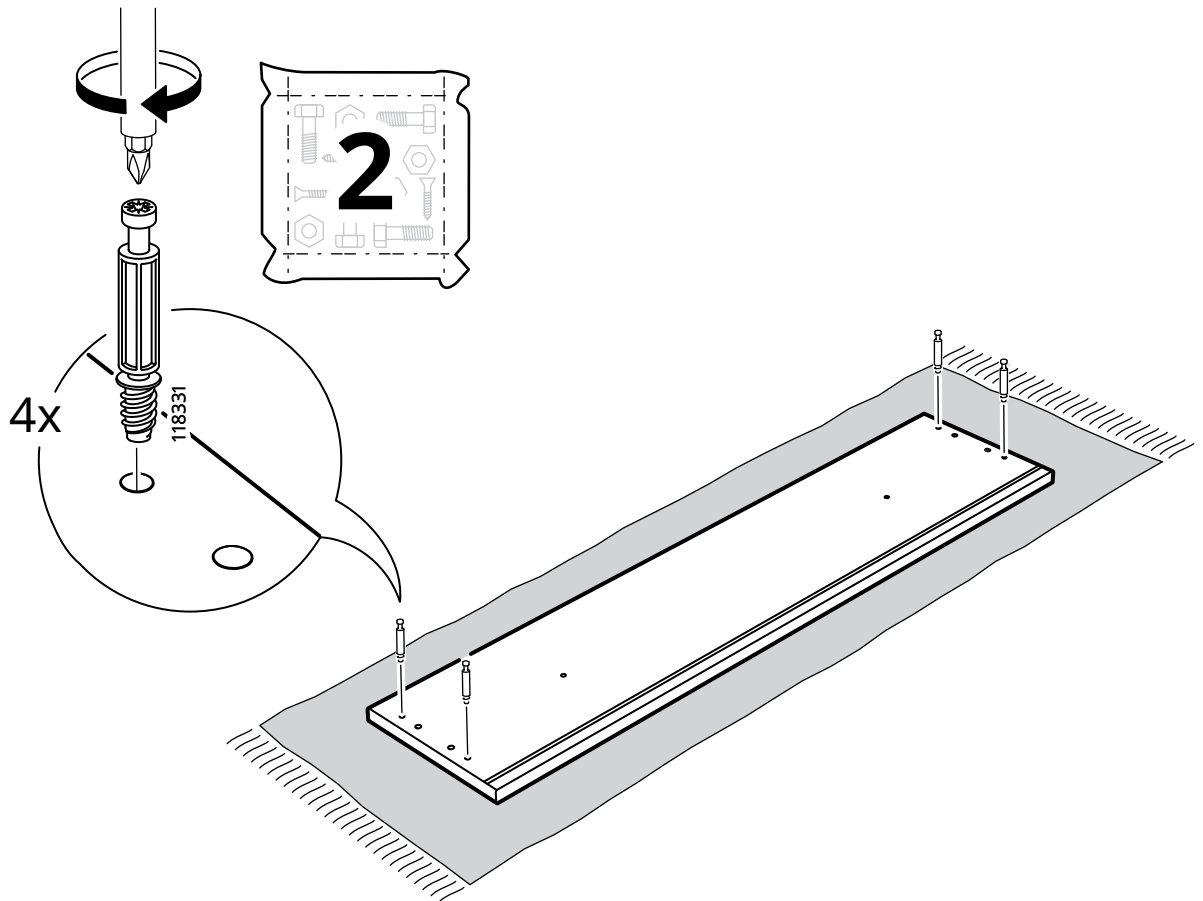 



40

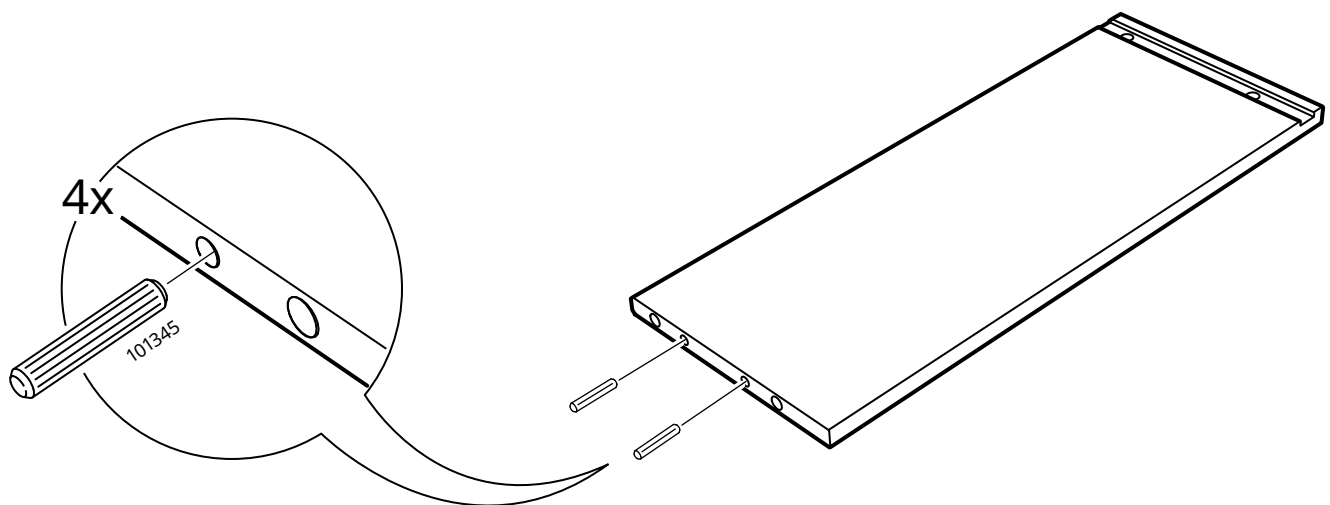 

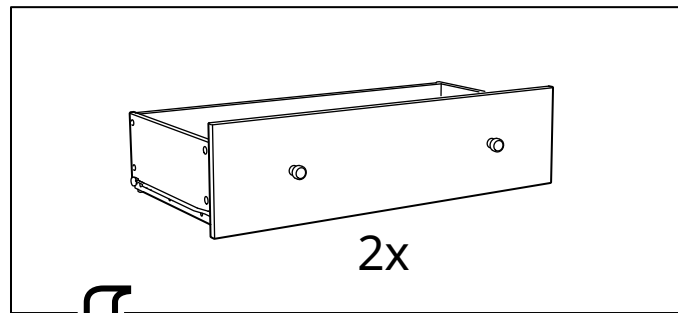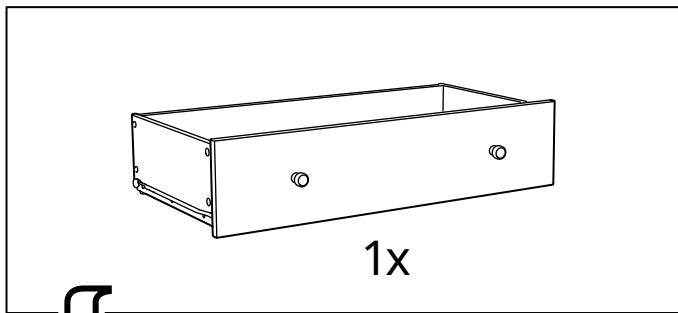  


41

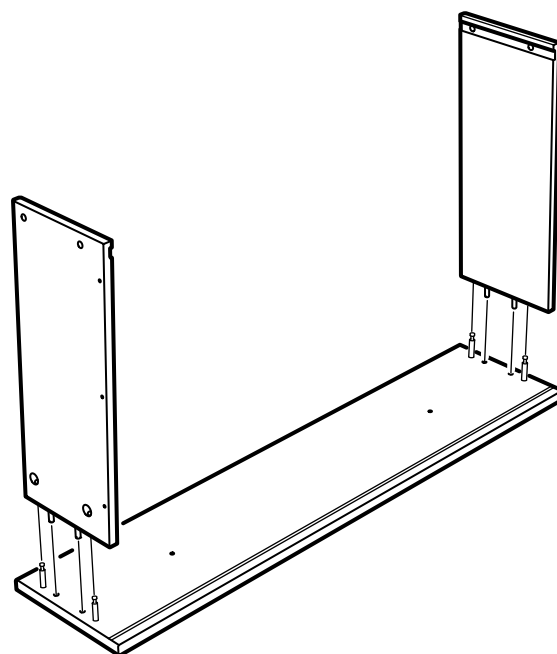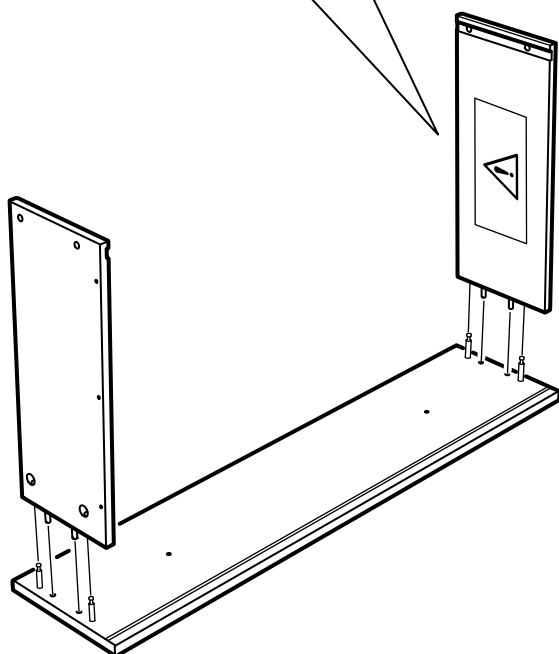  


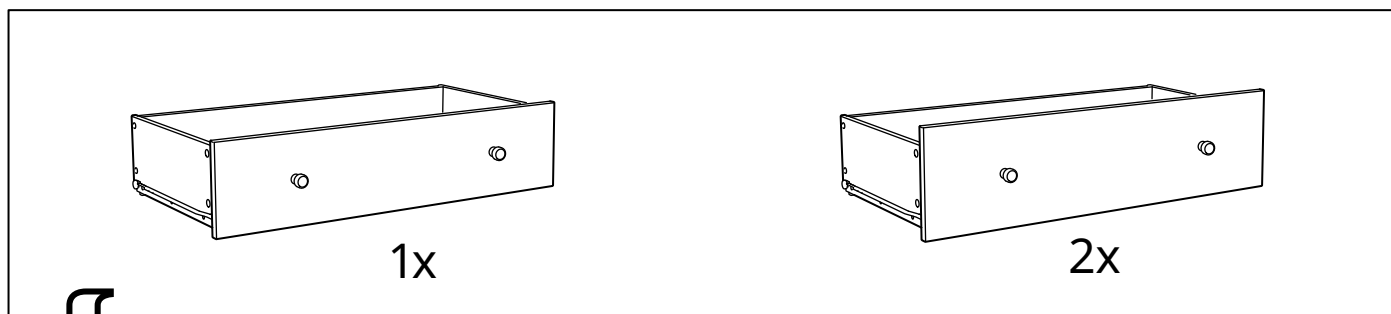 


42

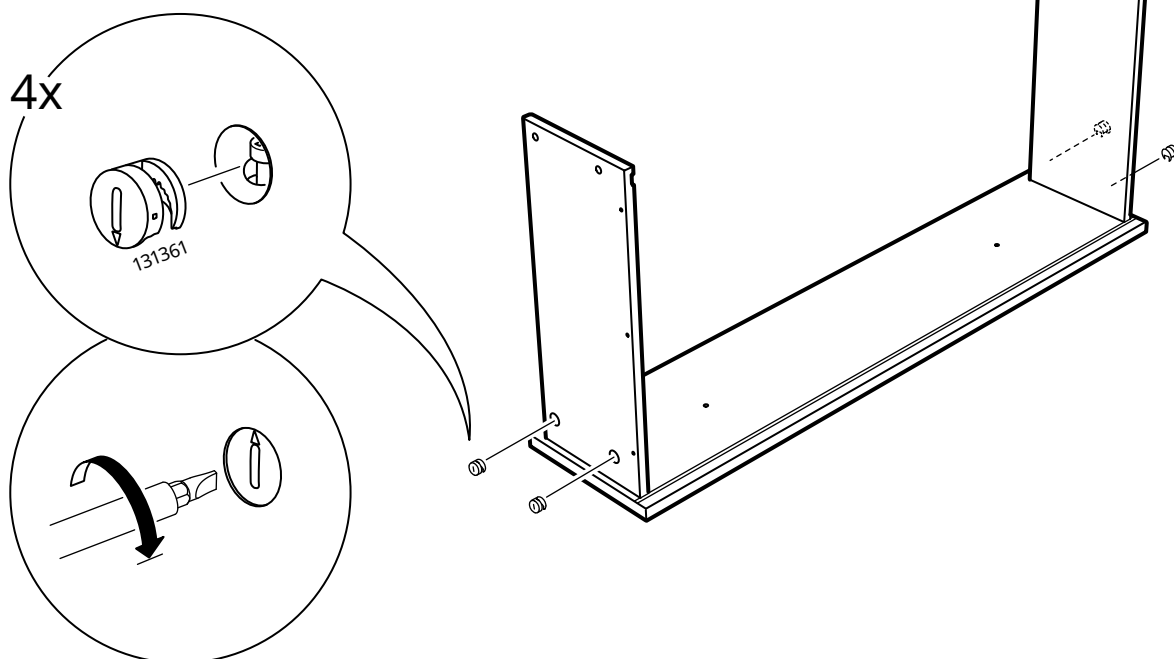 


43

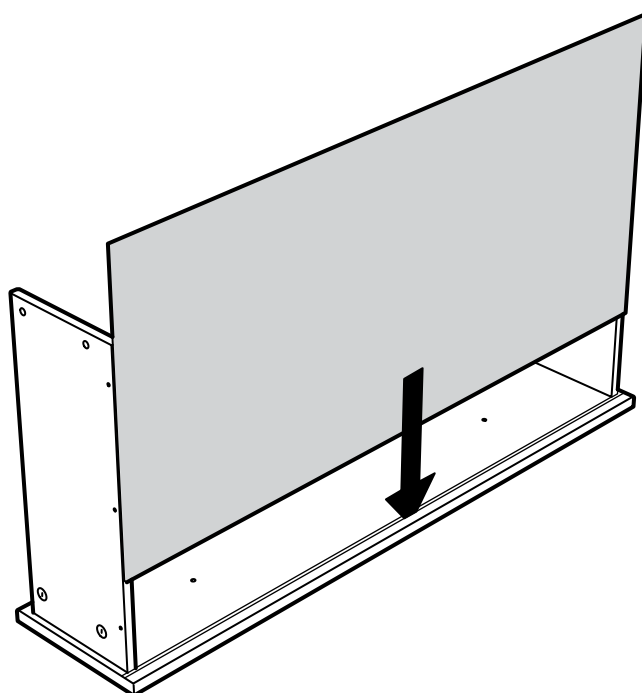 


44

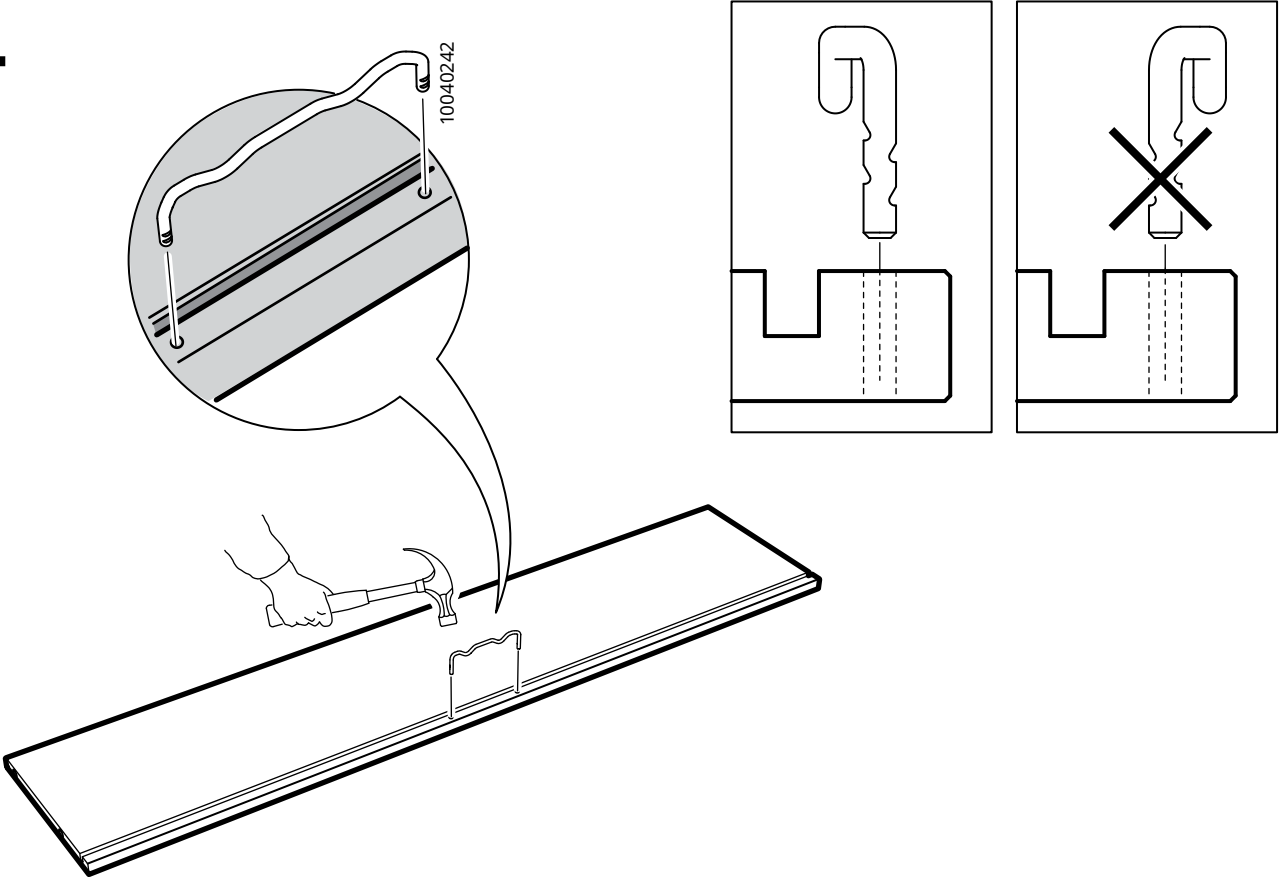 


45

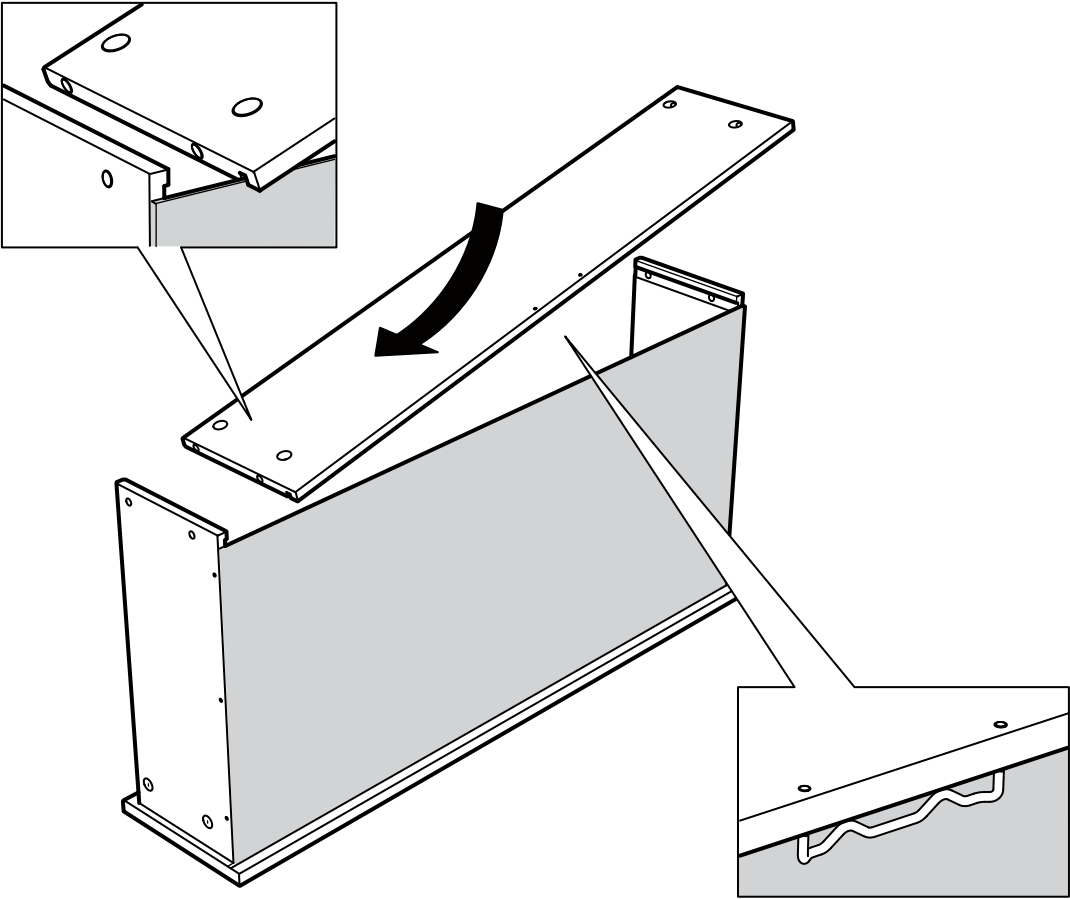 


46

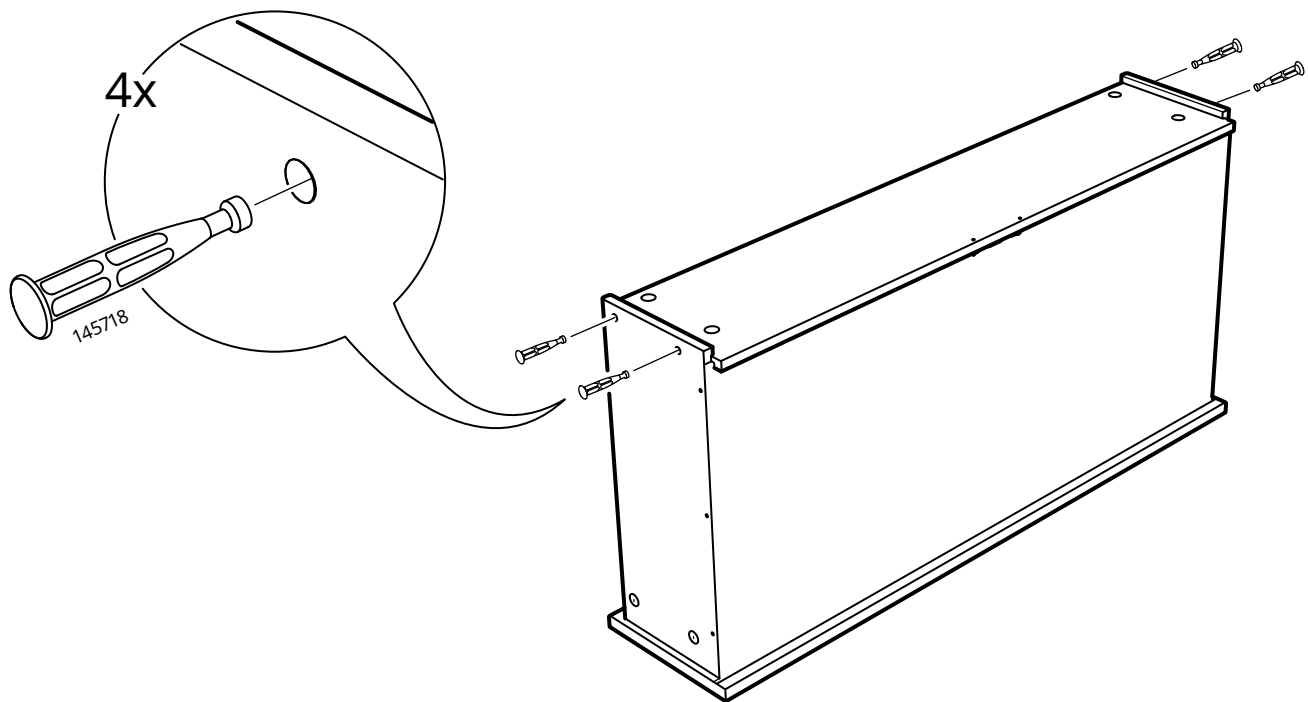 


47

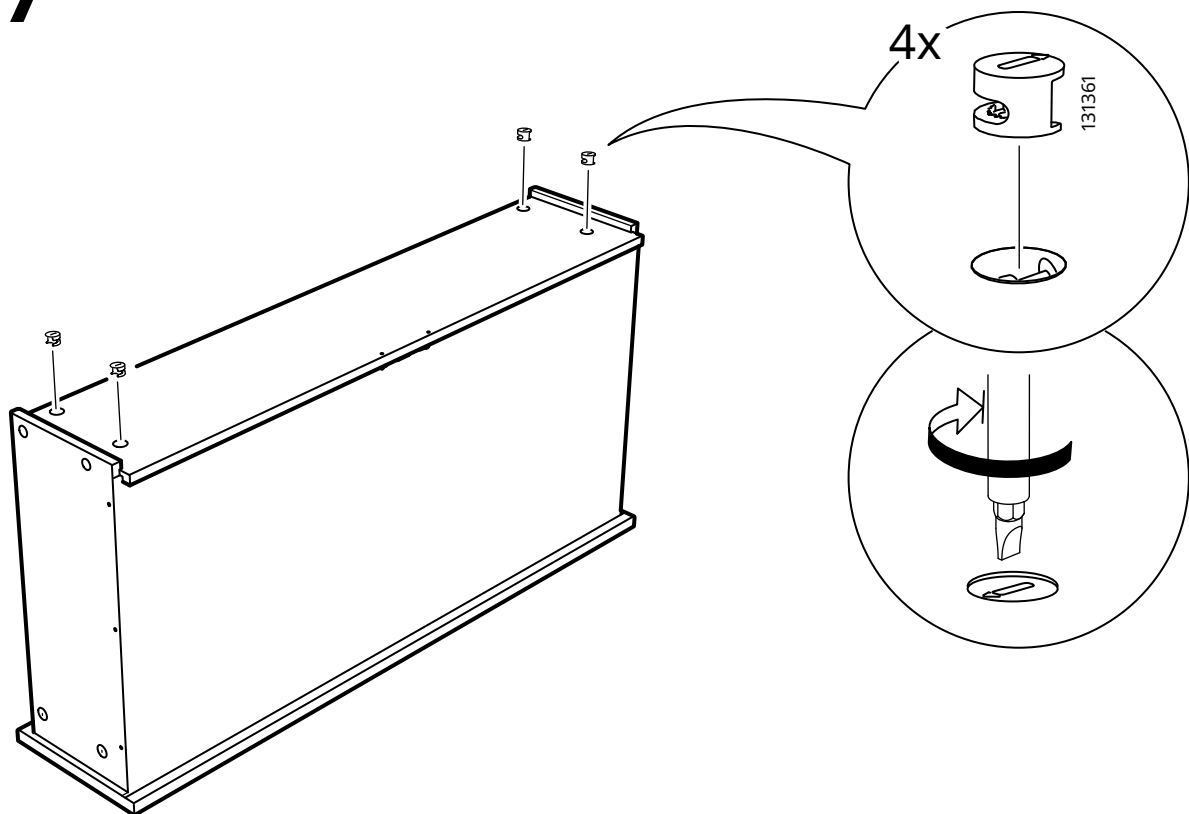 

48

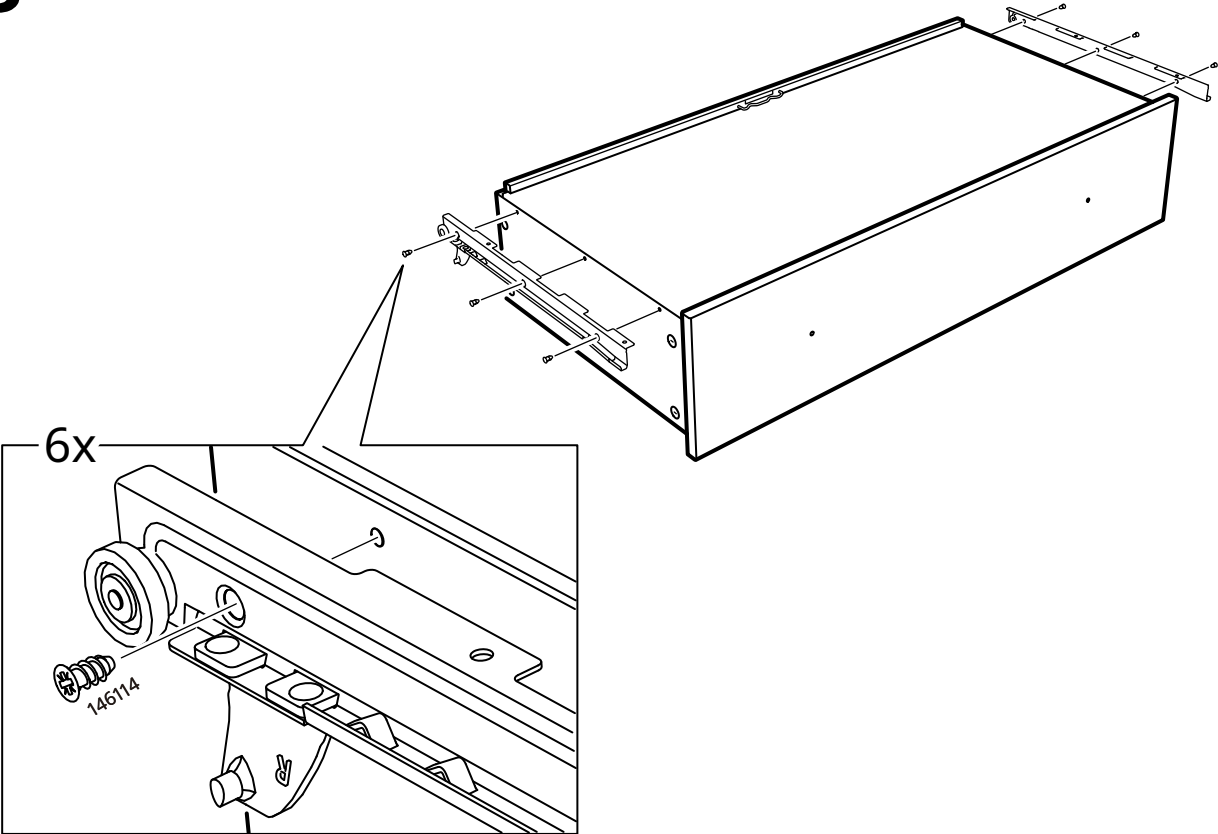 



49

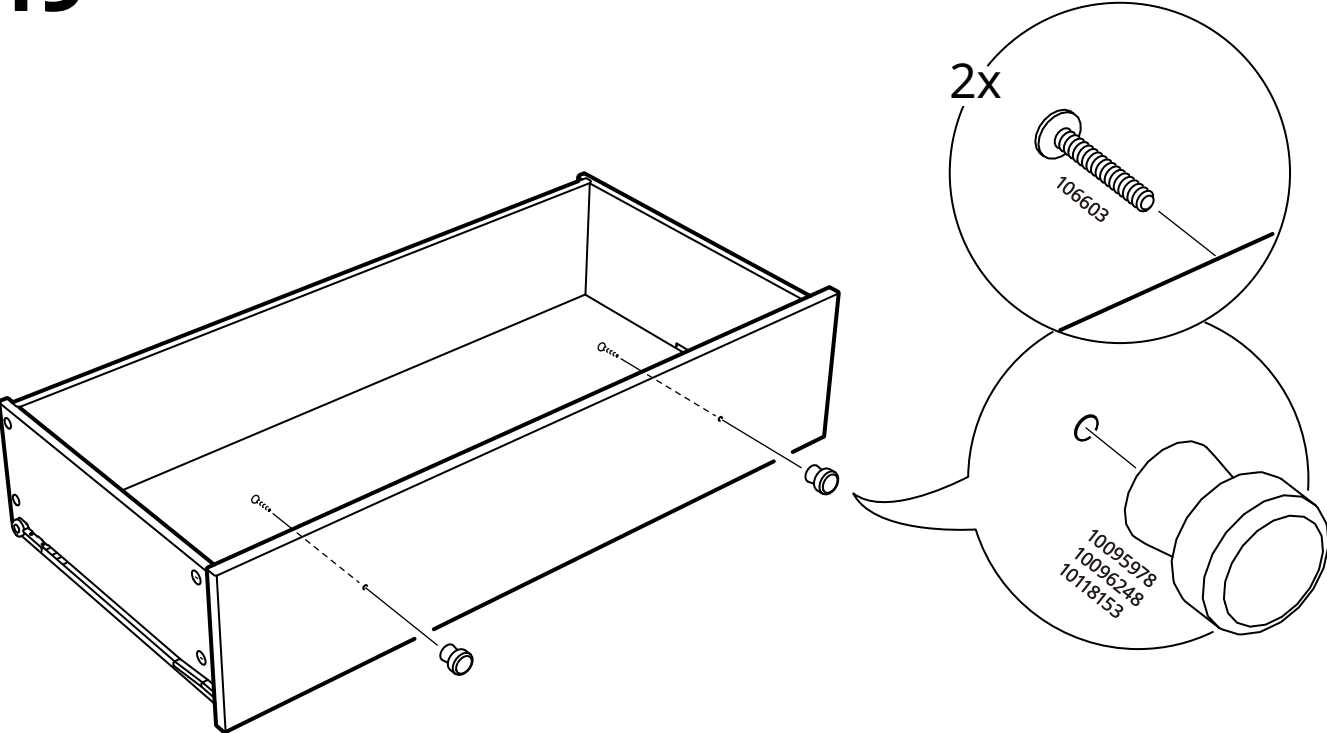 


50



  
51

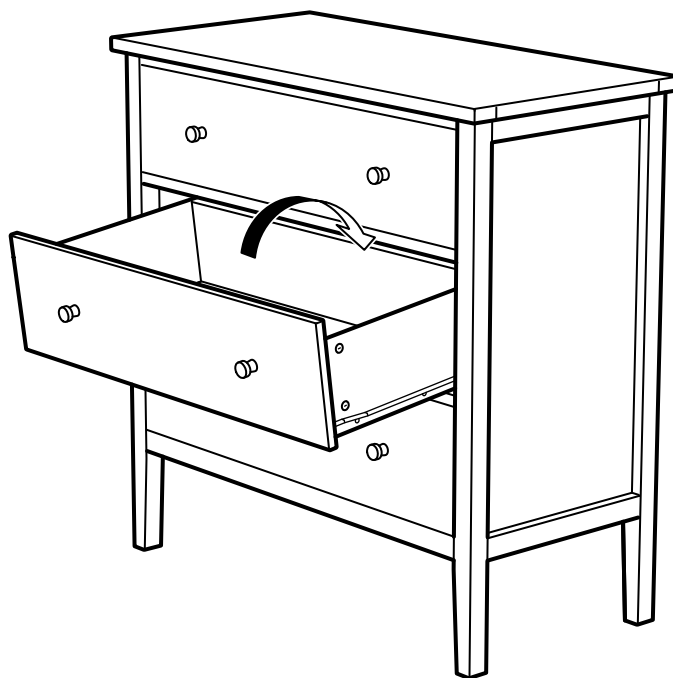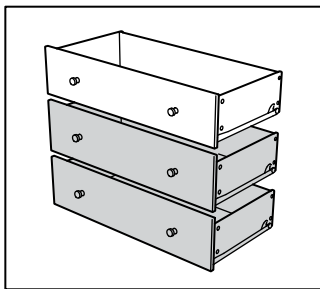

1

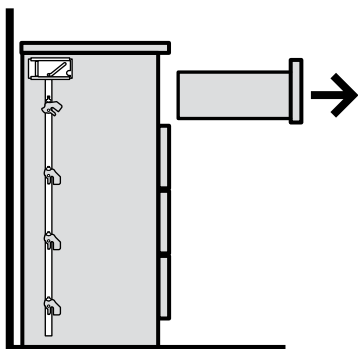 

2

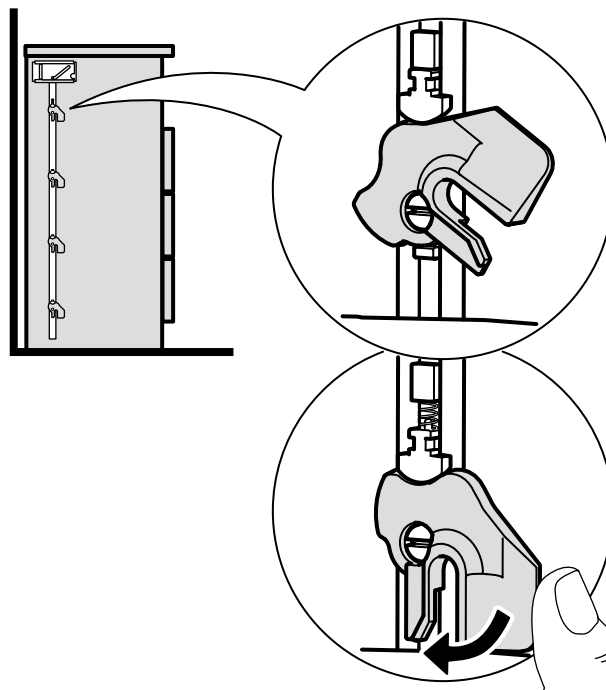 

3

