



Product Introduction

- | | |
|--------------------|------------|
| 1.Canopy pole | 7.Peg |
| 2.Door curtain | 8.Guy line |
| 3.Air tube | |
| 4.Air intake valve | |
| 5.Air outlet valve | |
| 6.Storage bag | |

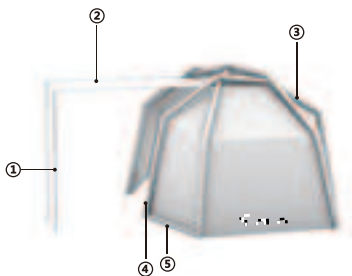

Tent Setup Guide

STEP 1

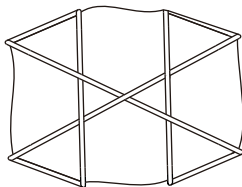


- 1.Unroll the tent and insert 4 pegs through straps at each corner of the tent. Connect the air pump to the air intake valve.

STEP 2




- 2.Inflate all air tubes fully.

STEP 3

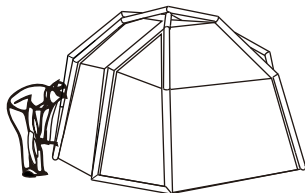

- 3.After inflating, close the air intake valve of the tent.

STEP 4

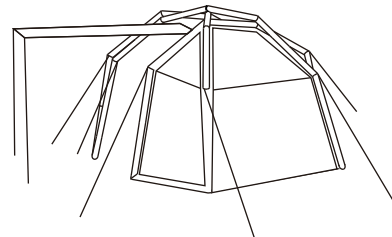

- 4.Place the remaining pegs along the edge of the tent and tighten the guy lines to keep the tent stable and anchored.

Product maintenance instructions

● Please dry completely during storage to avoid damage caused by mold

1. The cloth will be moldy and damaged when it is stored. If you store the tent after the rain or when the dew condenses in the early morning, please put up the tent immediately after you go home and make it completely dry before long-term storage. Please put up the tent immediately after you go home and make it.
2. In high humidity weather conditions, extra care must be taken to prevent mold damage. Slight mildew can be cleaned with diluted white vinegar solution (5 parts of water and 1 part of white vinegar).

● Please pay attention to cleaning during storage (including account poles)

Before long-term storage, please clean the dirt and other natural follow-up objects, and keep the poles, floor nails and other accessories clean. We strongly recommend the use of waterproof floor cloth to extend the service life of the tent bottom account and help keep it clean. Please keep the zipper clean and occasionally use zipper lubricant. The best way to clean the tent is to clean it with water and a soft brush and then dry it. Do not use alkaline or irritating washing products to avoid damaging the water repellent coating of the tent.



Product precautions

Precautions for use

1. Please keep the tent dry after use.
2. Please assemble the tent after being familiar with the use method.
3. Do not wear shoes in the tent.
4. During construction, remove sharp objects nearby to avoid embedding or penetrating the bottom and inner wall of the tent.
5. After each use or continuous use, thoroughly clean the tent and dry it.
6. Be careful when packing tents to avoid puncturing.
7. Avoid direct sunlight for a long time.

Keep away from open flames when using For safe camping, please follow the following common sense rules

1. Do not place cooking, heating and lighting appliances near walls, roofs and curtains.
2. Follow the safety instructions for these appliances.
3. Children are not allowed to play near the ignition device.
4. The emergency exit must remain empty.
5. Be familiar with the location of fire prevention tools.

