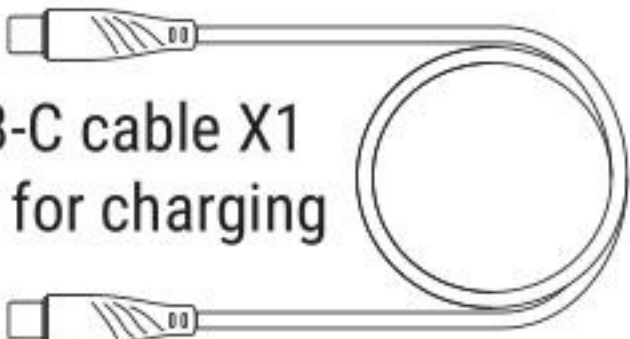


PARTS LIST (Included)

 Blade A X2

 Blade B X2

USB-C cable X1
Only for charging 

 Fixed parts for propellers

 Joystick parts X2

COMMON PROBLEMS AND SOLUTIONS

THE PROBLEM	REASON	COUNTERMEASURES
Drone lights flashing and no response from the drone when operating.	1. Remote is not synced to the drone. 2. Insufficient battery power.	1. Refer to the Quick Start guide and re-sync the drone. 2. Recharge the battery.
The blades spin, but the drone cannot takeoff.	1. Insufficient battery power. 2. The blades distorted.	1. Recharge the battery. 2. Replace the blades.
The quadcopter shakes heavily.	The blades distorted.	Replace the blades.
Drone cannot stay balanced in flight.	1. The blades distorted. 2. The motor doesn't work properly.	1. Replace the blades. 2. Replace the motor.

