


5 Style Hood

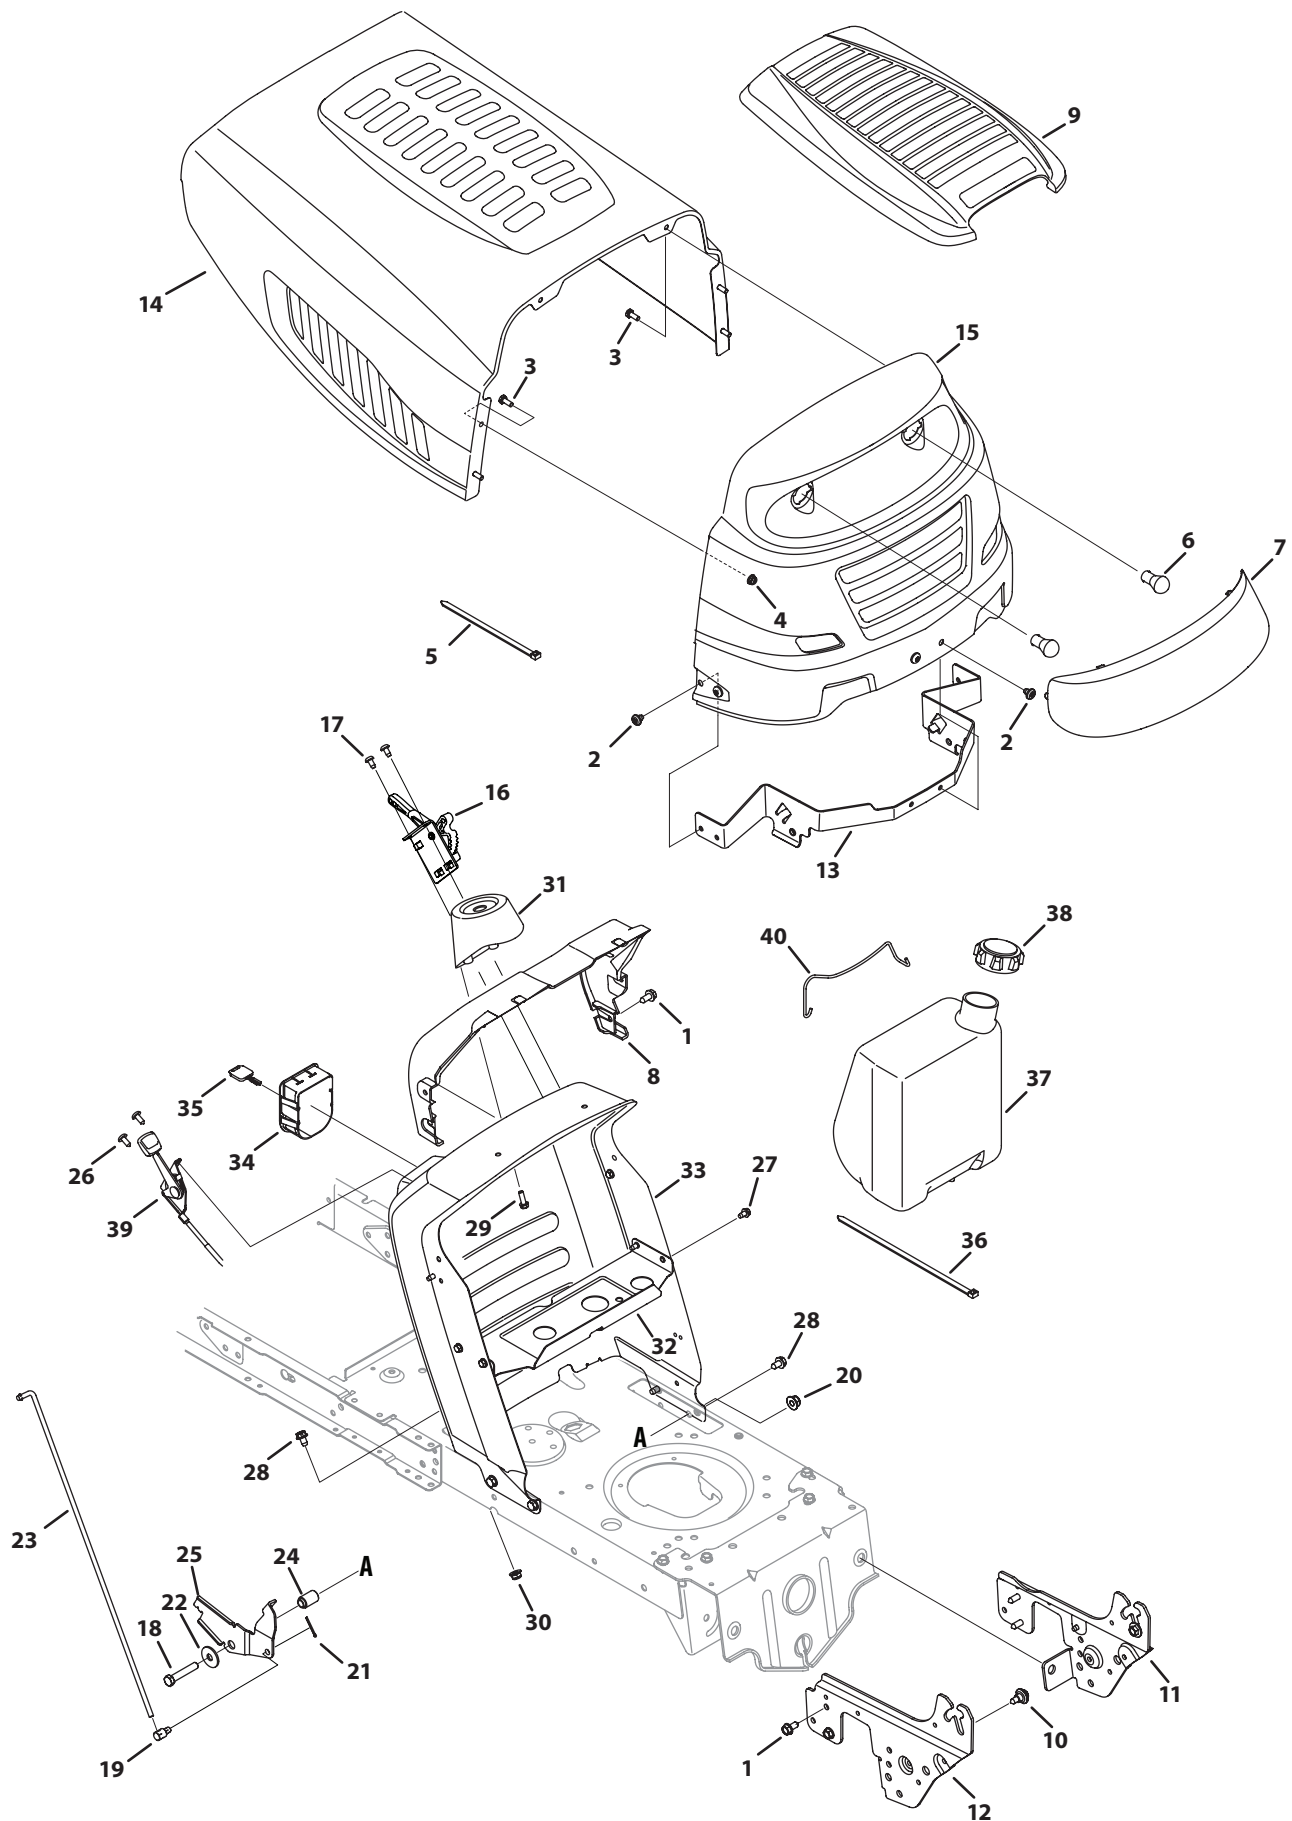


5 Style Hood

Ref. No.	Part No.	Description
1	710-04484	Screw 5/16-18 x .750
2	710-04593	Screw 5/16-18 x .375
3	710-0751	Hex Screw 1/4-20 x .620
4	712-04064	Flanglock Nut 1/4-20
5	725-0157	Cable Tie
6	925-0963	Miniature lamp 12V socket
7	731-04949A	Grill Lens
8	931-05078B	Dash
9	731-05522A	Hood cover
10	738-04091A	Shoulder Screw .43 x .29
11	783-05327B-0637	Suppport Bracket LH
12	783-05328A-0637	Suppport Bracket RH
13	783-05454-0637	Hood pivot bracket
14	783-05683-0691	Hood - Black
	783-05683-0662	Hood - Gray
15	783-05685-0691	Grill - Black
	783-05685-0662	Grill - Gray
16	983-04226	Hydro Assembly
17	710-04483	Screw 1/4-20 x .500
18	710-3144	Hex Screw 3/8-16 x 2.00
19	711-0736	Ferrule Adjust
20	712-04065	Flang lock Nut 3/8-16

Ref. No.	Part No.	Description
21	914-0111	Cotter Pin
22	936-0133	Flat Washer .411 x 1.25 x .100
23	747-04430	Control Rod, Speed Selector
24	750-04465	Flang Spacer .390 x .671 x 1.095
25	783-04862	RMC
	783-04903	No RMC
26	710-04483	Screw 1/4-20 x .500
27	710-0599	Hex Screw Washer 1/4-20 x .500
28	710-0604A	Screw 5/16-18 x .625
29	710-0895	Hex Screw 1/4-15 x .750
30	712-04063	Flanglock Nut 5/16-18
31	731-04945	Support Shaft
32	783-04584A-0637	Gas Tank Support Shaft
33	783-04892A-0691	Dash RMC
34	925-04227B	Key Switch Module
35	925-1745	Key
36	726-0230	Cable Tie
37	751-0555B	Fuel Tank, 1.5 Gallons
38	751-0603A	Fuel Cap
39	746-04364	Throttle/Choke Control Cable
40	683-04448	Battery Rod

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Seat and Fender

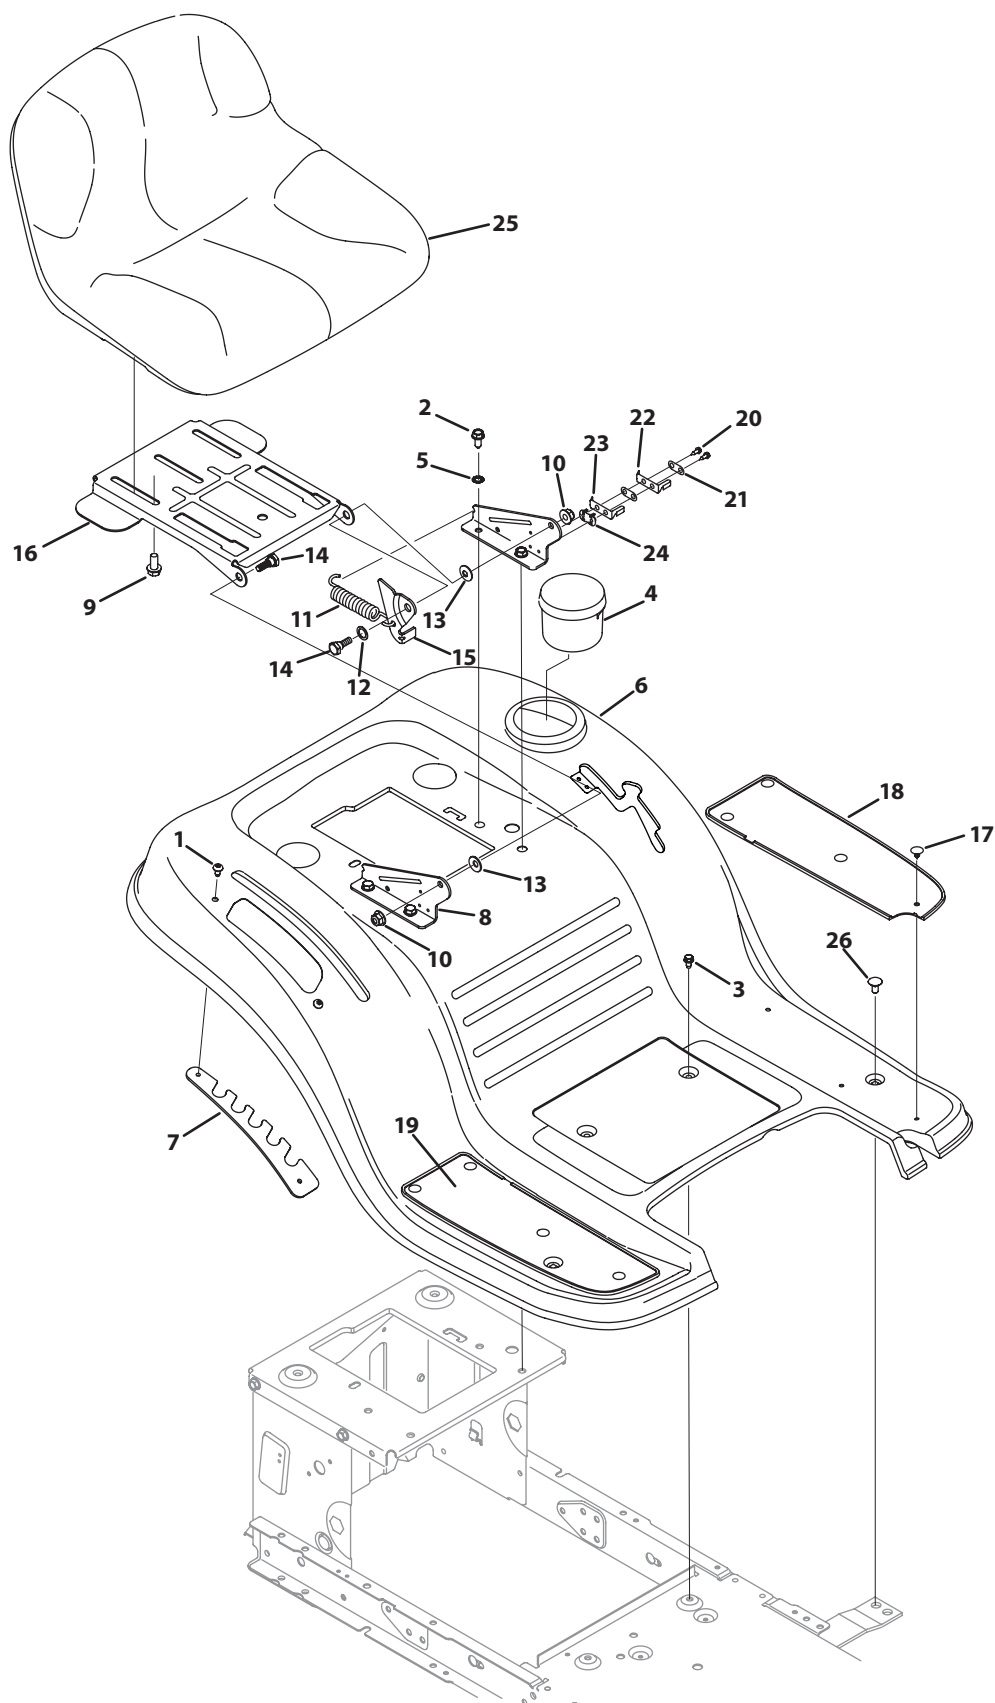

Ref. No.	Part No.	Description
1	710-04483	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04593B-0691	Fender
7	783-04843-0637	Lift Adjuster Bracket
8	783-1489C-0637	Seat Mount Bracket
9	710-04482	Hex Flange, 3/8-16 x .875
10	712-04063	Flangelock Nut, 5/16-18
11	732-1184	Extension Spring
12	936-0108	Flat Washer, .510x .750 x .033
13	736-0242	Bell Washer, .340 x .872 x .060
14	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
15	783-0209D	Lift Seat Bracket
16	783-04081C-0637	Pivot Seat Manual Adjust Bracket
17	726-04072A	Ratchet Clip, .250 x .500
18	735-04047	Foot Pad, LH
19	735-04048	Foot Pad, RH
20	710-0227	Screw, 8-18 x .500
21	726-0279	Insulator Plate
22	925-1303	Outer Seat SPring
23	725-1439	Inner Seat Spring
24	726-0278	Insulator Boss Plate
25	757-04083	Medium Back Seat, Black
	757-04088	High Back Seat, Black
26	710-0134	Carriage Screw, 1/4-20 x .62

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Front End Steering

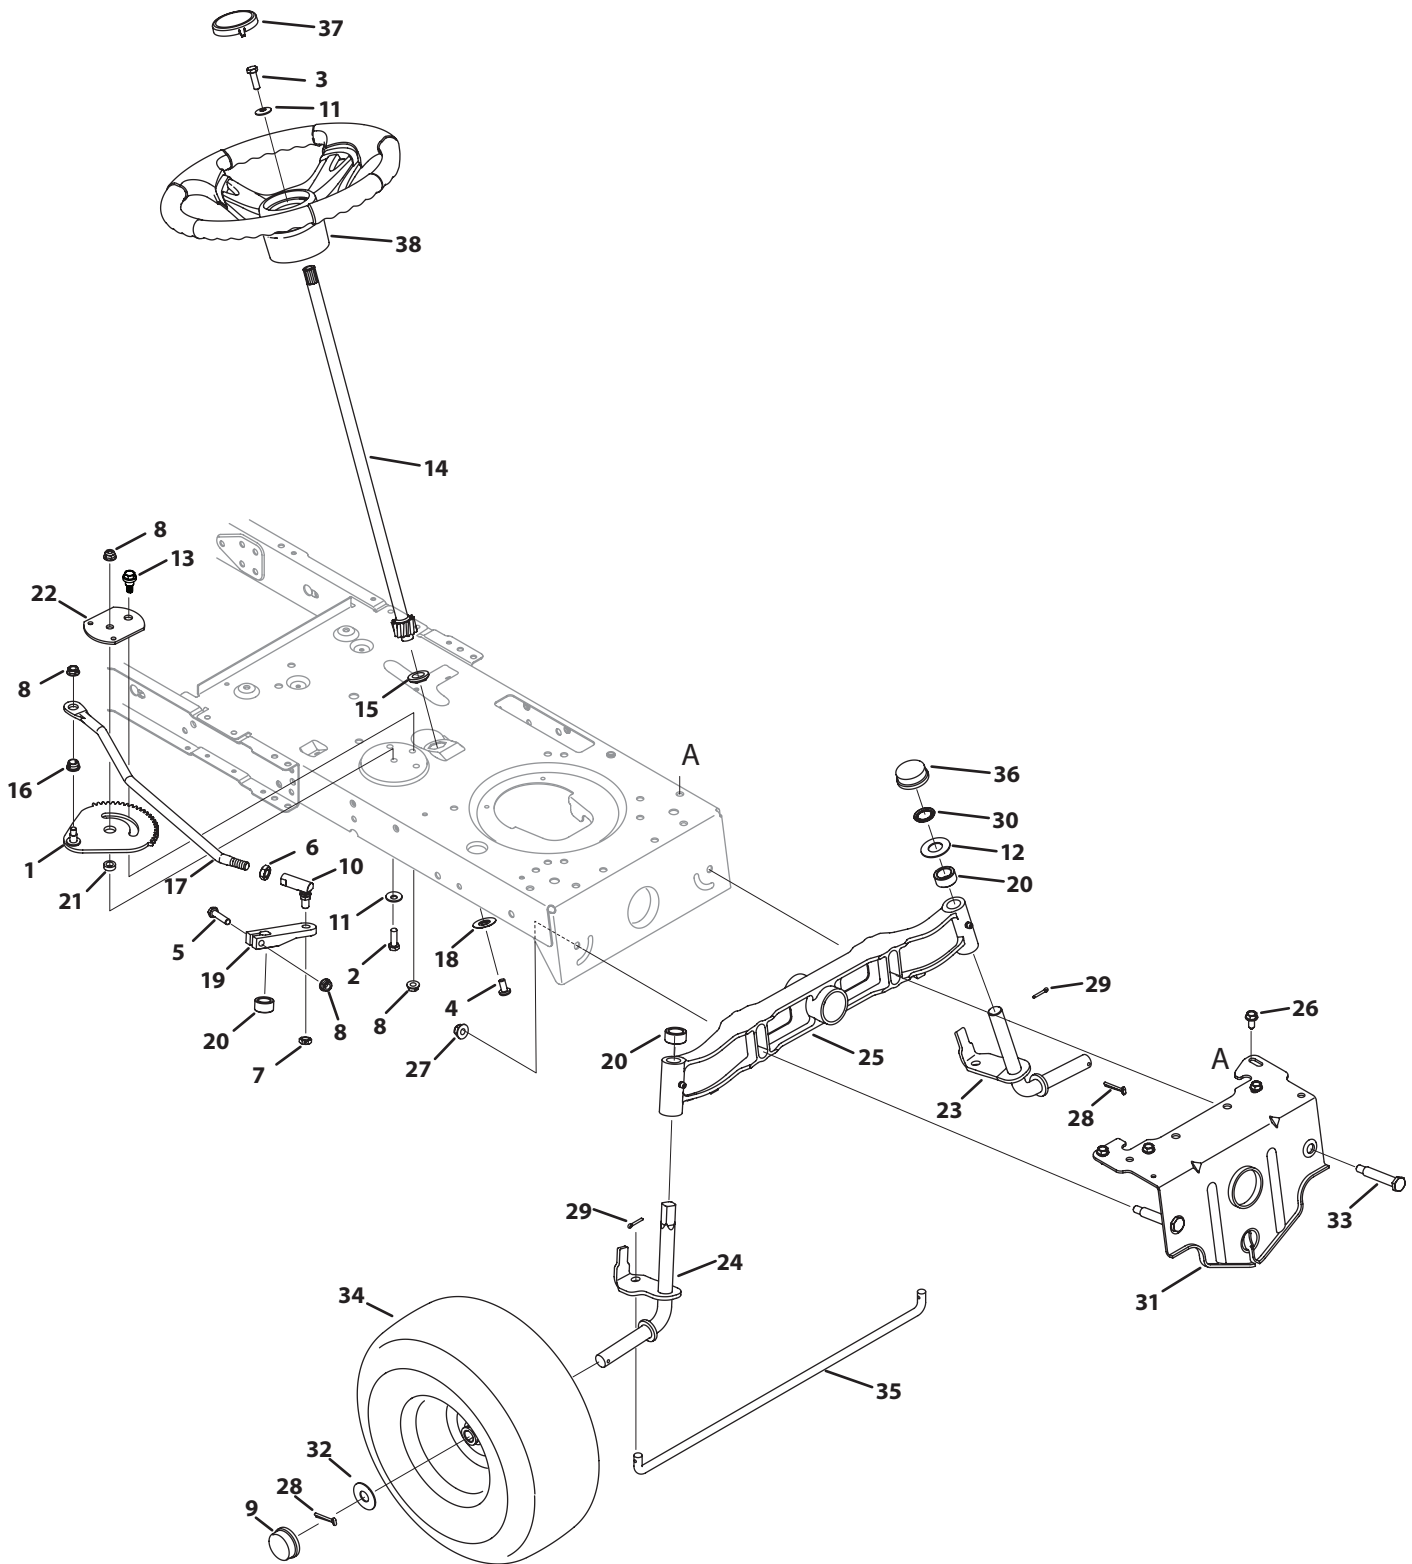


Front End Steering

Ref. No.	Part No.	Description
1	617-04024	Gear Assembly, Steering
2	710-0376	Screw, 5/16-18, 1.00, Gr5
3	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock
4	710-1309	Screw, Mach, 5/16-18, 0.750
5	710-3180	Screw, 5/16-18, 1.75, Gr5
6	912-0240	Nut, Jam, 7/16-20, Gr2
7	712-0262	Nut, Jam Lock, 3/8-24, Gr2
8	712-04063	Nut, Flange Lock, 5/16-18, GrF
9	931-0484A	Hub Cap
10	923-0448A	Ball Joint, 7/16-20, Lock
11	736-0242	Washer, Bell, .340 x .872 x .060
12	936-0316	Washer, Flat, .78 x 1.59 x .60
13	738-04141	Shoulder Screw, .435 x .3485, 5/16-18
14	738-0919A	Steering Shaft, 5/8 Spline x 21.86
15	941-04124	Bearing, Flange, Hex 5/8
16	941-0475	Plastic Bushing .380 ID
17	747-04298	Drag Link, Steering
18	948-0389	Cap, 1.25 x .16
19	748-04065-0637	Steering, Block
20	748-04068	Spacer, .710 ID x .125 OD x .56
21	750-04418	Spacer, .322 ID x .625 OD x .21

Ref. No.	Part No.	Description
22	783-04644	Stabilizer Plate, Gear Segment
23	938-04007A-0637	Axle Assmbly LH (38" & 42" Deck)
	938-04013	Axle Assembly, LH (46" Deck)
24	638-04008P	Axle Assmbly RH (38" & 42" Deck)
	638-04014A-0637	Axle Assembly, RH (46" Deck)
25	719-04177A	Pivot Bar, Cast
26	710-04484	Screw, 5/16-18, 0.750
27	712-04065	Nut, Flange Lock, 3/8-16, GrF
28	714-04039	Pin, Cotter, 5/32, 1.25
29	914-0474	Pin, Cotter, 1/8 x 0.75
30	726-04035	Push Nut 3/4 Dia.
31	783-05326-0637	Pivot Bar Bracket
32	736-04228A	Washer, Flat, .781 x 1.59
33	738-04128	Scr., Shlder, .500 x 2.380, 3/8-16
34	634-04086-0941	Wheel Ass'y, Sq. Shoulder - Yellow
	634-04086-0911	Wheel Ass'y, Sq. Shoulder - Gray
35	747-04299A	Tie Rod
36	731-04693	Push Cap
37	731-04040	Cap, Steering Wheel (sprig logo)
38	631-04028	Steering Wheel, Standard Grip

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Transmission

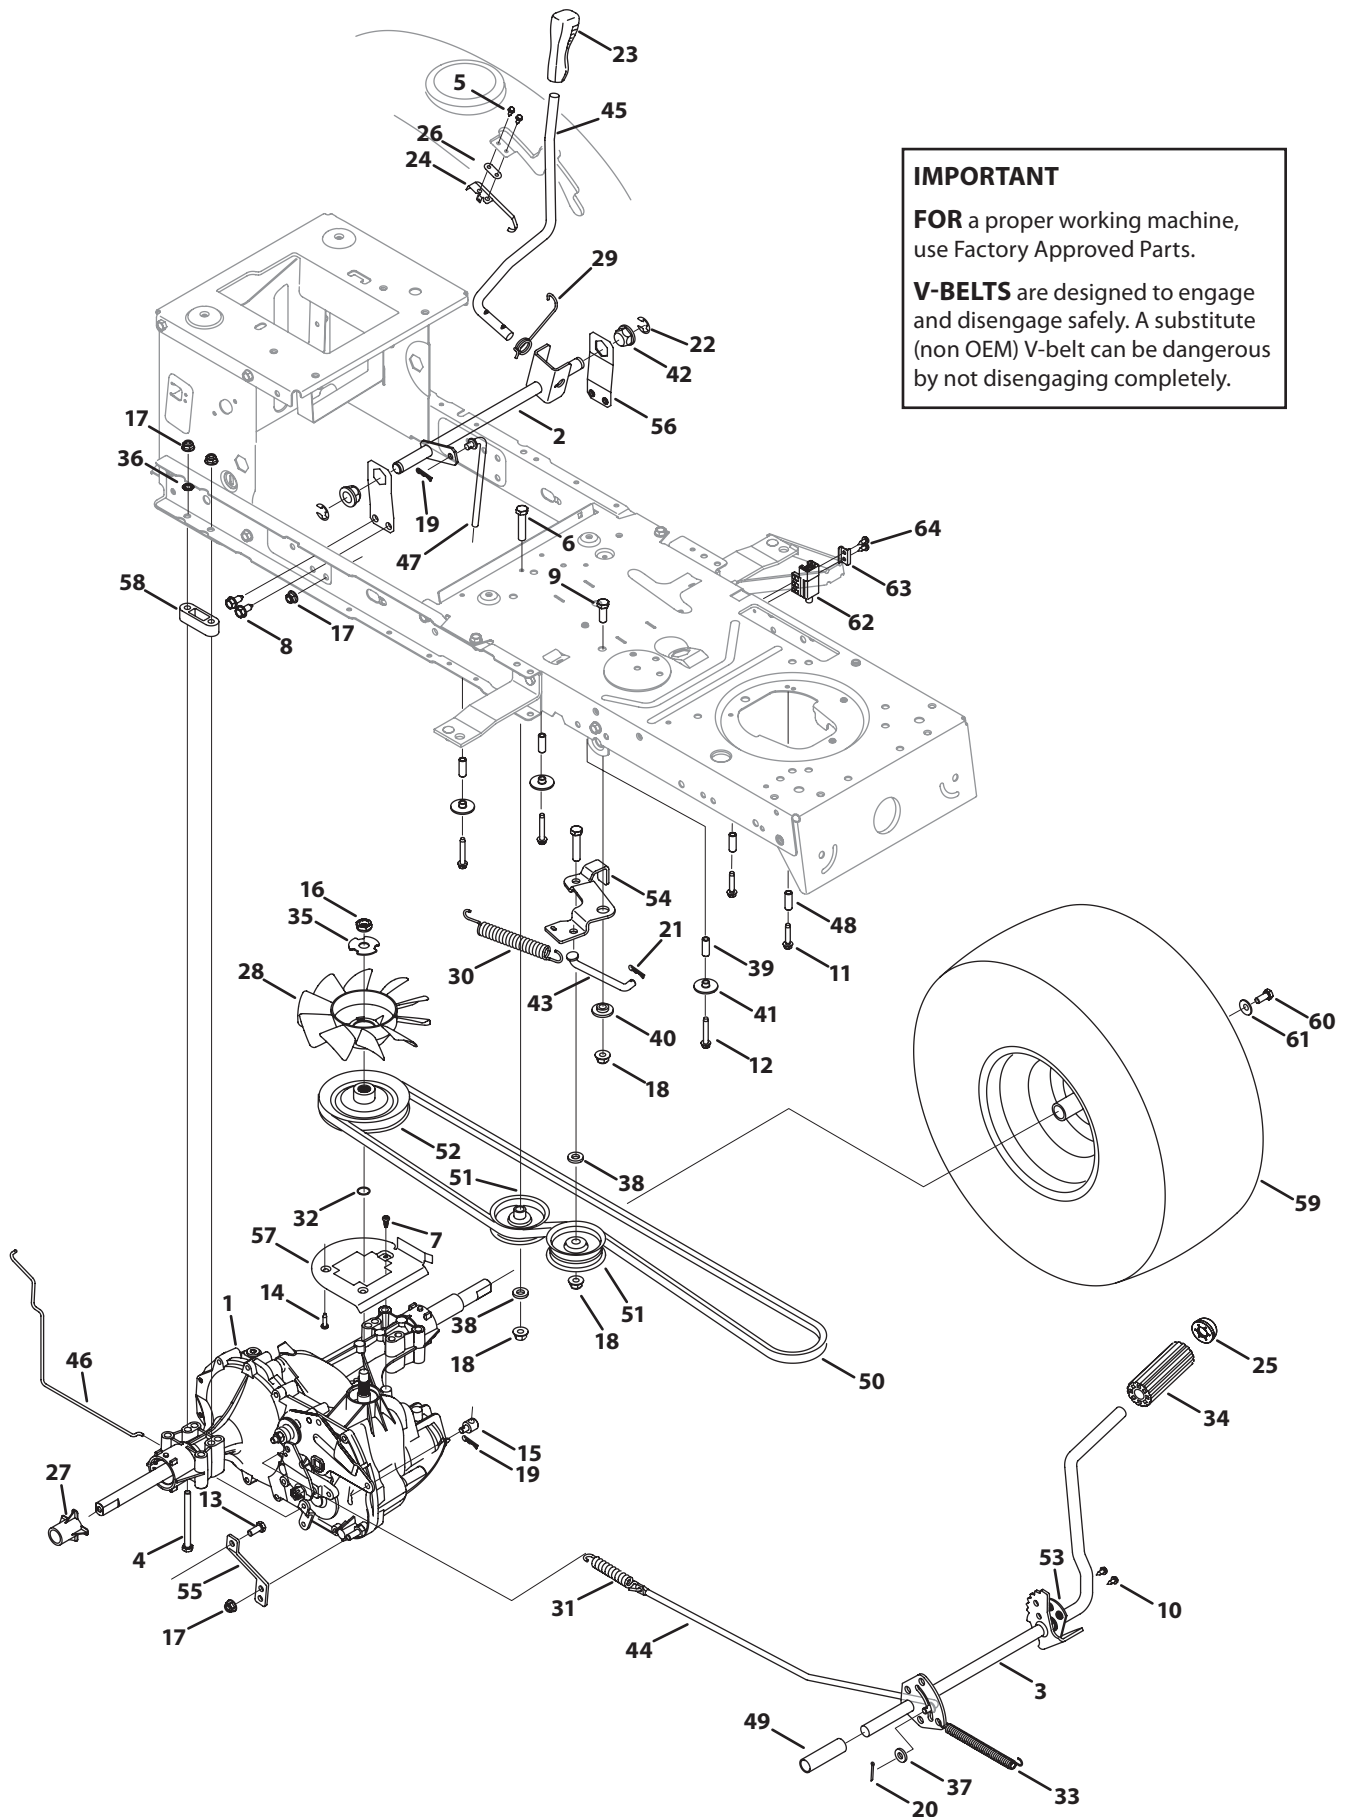

IMPORTANT


FOR a proper working machine, use Factory Approved Parts.

V-BELTS are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04198	Hydro Transmission	35	736-04263	Lock Washer, TRANS HYDRO
2	647-04038A	Hydro Handle Control Assembly	36	736-0607	Lock Washer, 5/16 EXT TOOTH
3	647-04054A-0637	Hydro Pedal Assembly	37	936-3008	Flat Washer, .344 X .750 X .120
4	710-0176	Hex Screw, 5/16-18:2.75	38	736-3010	Flat Washer, .407X.812X.135:HT
	710-1266	Hex Screw, 5/16-18 x 3.5	39	750-0566A	Spacer, .260 x .375 x 1.030 LG
5	710-0227	Screw, #8-18:0.500		750-04456	Spacer, .260 x .372 x 1.420
6	710-0347	Hex Screw, 3/8-16:1.75	40	938-0347	Shoulder Spacer, .625 ID X .169
7	710-0351	Screw, #10-16:0.500	41	738-04178	Shoulder Spacer, .375 ID X .284 THK
8	710-04484	Screw, 5/16-18:.750		936-0211	Flat Washer, .285 x 1.25 x .06
9	710-0514	Hex Screw, 3/8-16:1.00	42	941-0225	Hex Flange Bearing
10	710-0604A	Screw, 5/16-18:0.625	43	747-04283A	Declutching Rod
11	710-0809	Screw, 1/4-20:1.250	44	747-04286	Brake Rod
12	710-1325	Screw, 1/4-20:1.625		747-04679	Brake Rod, 46"
	710-1026	Screw, 1/4-20 x 1.75	45	747-04296	Hydro Control Handle
13	710-3008	Hex Screw, 5/16-18:.75	46	747-04316	Hydro Bypass Rod
14	710-3009	Screw, #10-24:0.750		747-04621	Hydro Bypass Rod, 46"
15	711-04448	Ferrule, 5/16-24 X .312 DIA.	47	747-04407A	Hydro Control Rod
16	912-0346	Jamlock Nut, 1/2-20	48	750-0566A	Spacer, .260 x .375 x 1.030 LG
17	712-04063	Flangelock Nut, 5/16-18	49	750-0802	Spacer, .640 ID X .76 OD X 2.63
18	712-04065	Flangelock Nut, 3/8-16	50	954-04074A	V Belt, 4L SEC X 78.2 LG
19	914-0104	Cotter Pin, .072 DIA. X 1.13 LG	51	756-04224	Flat Idler Pulley 2.75 OD
20	914-0111	Cotter Pin, 3/32:1.0	52	756-04309	Input Pulley
21	714-3004	Cotter Pin, 3/32 X 1.25	53	783-04536B-0637	Support Pedal Bracket
22	716-0106A	E Rign, .625 DIA	54	783-04570A-0637	Idler Arm
23	720-0311	Handle Grip	55	783-04579A-0637	Torque Bracket
24	725-04249	Hydro Spring Switch	56	783-04585A	Handle Bracket
25	726-0214	Push Cap, 5/8	57	783-04600A-0637	Belt Disengage Support Bracket
26	926-0320	Insulator Plate Nut	58	948-0334	Spacer, T-Axle, 46" only
27	731-05299	Sleeve, .765 ID X 1.500 LG	59	634-0104-0941	Wheel, 20 x 8 x 8 - Yellow
28	731-06098	Hydro Fan		634-0104-0911	Wheel, 20 x 8 x 8 - Gray
29	732-04225	Torsion Spring	60	710-0627	Hex Screw, 5/16-24 x .750
30	732-04229	Extension Spring, .75 DIA. X 6.02	61	736-0242	Bell Washer, .340 x .872 x .060
31	732-0716D	Extension Spring, .59 OD X 4.00 LG	62	725-04363	Switch Interlock
32	732-0729	Wire Ring	63	17962	Plate Switch
33	732-0963	Extension Spring, .50 DIA X 6.37 LG	64	728-04021	Rivot
34	735-0239	Foot Pad, 4.0			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame and PTO Lift

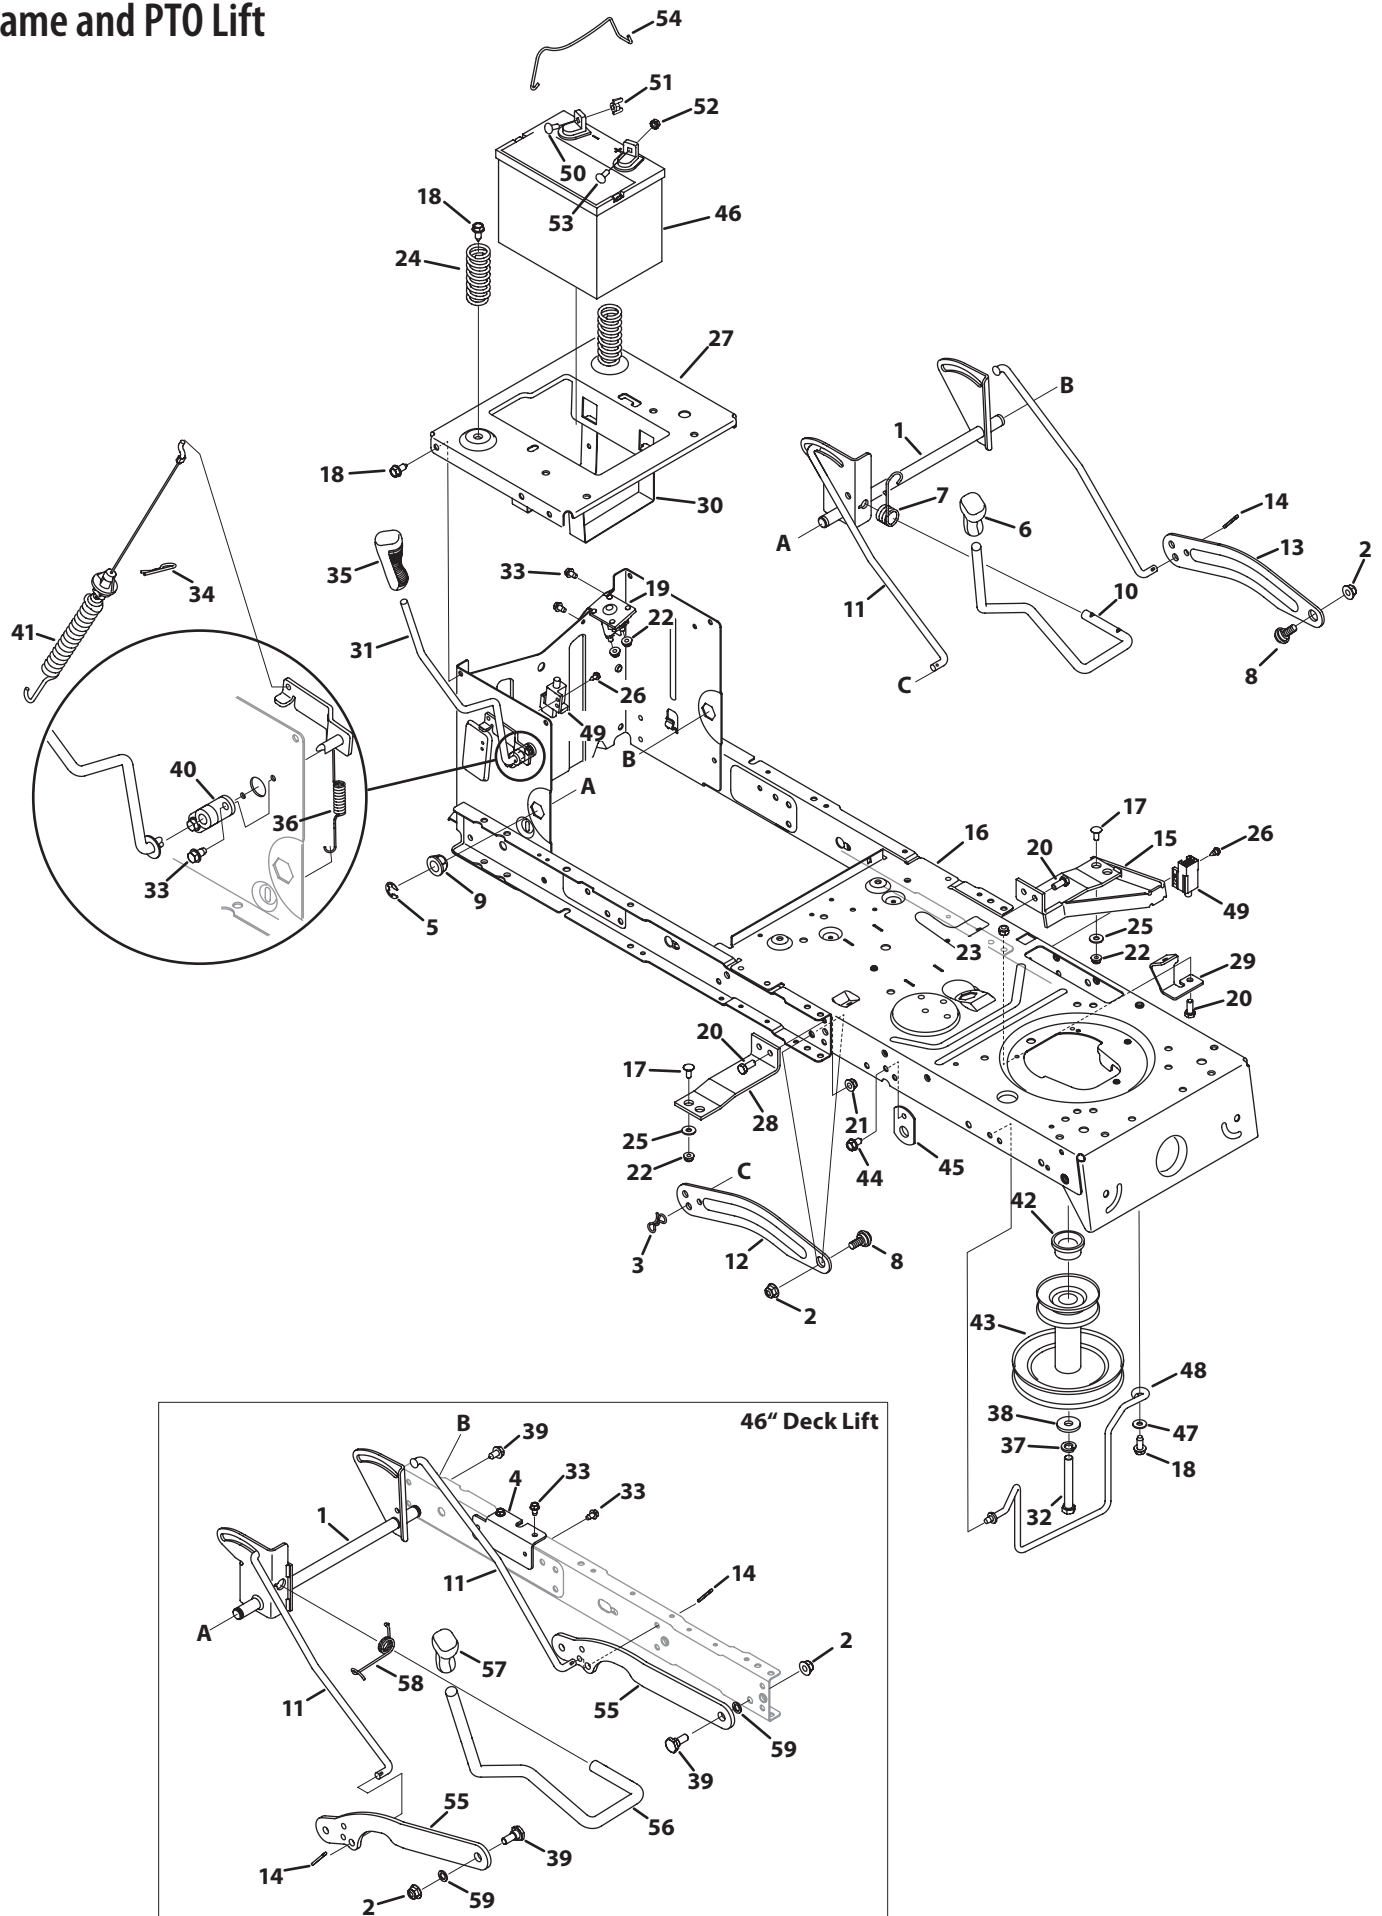


Ref. No.	Part No.	Description
1	683-04155A-0637	Shaft Assembly Lift 42" Deck
	683-04334-0637	Shaft Assembly Lift 46" Deck
2	712-04065	Nut, Flange Lock, 3/8-16, GrF
3	714-04043	Pin, Cotter .08 x 1.56 Intern. RH
4	738-05389-0637	Frame Brace Bracket
5	716-0106A	Ring, E-Type, .625 Dia.
6	720-0311	Grip, Handle, 1/2
7	732-04225	Spring, Torsion 42" Deck
8	738-04130	Screw, Shoulder, .625 x .175, 3/8-16
9	941-0225	Bearing, Hex Flange
10	747-04282	Deck Handle, Lift, 42" Deck
11	747-04393	Rod, Lift
12	783-04494B-0637	Lift Arm, Deck - RH
13	783-04711B-0637	Lift Arm, Deck - LH
14	914-0115	Cotter Pin
15	683-04195-0637	Support Bracket Assembly
16	683-04450-0691	Frame Assembly
17	710-0134	Carriage Screw, 1/4-20 x .62
18	710-04484	Screw, 5/16-18, .750
19	725-04439	Solenoid
20	710-3008	Hex Screw, 5/16-18 x .75
21	712-04063	Flange Lock Nut, 5/16-18
22	712-04064	Nut, Flange Lock, 1/4-20, GrF
23	912-0429	Hex Lock Nut, 5/16-18
24	732-04035	Spring, Compr. , 1.28 OD x 3.125
25	736-0173	Flat Washer, .28 x .74 x .063
26	738-04237A	Shoulder Screw, #10-32 x .500
27	783-04548C-0637	Seat Bracket, Frame
28	783-04637-0637	Bracket, Runing Board
29	783-04753-0637	Frame Support Bracket
30	783-04869A-0637	Bracket, Battery
31	647-04096-0637	Handle Assembly, PTO

Ref. No.	Part No.	Description
32	710-04608	Screw, 7/16-20, 3.25 42" Deck
	710-04607	Screw, 7/16-20, 2.75 46" Deck
33	710-0599	Screw, 1/4-20, 0.500
34	914-0145	Pin, Click, .092 x 1.64
35	720-04049A	Grip, Handle, 3/8
36	732-04276A	Spring, Extension
37	936-0171	Washer, Lock, 7/16
38	736-0322	Washer, Flat, .450 x 1.250 x .164
39	938-0380	Bolt, Shldr. .500 x .270 3/8-16
40	741-04119	Bearing, PTO
41	746-04173B	Cable, Deck Engagement
42	750-0956	Spacer, 1.010 x 1.400 x .825, 42" Deck
43	956-04067A	Engine Pulley, 38" & 42" Deck
	756-04208A	Engine Pulley, 46" Deck
44	710-0604A	Screw, 5/16-18, 0.625
45	783-04536B-0637	Pedal Support Bracket
46	925-1707D	Battery, 155 CCA
47	936-0300	Washer, Flat, .406 x .875 x .059
48	747-04857	Rod, Belt Keeper (42" Deck)
	683-04414-0637	Rod, Belt Keeper (46" Deck)
49	725-04363	Switch, Interlock
50	738-1132	Shoulder Screw, .250 x .150; 1/4-20
51	712-3087	Wing Nut 1/4-20
52	712-0271	Nut, Sems, 1/4-20
53	710-04666	Screw, Carriage, 1/4-20, .75, Gr5
54	683-04448-0637	Battery Hold Down Rod
55	783-0678C-0637	Deck Lift Link
56	747-04653	Deck Handle, Lift, 46" Deck
57	720-0298	Grip, Handle, 5/8
58	732-04438	Spring, Torsion 46" Deck
59	936-0140	Washer, Flat, .385 x .62 x .063

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

42" Deck

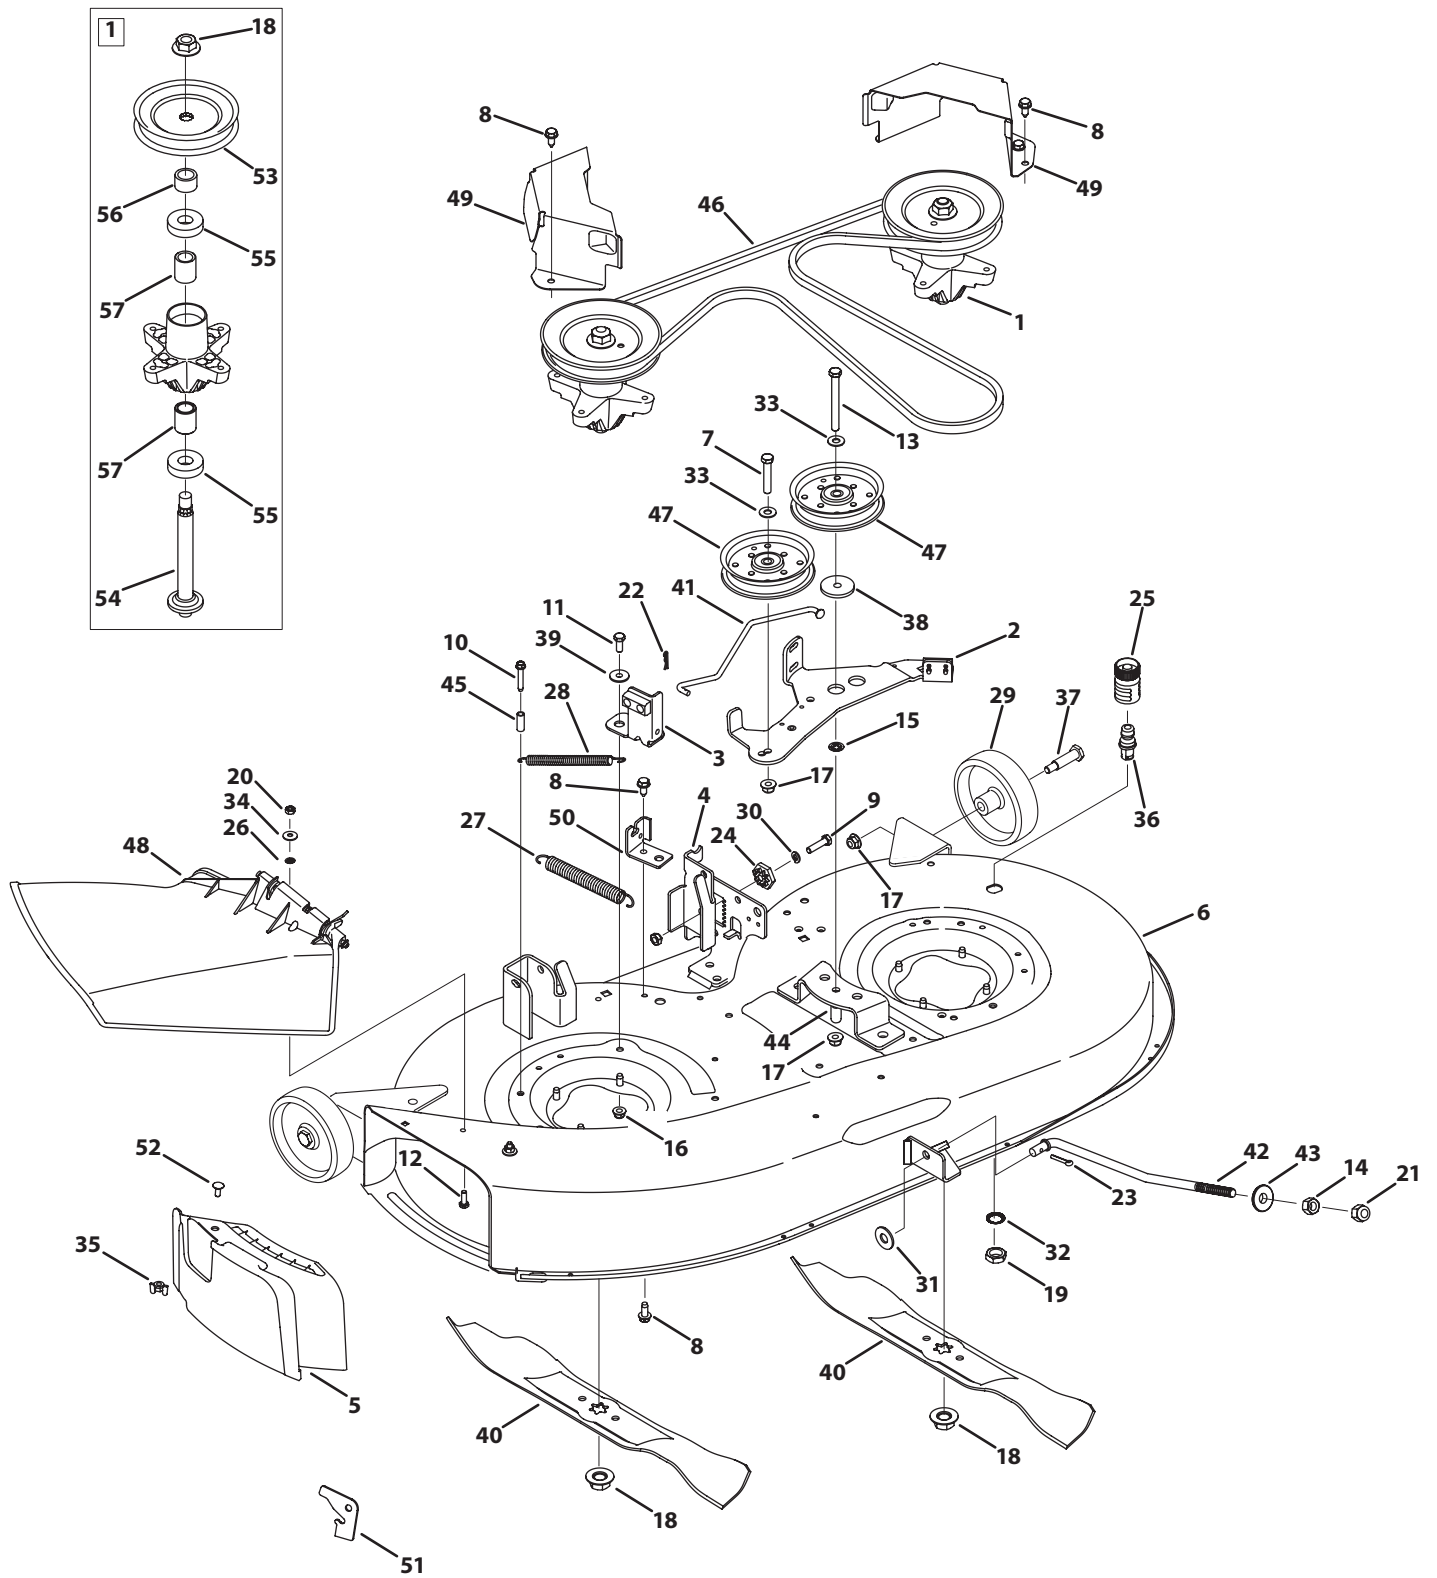


Ref. No.	Part No.	Description
1	918-04456	Pulley Spindle Assembly, 6.3 Dia
2	683-04138B-0637	Deck Brake Assembly
3	983-04167	Deck Brake Assembly
4	683-04228-0637	LH Deck Hanger Bracket
5	731-2363	Mulch Plug
6	983-04547-0691	42" Deck Assembly
7	710-0347	Hex Screw, 3/8-16 x 1.75
8	710-04484	Screw, 5/16-18 x .750
9	710-0528	Hex Screw, 5/16-18
10	710-0778	Screw, 1/4-20 x 1.500
11	710-3008	Hex Screw, 5/16-18 x .75
12	710-3015	Hex Screw, 1/4-20 x .75
13	710-3085	Hex Screw, 3/8-16 x 3.50
14	912-0206	Hex Nut, 1/2-13
15	712-0229	Push Nut, 3/8
16	712-04063	Flangelock Nut, 5/16-18
17	712-04065	Flangelock Nut, 3/8-16
18	712-0417A	Flange Nut, 5/8-18
19	912-0641	Hex Nut, M16-1.5 DIN 936
20	712-3006	Hex Nut, 1/4-20
21	712-3083	Hexlock Nut, 1/2-13
22	914-0104	Cotter Pin, .072 DIA. x 1.13 LG
23	714-3002	Cotter Pin, 3/16 x 1.00
24	917-04074	Deck Adjust Gear
25	921-04041	Water Nozzle Adaptor
26	726-0233	Push Nut, .25 ID x .50 OD
27	732-04280B	Extension Spring, 0.75 OD x 6.375
28	732-04287	Extension Spring, .500 DIA x 6.375
29	734-0973	Deck Wheel, 5.0 x 1.38

Ref. No.	Part No.	Description
30	936-0119	Lock Washer, 5/16
31	936-0179	Flat Washer, .531 x 1.25 x .100
32	736-0225	Lock Washer, 5/8
33	936-0267	Flat Washer, .385 x .87 x .06
34	736-0270	Bell Washer, .265 X.75 x .062
35	712-3087	Wing Nut, 1/4-20
36	737-04003D	Water Nozzle
37	938-0373	Shoulder Bolt, .496 x 1.525:3/8-16
38	738-04162A	Shoulder Spacer, .8840 x .190
39	738-04166	Shoulder Spacer, .5000 x .1475
40	942-0616A	3 in 1 Blade
41	747-04379A	Brake Control Rod
42	747-04944A	Deck Lift Rod
43	748-04069	Deck Lift Pivot Cup
44	750-04446	Spacer, 3/8 ID x .68 OD x 1.46 LG
45	750-0566A	Spacer, .260 x .375 x 1.030 LG
46	954-04060B	V Belt, 96.5
47	756-04129B	Idler Pulley, 4.25"DIA
48	931-1032B	Chute Assembly
49	783-04327B-0691	Belt Cover, 6.00 DIA
50	783-04740-0637	Deck Engage Cable Bracket
51	783-1026A-0637	Chute Stop
52	710-0134	Carriage Screw, 1/4-20 x .62
53	956-1227	Deck Pulley, 6.3 DIA
54	938-04241	Spindle Shaft, 5.50 LG
55	941-0919	Ball Bearing, .787 x 1.85 x .551
56	750-04739	Spacer, .820 x 1.150 x .480 LG
57	750-1000	Spacer, .80 x 1.10 x 1.322 LG


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

46" Deck

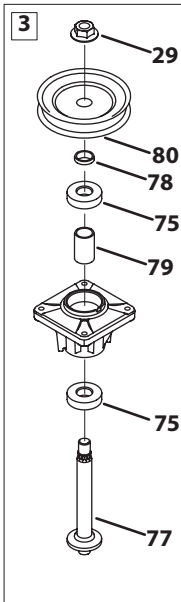

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	97116	Deck Brake Assembly	43	936-0211	Flat Washer, .285 x 1.25 x .06
2	71258E-0691	46" Deck Belt Cover, RH	44	736-0225	Lock Washer, 5/8
3	918-0230B	Spindle Assembly, 5.00 Dia. w/ Stud	45	736-0258	Flat Washer, .385 x 1.0 x .135
4	918-04134C	Spindle Assembly, Double Pulley	46	736-0270	Bell Washer, .265 x .75 x .062
5	683-0254B-0691	Deck Hanger Bracket Assembly	47	936-0300	Flat Washer, .406 x .875 x .059
6	683-04250A-0637	46" LH Idler Bracket	48	736-0418A	Flat Washer, .34 x 2.25 x .10
7	683-04251A-0637	46" RH Idler Bracket	49	737-04003D	Deck Water Nozzle
8	983-04413-0691	46" Side Deck Assembly	50	710-0134	Carriage Screw, 1/4-20 x .62
9	712-3087	Wing Nut, 1/4-20	51	938-0347	Shoulder Spacer, .625 x .169
10	731-05264	Mulch Plug	52	938-0373	Shoulder Bolt, 3/8-16 x .496 x 1.525
11	710-04754	Hex Screw, 3/8-16 x 3.50	53	738-04091A	Shoulder Screw, .5/16-18 x .43 x .29
12	710-0514	Hex Screw, 3/8-16 x 1.0	54	942-0611A	3 in 1 Blade, 16.28
13	710-0528	Hex Screw, 5/16-18 x 1.25	55	942-0612A	3 in 1 Blade, 14.88
14	710-0599	Screw, 1/4-20 x .500	56	747-04530	Belt Keeper Rod
15	710-0778	Screw, 1/4-20 x 1.500	57	747-04645	46" Front Deck Rod
16	710-0805	Hex Screw, 5/16-18 x 1.50	58	748-0234	Shoulder Spacer
17	710-1007	Screw, 3/8-16 x 1.500	59	748-04069	Deck Lift Pivot
18	710-1026	Screw, 1/4-20 x 1.750	60	750-04456	Spacer, .260 x .372 x 1.420
19	710-1260A	Screw, 5/16-18 x .750	61	750-04999	Spacer, .380 x .625 x 2.515
20	710-1315	Screw, 3/8-16 x 1.250	62	750-0566A	Spacer, .260 x .375 x 1.030
21	710-3015	Hex Screw, 1/4-20 x .75	63	750-1320	Spacer, .375 x .63 x .595
22	711-04636	Pin, 1/4-20 x 3/8 x x 2.685	64	954-0349	V-Type Belt, 79.10
23	711-04669	Clevis Pin, 3/8 x 2.75	65	954-04142	V-Type Belt, 91.4
24	911-0993	Belt Guard Pin, 1/4 x 1.43	66	756-04129B	Idler Pulley, 4.25 Diameter
25	912-0206	Hex Nut, 1/2-13	67	931-1032B	Chute Assembly Side Discharge
26	712-04063	Flangelock Nut, 5/16-18	68	783-0141-0637	46" Deck Center Skirt
27	712-04064	Flangelock Nut, 1/4-20	69	783-0142-0637	46" Deck RH Skirt
28	712-04065	Flangelock Nut, 3/8-16	70	783-04641A-0637	46" Idler Bracket
29	712-0417A	Flange Nut, 5/8-18	71	783-05321-0637	46" Brake Bracket
30	912-0641	Hex Nut, M16-1.5	72	783-05360-0637	Deck Stop Bracket
31	712-3006	Hex Nut, 1/4-20	73	750-1304	Spacer, .792 x 1.060 x .400
32	712-3083	Hexlock Nut, 1/2-13	74	783-1348D-0691	46" LH Belt Cover
33	714-04043	Cotter Pin, Bow-Tie	75	941-0919	Ball Bearing, .787 x 1.85 x .551
34	917-04074	Deck Adjuster Gear	76	938-1128	Spindle Shaft, 6.58
35	921-04041	Water Nozzle Adapter	77	738-0927	Spindle Shaft, 4.450
36	726-0233	Push Nut, .25 x .50	78	748-0434	Spacer, .750 x 1.150 x .230
37	932-0429A	Extension Spring, .50 x 3.97	79	750-04936	Spacer, .792 x 1.060 x 1.860
38	732-04400	Extension Spring, .75 x 6.835	80	756-1187	Deck Pulley, 5.00 Diameter
39	932-0594A	Extension Spring, .91 x 7.33	81	756-1188	Deck Pulley, 5.75 Diameter
40	732-0814	Extension Spring, .56 x 5.52	82	736-0315	Flat Washer, .760 x 1.50 x .120
41	734-0973	Deck Wheel, 5.0 x 1.38	83	750-04440	Spacer, .792 x 1.060 x 1.680
42	936-0119	Lock Washer, 5/16	84	756-04094	Deck Pulley, 5.00 x .80

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

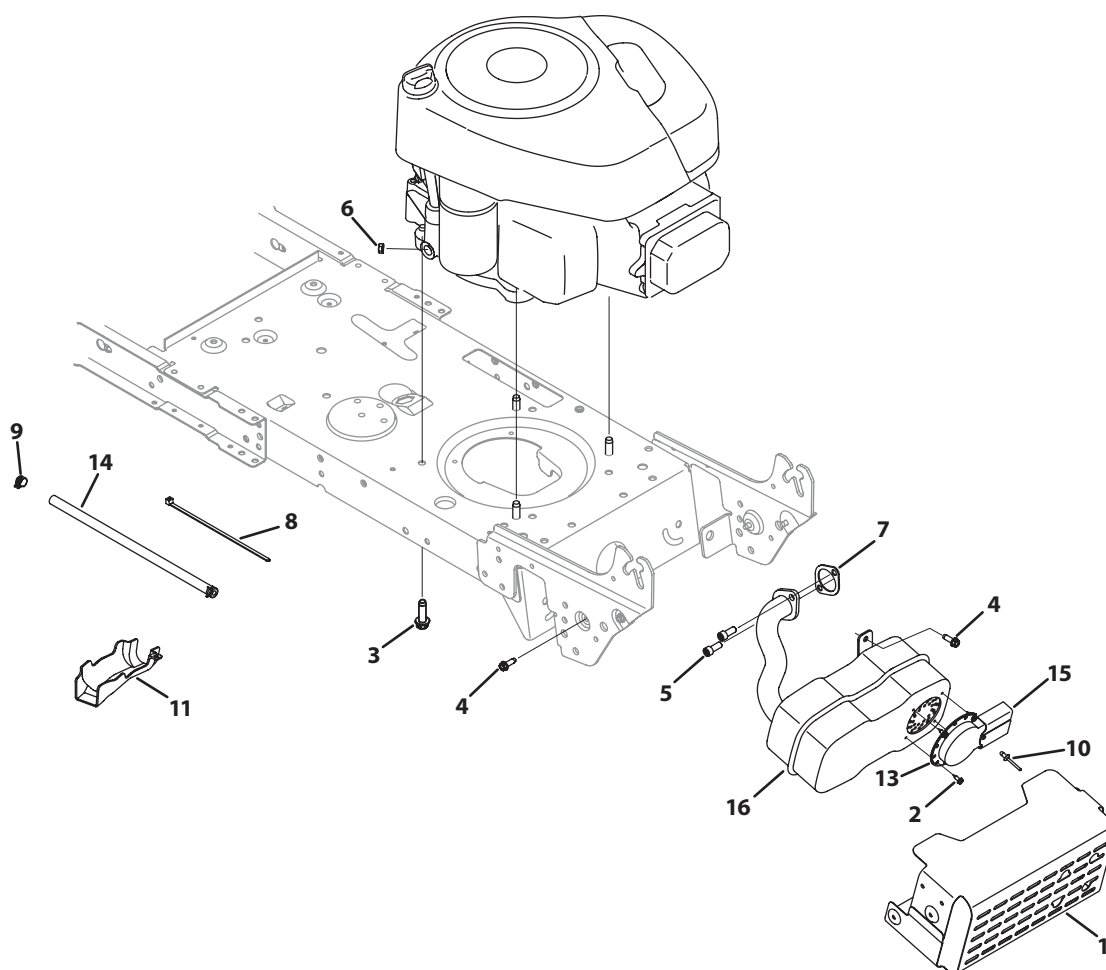

Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	728-04000	Rivet, .188 x .300
11	731-05628	Oil Drain Sleeve
12	751-10448A	Muffler, Single Inlet
13	751-0564B	Muffler Deflector
14	751-10349	Fuel Hose, Low Permeation
15	751-10353	Muffler Deflector Long

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.