



**Product parameters**  
Working distance: 10m  
Impedance: 32Ω  
Sensitivity: 109±1.5dB  
Frequency Response: 20HZ-20KHZ  
Play time: 7H  
Standby time: 50H

**Packing list**  
Headset \*2  
Charging compartment \*1  
Type-C charging cable \*1  
Instructions \*1

**Product diagram**

**Wearing guide**

1. The earphones are rotated backwards and tightly fastened, making the earloop comfortable and fitting the curve of the back of the ear.

2. Adjust the comfortable range of the sound output position.

**Operating Instructions**

Power on	Long press for 2 seconds/Long press for 5 seconds
Shutdown	Long press the touch area
Voice Assistant	Press and hold for 2 seconds in the touch area
answer/End Call	Touch click
Reject calls	Press and hold for 2 seconds in the touch area
suspend/Play music	Touch click
Previous song	Double click on left ear
Next song	Double click on the right ear, single ear use can only achieve the next function
Volume increase	3 strikes on the right ear
Vol	Left ear 3 hits, single ear use can only achieve volume increase
Switching between Chinese and English	Main function key for 4-touches headphones when not connected to the phone

**Notes:**  
1.After opening the charging compartment, remove the headphones, and the left and right headphones will automatically connect. For new device connections, please open the device Bluetooth and search for "T35" to pair. After successful connection, you will hear "successful connection".  
2. The pairing status lasts for 5 minutes, and if pairing fails, it will automatically shut down.  
3.When charging, try to use the supplied charging cable for charging.  
4.Automatically shut down after 5 minutes of disconnection,  
5. If the battery level of the earphones is lower than 10%, the prompt "Low battery, please charge in a timely manner" (prompt once).  
6. Return to the effective distance within 5 minutes after exceeding the distance and automatically connect the device.  
7. If the product is not in use for a long time, it should be fully charged first and ensure that the device is in a shutdown state.  
8.After charging, please unplug the charging cable to avoid equipment damage caused by prolonged charging.

**Pay attention to**  
1. After opening the charging box cover, remove the headphones, and the headphones will automatically turn on and connect or pair. After the headphones are placed in the charging box and the cover is closed, the charging box will automatically charge the headphones and turn them off.  
2. Regularly clean and have a long lifespan. If not used for a long time, it is recommended to charge once every 15 days to extend the battery life. The charging part of the earphone tail plug is often wiped with cotton swab alcohol to help charge smoothly and avoid poor contact, which affects the user experience.  
3. The battery pack or battery combination shall not be exposed to lighting baking or similar overheating environments.  
4. Due to the fact that this product adopts wireless connection and is influenced by factors such as environment, phone brand, and usage behavior during daily use, it is normal for a brief slight sound lag to occur during music playback.

**Warn**  
1.Long term use of headphones at high volume may damage your hearing. It is recommended to only listen to calls and music at an appropriate volume.  
2. Please do not rinse or immerse the product in water to avoid damage.  
3. Do not disassemble products and accessories on your own to avoid damage and warranty failure.  
4. Do not subject the product to strong impact or vibration to avoid damage.  
5. Do not use chemical solvents or cleaning agents to clean the product.

**Product Warranty Card (Warranty Details)**  
1、 From the date of purchase to the three-month warranty period, if there is a malfunction of the machine, and it is confirmed by our company's technical personnel that the malfunction occurred under normal use, we will provide free repair and spare parts replacement services.

2、 In the following situations, the company will refuse to provide warranty services.

a. The product has been damaged due to incorrect operation, negligent use, or unexpected events such as natural or man-made disasters.

b. The product has been repaired and modified by non technical personnel of our company.

c. The product body number has been converted, altered, or removed.

d. The product does not follow the installation instructions provided by the original factory.

3、 The free service provided by this warranty card does not include product accessories or other decorative items.

4、 Our company will not be responsible for any direct or indirect losses incurred due to equipment damage.

5、 The content of this warranty card is subject to modification without prior notice.

**Warranty card**  
Warranty certificate, please fill it out carefully and keep it properly

Model\_\_\_\_\_

Disposition Date\_\_\_\_\_

Purchase Store\_\_\_\_\_

After sales phone number\_\_\_\_\_

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BGHP-T35