


DISHWASHER USER MANUAL

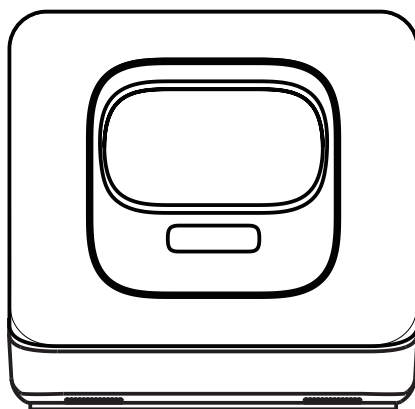

Item No. : DW8306S-WHITE
Model No. : WQP4-6206

Every appliance has passed the water test in factory.
It is normal if you found some water left in appliance.
Please feel free to use it.

⚠ Please read this instruction carefully before using and keep it safe.

CONTENTS

Important Safety Instructions	-----	A-01
Product Overview	● Parts of Dishwasher -----	B-01
	● Technical Information -----	B-02
	● Package List -----	B-02
Installation Instructions	● Installation diagram -----	C-01
	● Installation steps -----	C-01
	● Water tank Installation -----	C-03
Operating Instructions	● Control panel instruction-----	D-01
	● Overview of programmes -----	D-02
	● Adding detergent -----	D-02
	● Utensils selection -----	D-03
	● Tableware placement attention -----	D-03
	● The use of basket -----	D-04
Maintenance and Cleaning	● Clean the filter assembly -----	E-01
	● Clean the spray arms -----	E-01
	● Clean dishwasher interior -----	E-01
Service Information	● Error code list -----	F-01
	● Common fault approach -----	F-01
	● Disposal -----	F-03

Important Safety Instructions

Warning

There are some important safety instructions in this manual, Please read carefully before installing and using.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

And the dishwasher can only be used to wash household utensils.

The dishwasher will be damaged or the user will be injured when the operation is wrong.

- Please contact the after-sales service department immediately if the appliance breaks down. Do not reassemble or fix the appliance by yourself.
- Please contact the after-sales service department or the maintenance department that vendor assigned for fixing or displacing if the power cord is damaged.
- The power source of dishwasher has to adopt earth line for safe. This adoption will protect the person maximumly, who is shocked by leakage.
- Disconnect the power cord at stormy.
- After installation, please make sure the connection of water and power well connected before using.
- The installation position of drainage pipe could not exceed 40cm higher than the top of the appliance, which will cause

poor drainage, electrical leakage and water leakage.

- Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.
- This dishwasher is an automatic appliance, do not add water manually when the appliance is working. It will cause overflow and danger.
- Do not move or clean appliance when it is working. It might cause electrical or water leakage.
- Do not open the door during operation as the steam will hurt you. If it is necessary to load or unload some utensils, please push pause button and wait 10 seconds, then open the door slightly and wait for the steam dissipate completely, then open the door and move your utensils.
- Please use specialized detergents. Do not use washing-up liquid, washing powder, hand sensitizer soap or others detergents that are not specialized for dishwasher.
- There are some cable ties on the drainage pipe and power cord, please use flat scissors to cut the ties. Sharp scissor might burst the pipe and cord and cause leakage.
- Do not try to use this appliance in damp place. High humidity will make the appliance rust, even leakage.
- The specialized detergent should be put on the place where kids can not reach. because the detergents are contains acidoid and alkaline, which are really dangerous to kids.
- Utensils will be hot after washing, please take it out after 30 minutes.
- Please keep the appliance at room temperature for 8 hours after receiving the product in winter, To avoid the droplets appearing on the surface of the glass, and it may damage the appliance.

- The appliance is to be connected to the water mains using new hose sets and that old hose-sets should not be reused. During installation, the power supply must not be excessively or dangerously bent or flattened.
- Please use flat scissors to cut the tie of water pipes and power lines when unpacking boxes.
- Position the appliance in the desired location. Confirm that the machine has been leveled.
- Please don't put anything else on either side, The openings must not be obstructed by a carpet.
- Please use cold water or warm water not exceeding 120°F.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The door should not be left in the open position since this could present a tripping hazard.
- Please keep kids stay away from the dishwasher, especially when the door opens.
- After using the appliance, please cut off the power and water.
- WARNING: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

WARNING : When using your dishwasher, follow basic precautions, including the following:

- a) Read all instructions before using the dishwasher.
- b) Use the dishwasher only for its intended function.
- c) Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of the reach of children.
- d) When loading items to be washed:
 - 1) Locate sharp items so that they are not likely to damage the door seal;
 - 2) Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- e) Do not wash plastic items unless they are marked “dishwasher safe” or the equivalent. For plastic items not so marked, check the manufacturer’s recommendations.
- f) Do not touch the heating element during or immediately after use.
- g) Do not operate your dishwasher unless all enclosure panels are properly in place.
- h) Do not tamper with controls.
- i) Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- j) To reduce the risk of injury, do not allow children to play in or on a dishwasher.

- k) Under certain conditions, hydrogen gas might be produced in a hot-water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot-water system has not been used for such a period, before using the dishwasher turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- l) Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.



Grounding instruction

- This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug.
- The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in a risk of electric shock.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance; If it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- Please do not use power strip.

CONSIGNE DE SÉCURITÉ IMPORTANTES

Veuillez lire attentivement avant l'installation et la première utilisation, Cet appareil est destiné à être utilisé dans des applications domestiques et similaires telles que:

- les cuisines du personnel dans les magasins, les bureaux et autres environnements de travail;
- maisons de ferme;
- par les clients des hôtels, motels et autres environnements de type résidentiel;
- environnements de type chambre d'hôtes.

Et le lave-vaisselle ne peut être utilisé que pour laver les ustensiles ménagers. Le lave-vaisselle sera endommagé ou l'utilisateur sera blessé si l'opération est incorrecte.

- Veuillez contacter immédiatement le service après-vente en cas de panne de l'appareil. Ne remontez pas et ne fixez pas l'appareil vous-même.
- Veuillez contacter le service après-vente ou le service de maintenance désigné par le vendeur pour la réparation ou le déplacement si le cordon d'alimentation est endommagé.
- La source d'alimentation du lave-vaisselle doit adopter une ligne de terre pour plus de sécurité.
- Cette adoption protégera au maximum la personne qui est choquée par une fuite.
- Débranchez le cordon d'alimentation par temps d'orage.
- Après l'installation, veuillez-vous assurer que la connexion de l'eau et de l'électricité est bien connectée avant de l'utiliser.

- La position d'installation du tuyau de drainage ne peut pas dépasser 40 cm plus haut que le haut de l'appareil, ce qui entraînera un mauvais drainage, des fuites électriques et des fuites d'eau.
- Les couteaux et autres ustensiles pointus doivent être chargés dans le panier avec leur pointe vers le bas ou placés en position horizontale.
- Ce lave-vaisselle est un appareil automatique, n'ajoutez pas d'eau manuellement lorsque l'appareil fonctionne.
Cela entraînera un débordement et un danger.
- Ne déplacez pas et ne nettoyez pas l'appareil lorsqu'il fonctionne. Cela pourrait provoquer des fuites d'électricité ou d'eau.
- Le détergent doit être placé à un endroit que les enfants ne peuvent pas atteindre puisque les détergents contiennent des acides et des alcalins, qui sont vraiment dangereux pour les enfants.
- Les ustensiles seront chauds après le lavage, veuillez les retirer après 30 minutes.
- Veuillez conserver l'appareil à température ambiante pendant 8 heures après avoir reçu le produit en hiver, pour éviter que des gouttelettes n'apparaissent sur la surface du verre et endommagent l'appareil.
- L'appareil doit être raccordé au réseau d'eau à l'aide de nouveaux ensembles de tuyaux. Les anciens ensembles de tuyaux ne doivent pas être réutilisés.

- Lors de l'installation, l'alimentation électrique ne doit pas être pliée ou aplatie excessivement ou dangereusement.
- Veuillez utiliser des ciseaux plats pour couper le lien des conduites d'eau et des lignes électriques lors du déballage des boîtes.
- Placez l'appareil à l'emplacement souhaité. Vérifiez que la machine a été mise à niveau.
- Veuillez ne rien mettre d'autre de chaque côté, les ouvertures ne doivent pas être obstruées par un tapis.
- Utilisez de l'eau froide ou de l'eau tiède ne dépassant pas 49°C.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, à moins qu'elles n'aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
- Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son agent de service ou des personnes de qualification similaire afin d'éviter tout danger.
- La porte ne doit pas être laissée en position ouverte car cela pourrait présenter un risque de trébuchement.
- Veuillez garder les enfants à l'écart du lave-vaisselle, surtout lorsque la porte est ouverte.
- Après avoir utilisé l'appareil, veuillez couper l'eau.

AVERTISSEMENT : Lors de l'utilisation du lave-vaisselle, suivez les précautions suivantes :

- a) Lisez toutes les instructions avant d'utiliser le lave-vaisselle.
- b) N'utilisez que des détergents recommandés pour une utilisation dans un lave-vaisselle et gardez-les hors de portée des enfants.
 - 1) Localisez les objets pointus pour qu'ils ne risquent pas d'endommager le joint de la porte ;
 - 2) Chargez les couteaux tranchants avec les poignées vers le haut pour réduire le risque de blessures de type coupure.
- c) Ne lavez pas d'articles en plastique à moins qu'ils ne portent la mention «Va au lave- vaisselle» ou l'équivalent. Pour les articles en plastique non marqués, consultez les recommandations du fabricant.
- d) Ne touchez pas l'élément chauffant pendant ou immédiatement après l'utilisation.
- e) Ne déplacez pas votre lave-vaisselle en cours d'utilisation.
- f) Ne modifiez pas les commandes.
- g) Ne pas s'asseoir ou se tenir debout sur la porte ou le panier à vaisselle du lave-vaisselle.
- h) Pour réduire le risque de blessure, ne laissez pas les enfants jouer dans ou sur un lave-vaisselle.

i) Dans certaines conditions, de l'hydrogène gazeux peut être produit dans un système d'eau chaude qui n'a pas été utilisé pendant deux semaines ou plus. **LE GAZ HYDROGÈNE EST EXPLOSIF.**

Si le système d'eau chaude n'a pas été utilisé pendant une telle période, avant d'utiliser le lave-vaisselle, ouvrez tous les robinets d'eau chaude et laissez l'eau s'écouler de chacun pendant plusieurs minutes. Cela libèrera tout l'hydrogène gazeux accumulé. Le gaz étant inflammable, ne fumez pas et n'utilisez pas de flamme nue pendant ce temps.



j) Retirez la porte du compartiment de lavage lors de la mise hors service d'un ancien lave-vaisselle ou de sa mise au rebut.

Prise de terre

- Cet appareil doit être mis à la terre. En cas de dysfonctionnement ou de panne, la mise à la terre réduira le risque de choc électrique en fournissant un chemin de moindre résistance au courant électrique. Cet appareil est équipé d'un cordon avec un conducteur de mise à la terre de l'équipement et une fiche de mise à la terre.
- La fiche doit être branchée dans une prise appropriée installée et mise à la terre conformément à tous les codes et règlements locaux.
- Une mauvaise connexion du conducteur de mise à la terre de l'équipement peut engendrer un choc électrique.
- Vérifiez auprès d'un électricien qualifié ou d'un représentant de service si vous n'êtes pas sûr que l'appareil soit correctement mis à la terre. Ne modifiez pas la fiche fournie avec l'appareil ; S'il ne rentre pas dans la prise. Faites installer une prise appropriée par un électricien qualifié.
- Veuillez ne pas utiliser de multiprise.

Product Overview

- Parts of Dishwasher

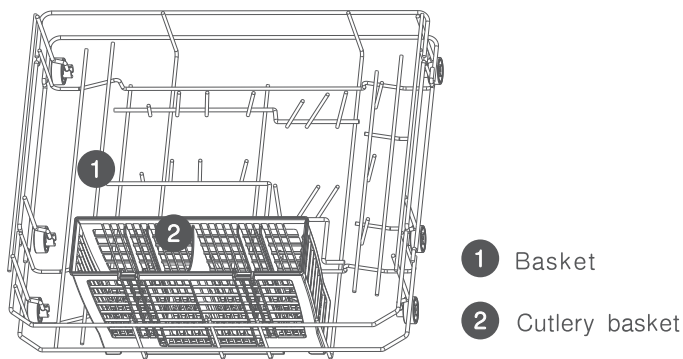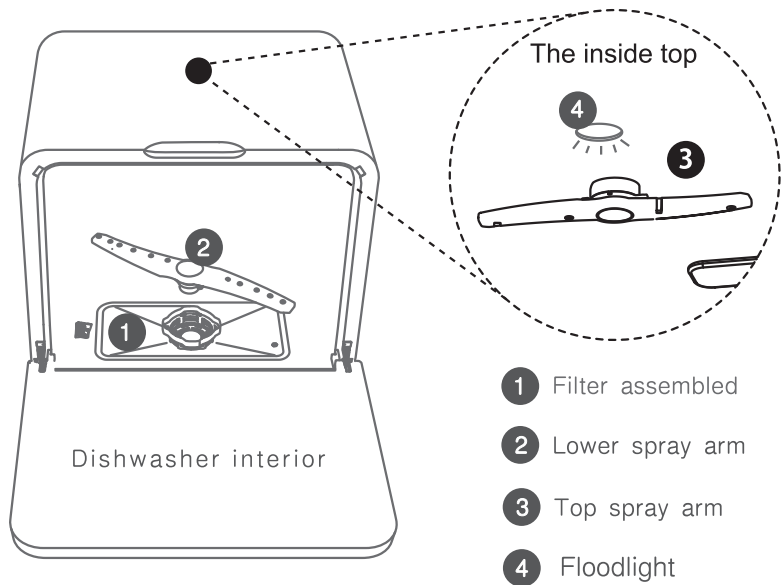

(Pictures for reference only. The actual product shall govern.)

● Technical Information

Capacity	2 Place settings + 6 Serving pieces		
Waterproof	IPX1	Nominal voltage	AC120V
Rated power	785W	Frequency	60Hz
Water pressure	5.8–145PSI	Inlet Water temperature	≤120°F
Outline size	W440 X D413 X H424mm		
Implementation standards	UL749		

*Due to the continuous improvement of products, such as the technical parameters in this manual are modified without prior notice.

● Package List

*Please check the accessories one by one after you open the box. Please contact the seller if there is any shortage or damage.


Name	Quantity
Complete appliance	1
Basket	1
Cutlery basket	1
User instruction	1
Suction pipe	1

Name	Quantity
Inlet hose	1
Clamping band	1
Drain hose	1
Water tank	1

*NOTICE:
Please use flat scissors to cut the tie of water pipes and power lines.

Installation Instructions

● Installation diagram

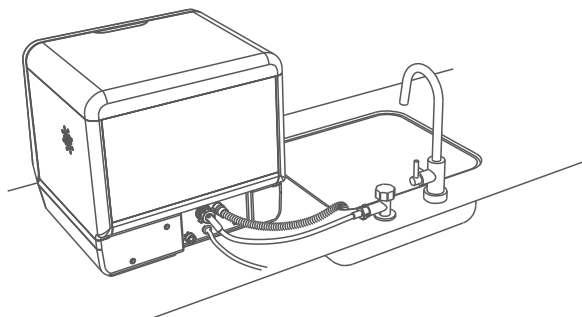


Running water inlet

This is the default installation mode. It is recommended that this mode be selected for installation in good installation conditions. Refer to Steps **1** and **2** for installation.


NOTICE: When the first time that water in ,the water in appliance turns yellow which is normal; Because the water softener is in water for a long time. Please feel free to use it.

● Installation steps


1 Installation of inlet pipe

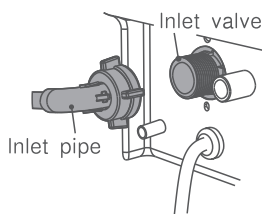

1. Find the inlet port at the back of the appliance, connect the wider end of the house to it and tighten it clockwise.

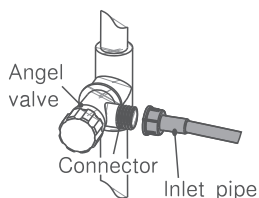


2. Please connect the narrower end of the hose to the tap.

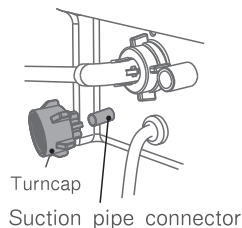

3. For this way of injecting water, please tighten the stopper on the suction port to avoid leakage from it.

2 Installation of drain pipe

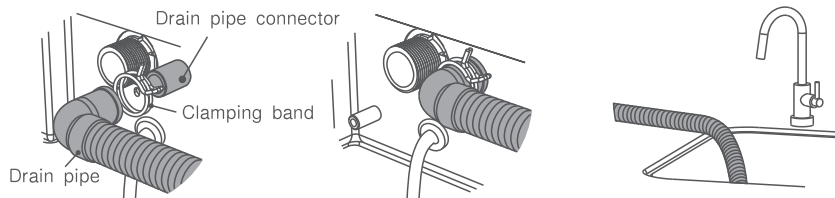

1.Connect the drain and drain port.

2.The drain pipe should be fixed by the clamping band.

3.Please put the free end of the drain pipe into the sink or sewer.


Notes:

1. Please use cold water or warm water not exceeding 120°F.
2. The inlet pipe and drain pipe can not be folded, otherwise may affect the washing effect.
3. Ensure that the appliance is situated securely on the floor; otherwise it will cause overflow and electric leakage. Take the package out from appliance.
4. After installation, please retain all documents and components for later use or for the subsequent owner.


⚠ Warning!

The inlet pipe can not be recycled. Do not use the old inlet pipe in installation.


● Water tank Installation

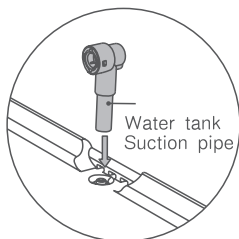

- A** Insert the water tank suction pipe into the water inlet of the water tank according to the direction shown in the figure.

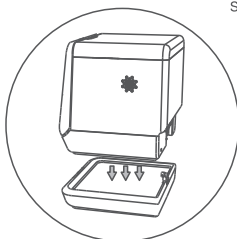


- B** After the water tank is placed horizontally on the table top, lift the machine and put it down at the groove of the water tank.

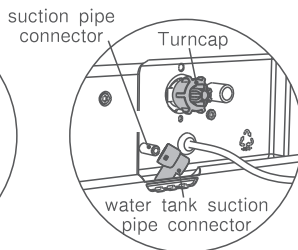


- C** After the water tank suction pipe connector is buckled to the water suction pipe connector, screw the screw cap into the water inlet valve interface according to the direction shown in the figure, otherwise the interface may seep.

● Use of water tank

Note: before adding water to the water tank, please check whether the power supply of the machine is connected; whether the drain pipe and water suction pipe of the water tank are connected properly.

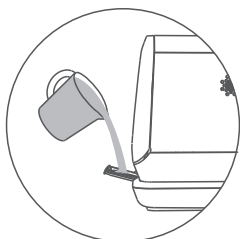

- A** After pulling out the water drawer of the water tank, pour the water in the kettle. Pay attention not to pour water too fast to prevent water splashing.
- B** In the process of adding water, when the “” lights up on the display screen with beeping sound, it indicates that the water tank is full of water. At this time, please stop adding water and push the water drawer back to the water tank, and then press the power button to start the machine.

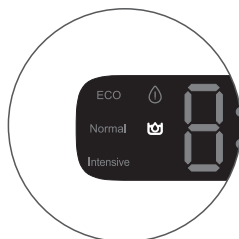


⚠ Warning!

- The full water icon can only be illuminated when it is normally powered on! After the full water icon is on, please do not continue to add water, which will exceed the capacity of the water tank and cause overflow.
- Please clean the water tank every month.
- Please pour out the residual water in the water tank, if the water tank will not be used for a long time.

Operating Instructions

● Control panel instruction

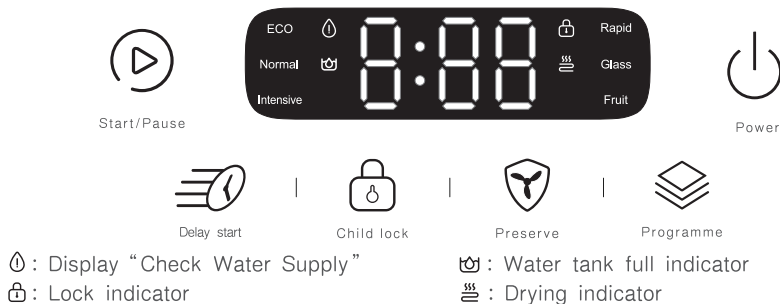

1 Operate the dishwasher

Close the door of the dishwasher and start the appliance by pressing for one second.



Change wash programme with button. Please select a suitable programme .

The indicator lamps flash, it means the dishwasher is working.

Eco



Start wash programme by pressing button.

2 Overview of programmes



You can delay the start of the programme by up to 24 hours.



Start the appliance

Select suitable programme

Press button, the display repeatedly shows H:00 H:01...H:24. Select delay start time. If press for 3 seconds, the screen will be reset to H:00, which means no preselection.

Press button to delay the start of the programme



The preserve has the function of regular ventilation and storage, which can effectively remove odor, mildew and moisture and so on. The "Dry" indicator on the display is on when you select it. The dishwasher will run this function after the washing procedure. Please press the button when you need to cancel this function. The dishwasher will not start this function after the washing procedure is completed and the "dry" indicator on the display is turned off.



It means button lock. You can secure your appliance from being unintentionally the programme terminated (e.g. improper operation by children).

Activating the button lock: Hold down the button for 3 seconds until "Lock" is indicated on the digital display.

Deactivating the button lock: Hold down the button for 3 seconds until the display "Lock" goes out

● Overview of programmes

Special dishwasher detergent will remove oil and food residues. It is a must every time you use the appliance. Detergent dosage depends on the amount of and type of soiling.

Programme	Type of soiling	Consumption of detergent		Wash cycle
		washing powder/	washing tablet	
Eco	Part dried, common household food remnants	9g	1pcs	2:25
Normal	Little dried, normal household food remnants	9g	1pcs	1:00
Intensive	Very adhesive burned-in or dried-on food remnants	9g	1pcs	2:00
Rapid	Fresh food remnants, Light and less oil.	—	—	0:35
Glass	Slightly adhesive, temperature-sensitive plastic and glasses	9g	1pcs	1:30
Fruit	Suitable for cleaning fruits and vegetables	—	—	0:18

*Notes: Please don't overuse the detergent. Excessive detergent will not only produce a lot of bubbles, but also affect the cleaning effect.



Please choose the suitable washing tablet, you should use the small one for this appliance.

The actual runtime of each program is possibly different from the preset time cycle due to the water temperature, the number of utensils, the type of soiling and the recovery of water softening. It is a normal condition, please use it with confidence.

● Adding detergent

Add the required amount of detergent after pushing basket.

Please put the detergent in the designated place.

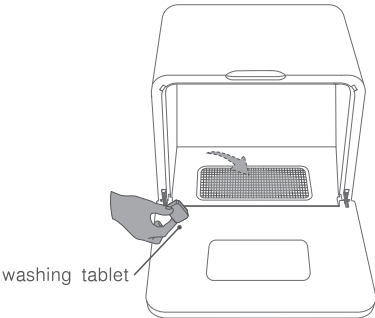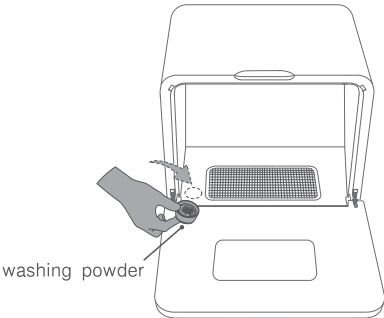

● Utensils selection

Dishwasher-proof utensils:



Ceramic tableware



Glassware



Stainless steel tableware

Utensils notes:

1. Precious metal, aluminum and colored glaze utensils may turn cloudy after being washed in a dishwasher.
2. Cutlery made of bamboo or wood: It may come loose or crack at high temperatures.
3. Plastics items: Please see manufacturer's instructions for plastic cutlery or items with plastic parts, because these items may come loose or crack at high temperature.
4. Cleaning cloth: Cleaning cloth may cause dishwasher fault.
5. Cast iron items: Cast iron items may rust after being washed in a dishwasher.

● Tableware placement attention


1. Remove large food remnants such as bones or leaves.
2. All utensils with dirt should be face down. If their opening face or closing face down will leave the water on the top.
3. Utensils are secure and cannot tip over, one place for one utensil.
4. Do not let the utensils out of basket to obstruct rotation of spray arms.
5. The small size of utensils might drop out from the basket and obstruct the spray arms rotation, Please do not put these small items in the appliance.
6. When pushing basket back, do not let the sharp parts of utensils cut the seal.
7. The top coat of basket can not be scratched, or it will be rusted.
8. Place cutlery, always unsorted with the tips face down, in the cutlery basket.

TIPS:

Flip the spray arm after pushing basket, to check if the spray arm still can rotate.

WARNING: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.


● The use of basket

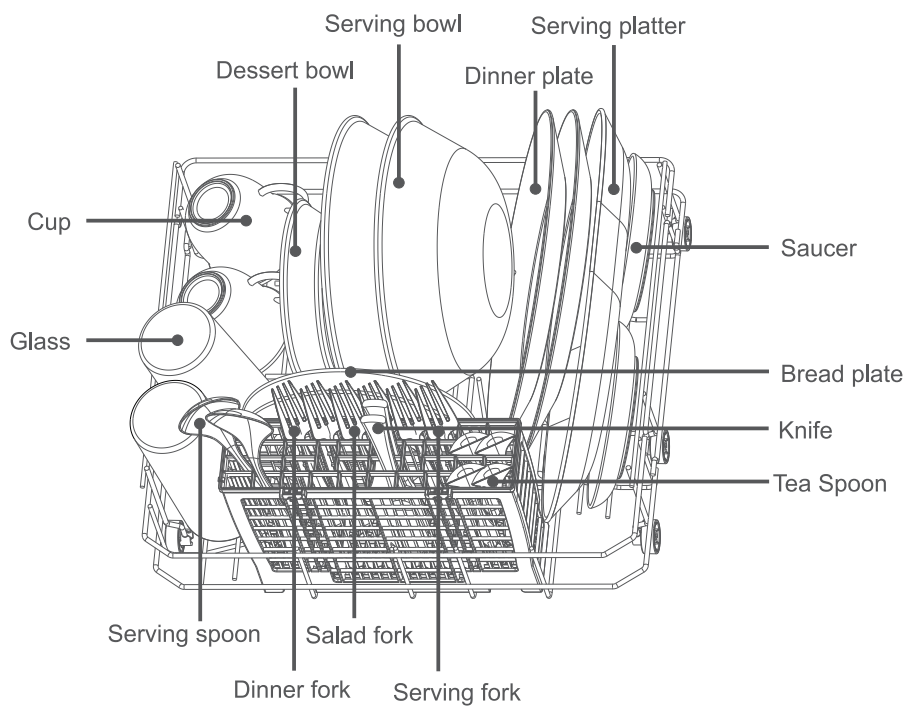


Maintenance and Cleaning

● Clean the filter assembly

After appliance ran a while, there will be some residue and other things left in it. Please clean it when you see the residue and things, also clean the appliance immediately.

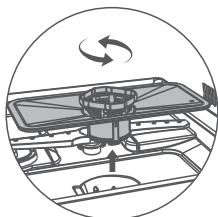


- A** Make sure the power is off. Turn the filter assembly out with anticlockwise. And put the filter assembly back with clockwise.

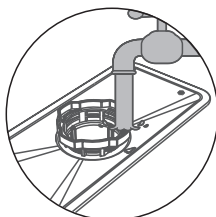


- B** Use flowing water to flush filter assembly. Do not use steel wool or iron brush, it will cause the filter rust.


● Clean the spray arms

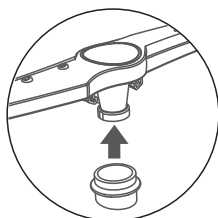

- A** Pull the main basket out of appliance, and lift the lower spray arm a little bit for loss the clips.

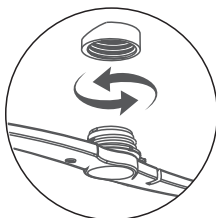

- B** Turn the upper spray arm out with anticlockwise. And put the upper spray arm with clockwise.

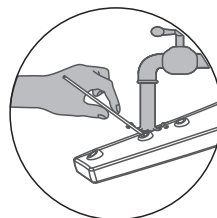

- C** Check if the spray arms blocked. If it does, please use a thin wire to pull the blockages out or flush the hole with water.

● Clean dishwasher interior

Leaky seal and the seal of door should use the wet damp cloth to clean. Clean the dead corner, Inside the dishwasher with citric acid and wet cloth. Please use specialized detergent to clean liner of dishwasher and inner pipeline with instruction.

Service Information

● Error code list

Error code	Cause	Remedy
E01	Thermistor short circuit	Please contact the after-sales service department.
E02	Thermistor open circuit	Please contact the after-sales service department.
E03	The machine is not heated	1. Please make sure the utensils be placed correctly. Water will be lacking if it is in the plate/bow. 2. Please contact the after-sales service department.
E04	Inlet valve failure	Please contact the after-sales service department
E05	Overflow	1. Lean the appliance about 30° to 45° to pour out the water in the bottom plate. 2. Check if the drainage pipe is placed too high. 3. Check if the pipe is tied a knot, blocked or pressed. 4. Check if the appliance is placed right. 5. Exclude above cause, try to restart the appliance again. Please contact the after-sales service department.
E06	Heating function abnormal	Please contact the after-sales service department.
E10	Water inflow abnormal	1. The tap was not fully opened. 2. Small inflow and low water pressure. 3. Start-up multiple times in case of water shortage. 4. Please contact the after-sales service department.

● Common fault approach

Problem	Cause	Remedy
The washing powder and washing tablet have not been cleaned up	1. The holes of spray arm have been blocked, the washing powder can not be flushed out.	Clean the holes of spray arms and run the quick wash mode again to clean the utensil.
	2. Put too much washing power.	Run the quick wash mode again and put moderate washing powder as instructed next time.
	3. Used low-quality washing power.	Use specialized washing powder and washing tablet with quick wash mode to wash the utensil again.
	4. Improper placement of detergent.	Reference "Adding detergent" .
Some drops in the inner of liner	It's normal and it won't impact the utensil.	
Some foam in the liner	Didn't use specialized washing powder or put too much washing powder in it.	If there's not much foam, you can open the door and let the foam come less and less; If there's too much foam, you can remove it with tools. At last, restart any programme about 3 minutes. Redo this again and again until the foam is disappear.
Utensils is wet	1. Utensils be piled up and without lean.	Refer to utensils place rule.
	2. The washing process is still running.	Wait until process finished.
	3. Programme selected without drying.	Select programme with drying. (See overview of programmes.)
Appliance makes the noise as blowing something when is plugging. And the display shows 'FAN'	The air renewal system is working.	It's normal situation.

Problem	Cause	Remedy
No reflection after turn on the power	1.If all the lights were off and no reflection when you press the button, there are possibilities that you didn't plug in the power or the power was blackout.	Please plug the power in and make sure the power have no issue.
	2.No power or the lights was blackout.	Clean plug the power in and make sure they are dry.
	3.All the lights are on, it might on the childproof locking mode.	Unlock the childproof lock.
	4.The time that touch power icon is too short.	Press the power icon for 1 second.
Have no reflection when pressing any button except for the power button.	1.Have not closed the door.	close the door.
	2.There are greasy dirt or water on the glass and hand.	Clean plug the power in and make sure they are dry.
	3.All the light are on, it might on the childproof locking mode.	Unlock the childproof lock.
	4.PCB lock of door is broken.	Please contact the after sales service department.
The water light in control panel is lighting when water comes in.	1.Check if the water supply has problem.	Make sure the water supply have no problem.
	2.The flowmeter is broken.	Please contact the after sales service department.
	3.The filling valve is broken.	Please contact the after sales service department.
The water light in control panel is lighting when water comes in from the Suction pump.	1.There is no water in the container or the suction pipe is not in the water.	Please add water to the container and make sure the suction pipe is in the water.
	2.Dirty clogging of suction pipe filter.	Clean the filter screen of the suction pipe.
	3.The filling valve is broken.	Please contact the after sales service department.
The water intake time is longer when water comes in from the suction pump	It's normal and be free to use.	/
Have crashing noise when it is working	Place the utensil in improper way ,some utensils is obstructing the spray arms; or some utensils are crashing each other.	Unload the dishwasher and replace the utensils in proper way.
The utensil was not cleaned up	1.utensils be piled up and without lean.	Refer to utensils place rule.
	2.Do not choose the right programme of washing.	Please choose the right programme of washing.
	3.Do not use pecialized washing powder or put too little of washing power.	Use specialized washing powder and put enough of it before washing.
	4.Do not install the filter in right position and the food remnants get in it.	Re-install the filter in right position.
	5.The spray arms were blocked.	Clean the inner part of spray arms.
	6.The spray arms are stuck.	Check if the spray arm is stuck by the utensil.
	7.Some food remnants are sticking on the utensil.	Soak the utensil for a while before washing.
	8.Black out when the appliance is working.	Restart the washing programme.
	9.Some food remnants are too hard to wash.	Suggest wash utensil with steel wool before put it in appliance to wash.
A lot of water was left in appliance when is not working	1.The position of drainage pipe is too high.	Refer to drainage pipe installation.
	2.The drainage pipe is tied,blocked or pressed by something heavy.	Untie the pipe and remove the heavy thing.
	3.Drainage pump is broken.	Please contact the after sales service department.
	4.The filling valve is broken.	
Overflow happens when adding more water into the water tank, but the "Full" icon is not on	1. The PCB main panel malfunctions	Please contact the after sales service department.
	2. The water level detection switch malfunctions.	
	3. The floater is stuck.	
Water reduces in the water tank while the "Full" icon stays on.	The floater gets stuck.	Open the water tank and adjust the floater.

If the solutions above can not fix the problems, please stop to use appliance immediately and cut off the power and water supply. Please contact the after-sales department.



The presence of this logo on the product means that the disposal of the device is governed by directive 2012/19/EU dated July 4, 2012 on waste electrical and electronic equipment(WEEE). Any hazardous substance contained in electrical or electronic equipment can have a potential impact on the environment and health during its recycling. Consequently, at the end of the useful life of the device, it must not be disposed of with unsorted municipal waste. Your role as an end consumer is

essential in terms of reuse, recycling and obtaining other types of value creation from this product. You have the choice of different collection and exchange systems organized by local authorities (recycling centers) and distributors. It is your duty to make use of these possibilities.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC 28407

Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826

