

## 52" Ceiling Fan with LED Remote Guide

MEW-F352100W, MEW-F352100BK, MEW-F352100BR

www.maxximastyle.com



### WARNINGS





- Risk of fire or electric shock.
- Non-rechargeable batteries are not to be recharged.
- Do not dispose of batteries in fire or trash can. Batteries may explode or leak.
- Do not make or alter any holes in the wiring enclosure or modify any electrical components.

### CAUTIONS

- Insert batteries with the correct polarity.
- Install a 1.5V (AAA) battery x 2 (not included).
- To prevent damage to transmitter, remove batteries if not used for long periods of time.
- Indoor use only.
- Remote operates under FCC standards with Radio Frequency.

### Guide

1. LED indication light.
2. Total OFF: Used to turn off the fan and LED at the same time.
3. Mute: Silences all sound notifications from the device. Press again to cancel and have a beep everytime a button is transmitted to the reciever.
4. Yellow CCT: 3000K warm white.
5. White CCT: 4000K natural white.
6. Blue CCT: 5000K daylight.
7. Fan OFF: Turns the fan OFF.
8. Fan speeds 1-6: Selecting a speed will turn the fan ON. 1 - lowest speed, 6 - highest speed.
9. Light ON/OFF: Turns the light ON and OFF.
10. +/- for light: Changes the brightness of the light. (-) - reduces brightness, (+) - increases brightness. (+) or (-) can be held down for faster change.
11. Breeze mode: Fan speeds automatically cycle between fan speeds from 1 to 6.
12. Vacation mode: Switches the light and fan on for 5 minutes every 2 hours.
13. Reverse function: Changes the direction of rotation. Counterclockwise for Summer - wind flow is downwards. Closswise for Winter - wind flow is upwards.
14. Timer fnction: Fan and light turn off after 2, 4, or 8 hours.

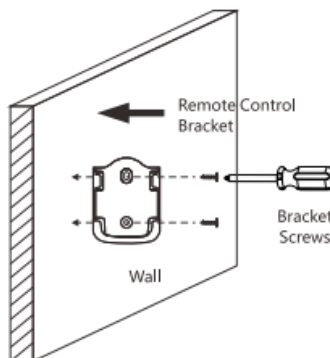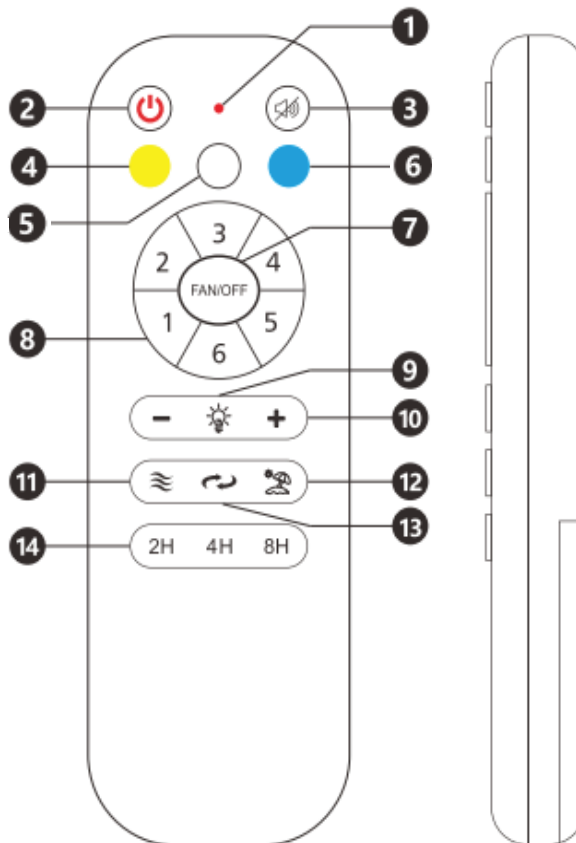

#### Remote Control Bracket:

If you wish to use the remote control bracket on a wood surface, install bracket screws from remote pack through bracket and into the desired installation site.

**\*\*NOTE: To pair a remote to the reciever, once power is supplied to the unit, within 5 seconds hold the 2 (Total OFF) and 3 (Mute) buttons for 2-3 seconds. You should hear a long beep. Remote is now paired.**

### 5 YEAR WARRANTY

Maxxima extends a 5 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warrantied product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.