

### HTC

无线蓝牙耳机21



**快速入门指南**  
使用前请阅读使用说明书  
HTC NE21

### 产品规格

型号: HTC NE21


**蓝牙**  
范围: ≈10m  
版本: 6.0

**喇叭**  
直径: 14.2mm  
阻抗: 16Ω

**耳机功率**  
输入: 5V=30mA  
电池容量: 30mAh  
使用时间: ≈4小时  
充电时间: ≈1.5小时


**充电仓功率**  
输入: 5V=300mA  
输出: 5V=60mA  
电池容量: 300mAh  
充电时间: ≈1.5小时  
充电仓充满电时, 能给耳机充电4次

### 物品清单

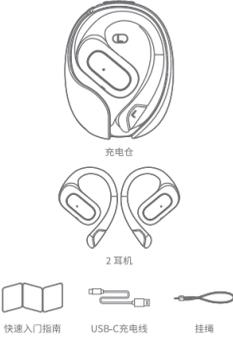

快速入门指南  
USB-C充电线  
挂绳

### 部件

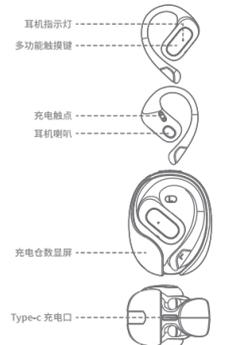

耳机指示灯  
多功能触摸键  
充电触点  
耳机喇叭  
充电仓显示屏  
Type-C 充电口


### 取出耳机并配对



如果您是第一次使用耳机, 请将两个耳机从充电仓中取出, 其中一个耳机的LED灯将会交替闪烁白灯和青灯, 表示它们处于配对模式。

注:  
• 如果耳机未与任何设备配对, 打开后会自动进入配对模式。配对成功后, 您会听到两声滴声。  
• 如果耳机之前已配对, 打开后会自动重新连接。连接时您会听到嘟嘟声。

### 如何佩戴耳机

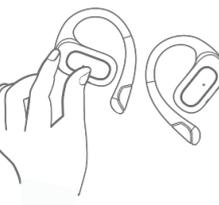

**1**



**2**



**3**



**4**

### 开机和关机



**开机**  
自动开机: 将耳机从充电仓中取出, 耳机开机。  
手动开机: 长按3秒, 耳机开机。

**关机**  
自动关机: 耳机放入充电仓中, 耳机关机。  
手动关机: 长按5秒, 耳机关机。

注: 当耳机开机后, 3分钟内未与蓝牙设备配对, 便会自动关机; 当配对的蓝牙设备超出信号有效连接距离, 且未重新连接时, 3分钟后, 耳机自动关机。

### 连接到蓝牙设备



在您的设备上, 打开蓝牙并选择连接到“HTC NE21”。

### 基本操作



开机/关机: 3s/5s  
音乐模式: x2, x3  
清除蓝牙配对历史记录: x5

### 功能操作


- 暂停/播放: 轻触任一耳机一次
- 音量加: 轻触右耳机二次
- 音量减: 轻触左耳机二次
- 上一曲: 轻触左耳机三次
- 下一曲: 轻触右耳机三次
- 接听/挂断电话: 轻触任一耳机一次
- 通话拒接: 按住任一耳机2秒
- 启动语音助手: 按住左耳机2秒
- 注: 单耳使用时, 按住已开机的耳机1秒, 均可激活语音助手
- 游戏模式与音乐模式切换: 按住右耳机2秒切换
- 注: 单耳使用时, 无法切换游戏模式和音乐模式
- 注: 出厂设置默认为音乐模式
- 注: 通知音较大的是游戏模式

**指示灯显示**

耳机指示灯	状态
白灯和青灯交替闪烁	两个耳机: 开机
白灯常亮	单耳机: 未配对
灭灯	配对成功或充满电

充电仓指示灯	状态
常亮	耳机充电中
闪烁	充电仓充电
显示100%	充电仓充满电

### 如何清除蓝牙配对历史记录

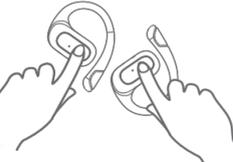

双耳从充电仓取出后会自动开机配对, 耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下, 分别对左耳机和右耳机连续五次多功能键, 提示音“嘟”四声后, 耳机自动关机后将双耳机放回充电仓, 再将双耳机取出, 双耳机会自动配对, 完成后即可连接蓝牙设备使用。

适用于以下情况:  
A: 双耳无法配对时, 单边配对时, 双配对时。  
B: 使用单耳机分别连接不同蓝牙设备时。  
C: 清除连接的所有蓝牙设备时。

特别提示:  
当单耳机出现无声, 或者无法配对时, 请按以上恢复重置操作。

### 产品中有害物质的名称及含量

部件名称	有害物质				
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB) 多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○
外壳等小零部件	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。  
○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。  
表格标记“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件: 包括印刷电路板及其零件, 电子元件等, 根据产品型号不同, 您所购买的产品可能不会含有以上所有部件

### 重要安全说明

在使用本产品之前, 请仔细阅读本说明书中的所有安全说明。

**常规安全说明**

- 小心使用本产品, 并将其存放在没有极端温度、高压和潮湿的清洁环境中, 确保产品存放在不易受挤压的地方。
- 维修和更换只能由授权的售后服务人员进行。请勿自行拆卸或更换产品的任何部件, 以防受伤或损坏设备。对产品的任何未经授权修改都将使保修无效。
- 仅在允许蓝牙传输的环境中使用本产品。

**个人安全说明**

- 如果产品有明显缺陷或出现膨胀或温度过高等异常, 请勿使用。
- 执行需要全神贯注的高风险任务时, 请勿使用本产品。
- 为了保护您的听力, 请勿长时间高音量收听。
- 请将产品及包装存放在儿童和宠物接触不到的地方, 以防发生吞嚼和窒息等事故。

**电池安全说明**

该产品内置可充电电池, 请阅读以下说明, 确保安全使用和处置。

- 请勿将产品长时间暴露在热源中, 如明火或阳光直射。
- 仅将产品存放在环境温度为 0 至 35°C (32 至 95°F) 的环境中。
- 请勿在易产生灰尘、烟雾、高温、高压或高温度的环境中使用或存放本产品。
- 保持产品干燥, 远离液体或湿气。
- 只能使用经 FCC 或 CCC 认证、输出电压为 DC 5V/1A 的充电器。
- 充电时不要使用本产品。
- 产品充电时间不要超过 8 小时。
- 按照当地的废物管理法规负责任地处理产品。


### 法律声明

HTC和HTC标志为HTC公司的商标。  
授权给深圳市卜兰沃德科技有限公司使用。  
2025版©归深圳市卜兰沃德科技有限公司。  
本文件仅供参考, 不构成任何形式的保证, 本公司保留所有权利。



### HTC

Wireless Earphones 21

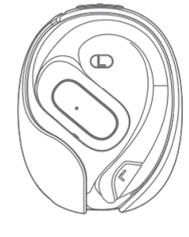

**Quick Start Guide**  
HTC NE21

### Product Specifications

Model: HTC NE21


**Bluetooth**  
Range: ≈10 m  
Version: 6.0

**Speaker**  
Diameter: 14.2 mm  
Impedance: 16 Ω

**Earphone power**  
Input: 5 V=30 mA  
Battery capacity: 30mAh  
Battery life: ≈ 4 hrs  
Charging time: ≈ 1.5 hrs


**Charging case power**  
Input: 5 V=300 mA  
Output: 5 V=60 mA  
Battery capacity: 300mAh  
Charging time: ≈ 1.5 hrs  
Earphone recharges: 4 charges (when case is fully charged)

### What's in the box

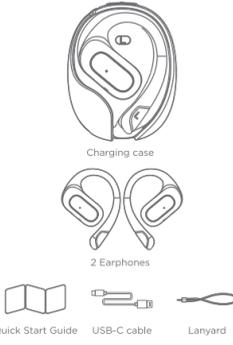


Quick Start Guide  
USB-C cable  
Lanyard

### Components

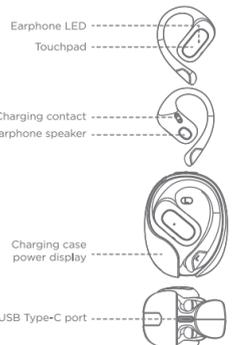

Earphone LED  
Touchpad  
Charging contact  
Earphone speaker  
Charging case power display  
USB Type-C port


### Take out and pair the earphones

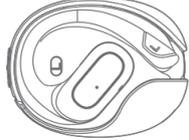

If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and cyan alternately, indicating that they are in pairing mode.

Note:  
• If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.  
• If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.


### How to put on the earphones

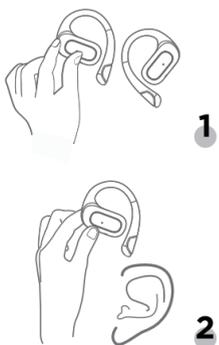

**1**



**2**

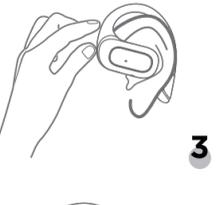


**3**



**4**


### Power on and off

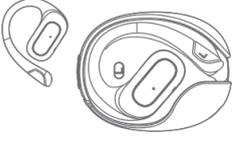

**Power on**  
Taking the earphones out of the charging case will automatically turn them on.  
To manually turn on each earphone, press and hold the touchpad for three seconds.


**Power off**  
Placing the earphones in the charging case will automatically turn them off.  
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

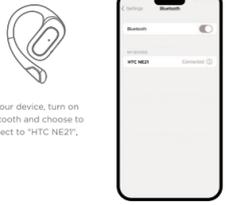

On your device, turn on Bluetooth and choose to connect to "HTC NE21".

### Basic operations

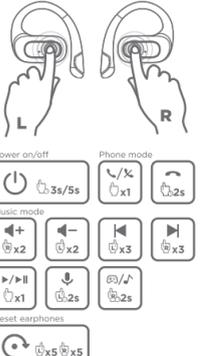

Power on/off: 3s/5s  
Phone mode: x1, x2s  
Music mode: x2, x3, x1, x2s, x5, x5

### Key functions

- Play/Pause: Tap either earphone once.
- Volume up: Tap the right earphone twice.
- Volume down: Tap the left earphone twice.
- Play previous track: Tap the left earphone three times.
- Play next track: Tap the right earphone three times.
- Answer/End call: Tap either earphone once.
- Reject call: Press and hold either earphone for two seconds
- Activate voice assistant: Press and hold the left earphone for two seconds.

Note: When using a single earphone only, press and hold the active earphone for two seconds.

- Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)

Note: Mode switching is disabled when you're using a single earphone only.

**Indicator LEDs**


Earphone LED	Status
Blinking white and cyan	Both earphones: Powered on
Solid white	Single earphone: Unpaired
Off	Charging
Off	Paired or fully charged

**Charging case Power display**

Status	Indicator
Solid	Earphones charging
Flashing	Case charging
Shows 100%	Case fully charged

### How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.

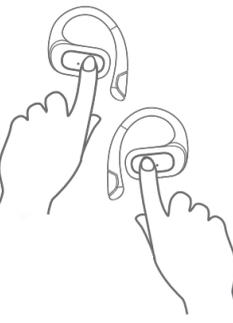

### Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

**General safety instructions**

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

**Personal safety instructions**

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

### Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0 to 35°C (32 to 95°F).
- Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than 8 hours.
- Dispose of the product responsibly according to your local waste management guidelines.

### FCC ID: 2BHJR-NE21

FCC Caution.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.  
\*RF warning for Portable device:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**US REP**

Company Name: MIRAMONT SOLUTIONS LLC  
Company Address: 34218 HOURGLASS ST, TEMECULA, CA 92592 United States  
FRN: 0036313369  
Agent name: Wenyi Wang  
Title: CEO  
Email Address: wenyiwang@miramontsolutions.com  
telephone: 951 401 5633

### Legal notice

**Trademarks and permissions:**  
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd. Copyright © 2025 Shenzhen Brands World Technology Co., Ltd. All rights reserved.  
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

