

## How to change wireless SSID and Password of DWR-930M through GUI and D-Link Mobile Connect App

- 1 Connect your DWR-930M using a USB cable or Wi-Fi with a smartphone, laptop, or computer. The default Wi-Fi network name (SSID) is D-LINK2G-XXXX, with the password printed under the battery on the back of device.
- 2 Once connected, open a web browser and type in the address bar http://192.168.0.1
- **3** You will be prompted to enter the username and password to access the router's settings. The default username is **admin** and the password is **admin**

Note: If you have changed the password and cannot remember it, you will need to reset the router to factory defaults.

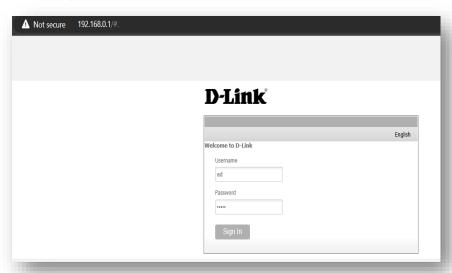

4 Upon logging in, you'll access the web-based management interface of the DWR-930M. To modify your wireless network's name and password, navigate to the **Wireless** tab. Under the **Wireless Security Settings** options, you can adjust the wireless settings for SSID and Password, and then click **Apply** to confirm the changes.

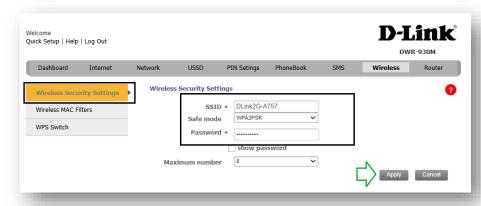


## **D-Link Mobile Connect App**

1 Launch the "**D-Link Mobile Connect app**" If you haven't installed it yet, you can download it from either the Play Store or the Apple Store.



**2** You will be prompted to enter the username and password to access the router's settings. The default username is **admin** and the password is **admin** 

Note: Please check the box below indicating "I have read and agree to the User Agreement." And Press Login.

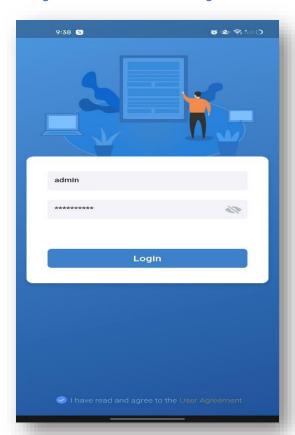


Note: If you have changed the password and cannot remember it, you will need to perform a hard reset on the device.

3 Tap Wi-Fi Settings from the home screen.



In the 2.4G Wi-Fi Settings, you have the option to change both the network name and password for your Wi-Fi.

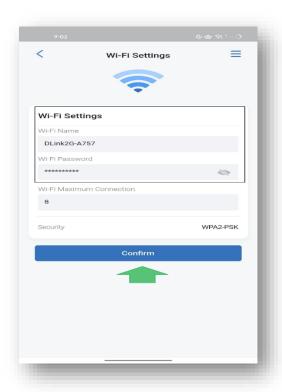

- 5 After making the changes, press **Confirm** to save and apply.
- **6** Once you've configured the Wi-Fi settings, wait for the changes to take effect. The router may need a moment to update its settings.
- 7 Once you've configured the Wi-Fi settings, wait for the changes to take effect. The router may need a moment to update its settings.
- **8** After the settings are applied, you can connect your devices to the newly configured Wi-Fi networks using the updated SSID and password.