

SmallRig



Modular Follow Focus F60

模块化跟焦器F60

01	What's Included 包装清单
02	Two Methods to Adjust Focus 两种驱动镜头跟焦方式
03	Optional Accessories 可选配件ID
03	Palm Support Attachment 手托安装
04	15mm Quick Release Arm 15mm摇臂安装
04	Silicone Gear Installation 硅胶齿轮安装
05	Preparation Before Attaching the Follow Focus Onto the Cage 跟焦器安装于拓展框前准备
06	Side / Top Mounting the Follow Focus 侧面-顶部安装跟焦器
07	Easily Adjust the Mounting Method According to the Lens 根据镜头合理调整安装方式
08	Adjustable AB Stop Mechanism AB挡点切换
08	Changing Gear Mounting From the Right to Left Side 齿轮安装左右两边操作
09	Damping Adjustment 阻尼调节操作
09	Forward / Reverse Rotation Switching 正反转切换操作
10	Marker Ring Replacement Procedure 更换标记环操作
11	Dual Rod Clamp Installation and Adjustment 双管管夹安装与调节

 
What's Included / 包装清单



- | | |
|--|----------------------------------|
| ① Modular Follow Focus F60 × 1
模块化跟焦器 F60 | ⑥ Snap-on Gear Ring × 1
扣式跟焦环 |
| ② Quick Release Arm × 1
15mm摇臂 | ⑦ Palm Support × 1
手托 |
| ③ Silicone Gear × 1
硅胶齿轮 | ⑧ Allen Wrench × 1
六角扳手 |
| ④ Φ15mm Rod × 1
Φ15mm 管 | ⑨ Carrying Bag × 1
收纳包 |
| ⑤ Rod Clamp (with NATO rail) × 1
管夹 (带滑条) | |


Two Methods to Adjust Focus / 两种驱动镜头跟焦方式

①

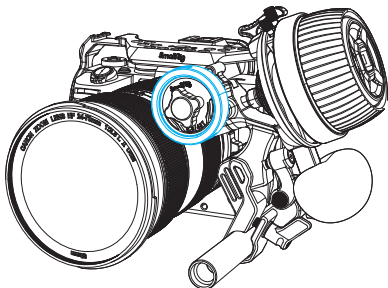

Friction Driven / 摩擦驱动

 ②

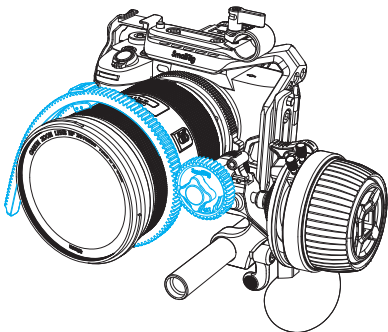

Gear Driven / 齿轮驱动

Optional Accessories / 可选配件ID



Rod Clamp / 双管管夹

4151



Quick Release Plate / 阿卡快装板

3853



Silicone Gear / 硅胶齿轮

 
3852




Focus Adapter Part / 跟焦转接件

3851


Palm Support Attachment / 手托安装

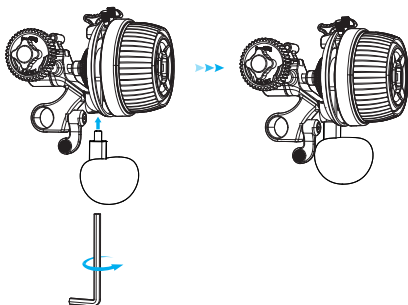

15mm Quick Release Arm / 15mm摇臂安装

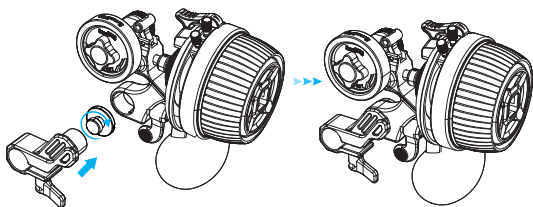 


Silicone Gear Installation / 硅胶齿轮安装

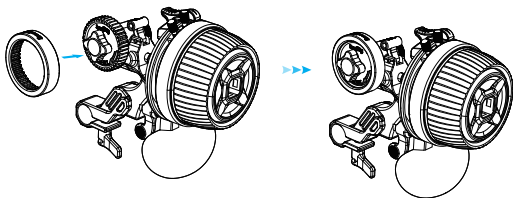 


Preparation Before Attaching the Follow Focus Onto the Cage / 跟焦器安装于拓展框前准备

 Step 1 / 步骤1

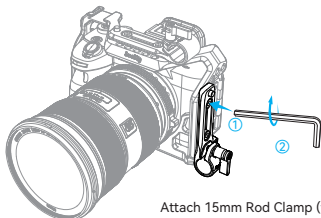


Attach 15mm Rod Clamp (with NATO Rail)
安装管夹(带滑条)

 Step 2 / 步骤2

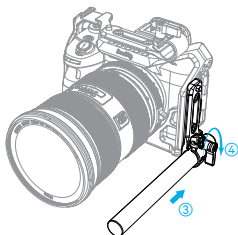




Insert 15mm Rod
安装15mm管

 Step 3 / 步骤3


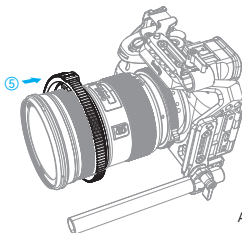


Attach Snap-on Gear Ring
安装扣式跟焦环

   
Side / Top Mounting the Follow Focus / 侧面-顶部安装跟焦器

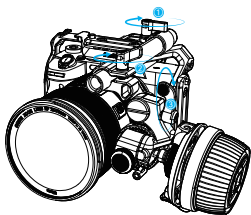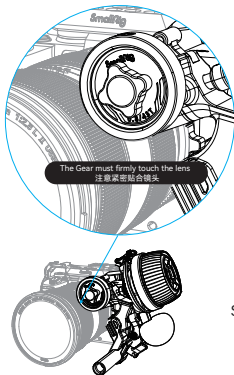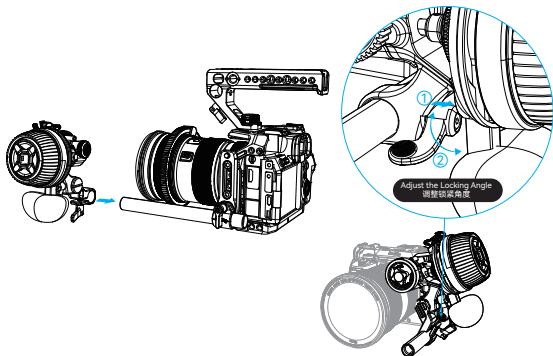

  
Steps for Mounting the Follow Focus on Top
顶部安装跟焦器步骤说明

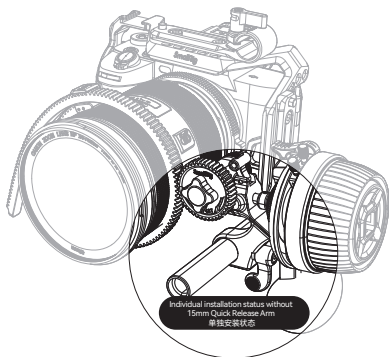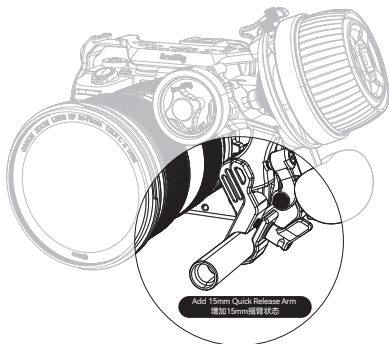


Adjustable AB Stop Mechanism / AB挡点切换

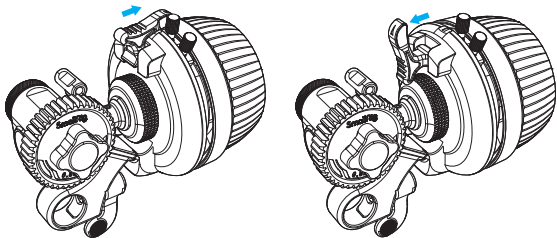 




 
Changing Gear Mounting From the Right to Left Side / 齿轮安装左右两边操作

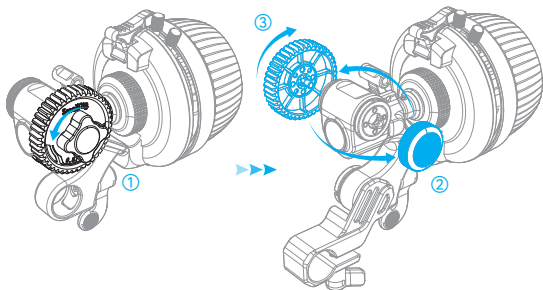



Damping Adjustment / 阻尼调节操作

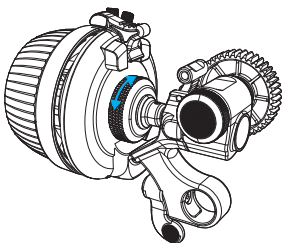 

   
 
Forward / Reverse Rotation Switching / 正反转切换操作

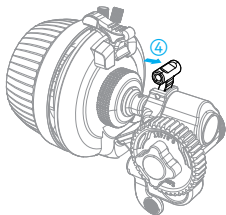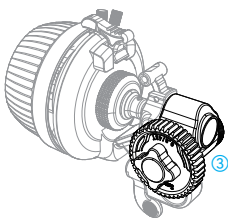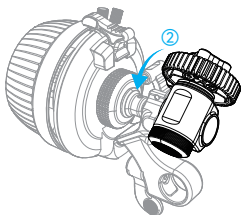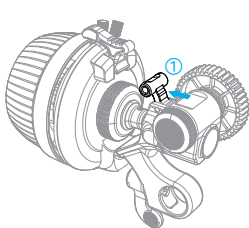

  
Marker Ring Replacement Procedure / 更换标记环操作

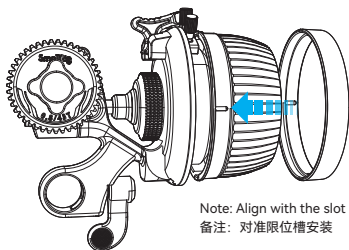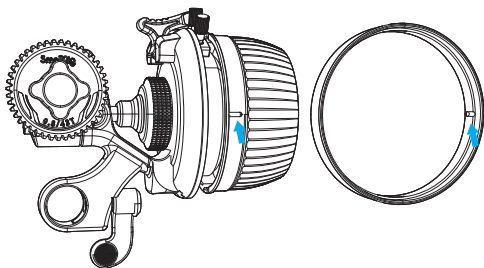

  
Dual Rod Clamp Installation and Adjustment / 双管管夹安装与调节

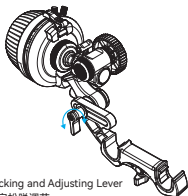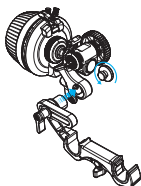



Locking and Adjusting Lever
固定松脱调节

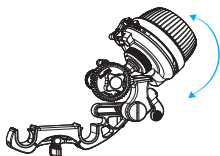 

Tilt angle is adjustable
角度可调节

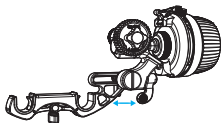 

  Horizontal positioning is adjustable
水平位置可调节

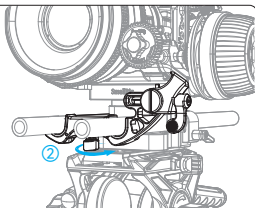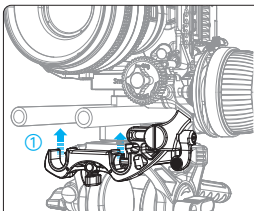

Attach Rod Clamp (ID:4151)
管夹(ID:4151)安装

For more methods, please scan the code for details.

更多使用方法，请扫码了解详情



operating instructions



中文操作说明