

Instructions



Thank you for purchasing a TOKIWA STYLE product. Please read this instruction manual carefully before use to ensure proper and full performance. After reading, be sure to keep it in a safe place and reread it if you have any questions.

⚠ Caution This mark indicates that improper handling may result in injury to persons or damage to property.

⊘ Prohibited This mark indicates something that is prohibited (something that must not be done). Please follow the instructions carefully to avoid accidents. If you are purchasing only the legs, please start by reading the explanation regarding the tripod section.


Y768

Part names

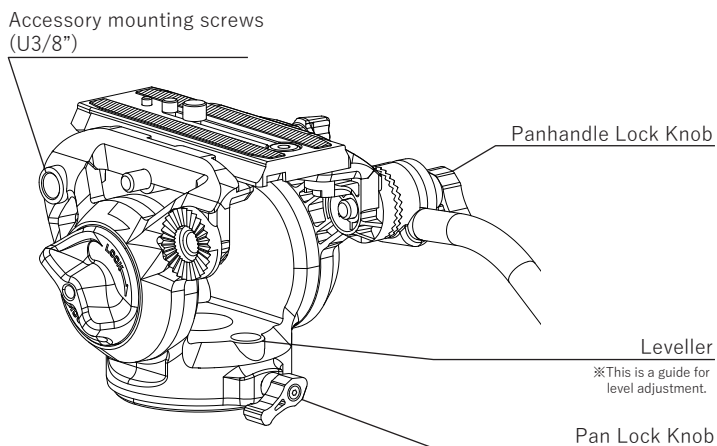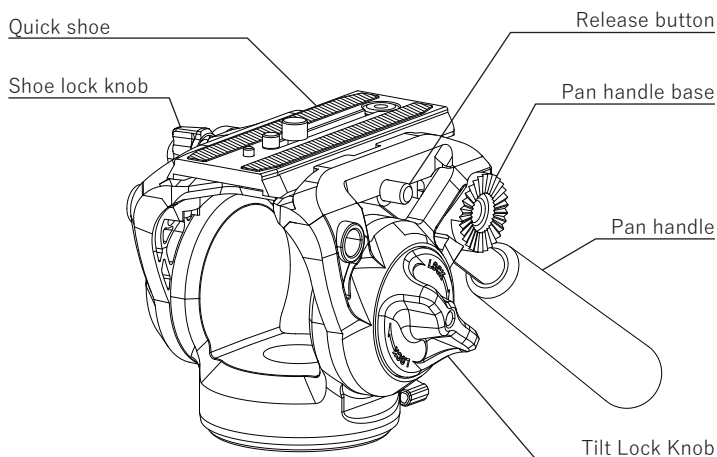


※The tripod leveller is a guide for level adjustment.
The accuracy is different from the camera's built-in leveller.


Installing the Pan Handle

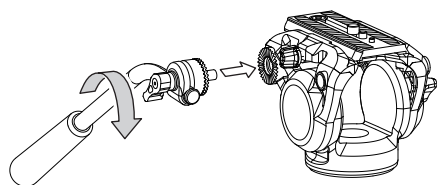

Align the pan handle and pan handle base screws and turn the pan handle lock knob to lock the pan handle in place. The pan handle can be installed on either the left or right side. The installation angle and direction can also be changed.

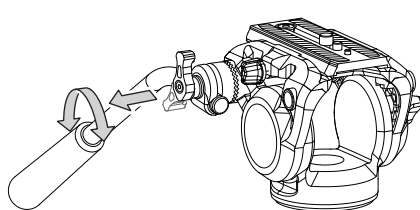

You can change the position by pulling the pan handle lock knob towards you and turning it.

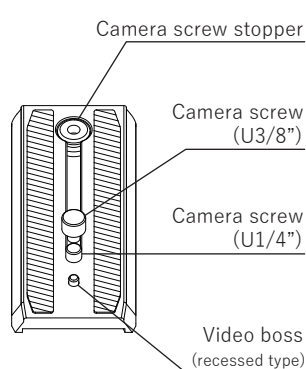

Equipment to be installed


⊘ Prohibited

Maximum payload: 10kg

Please do not load any more than this amount of equipment. Also, even if the load weight is less than the above amount, some items may be difficult to balance due to their center of gravity.

When carrying

⊘ Prohibited

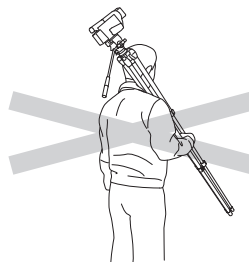


Please remove cameras, scopes, and other equipment from tripods before carrying them. Equipment may fall, causing injury to the user or people nearby, or damage to property.

Equipment setup

⚠ Caution


Be sure to securely attach equipment and lock handles, knobs, and levers to prevent the equipment from falling or tipping over.

Attaching the tripod head

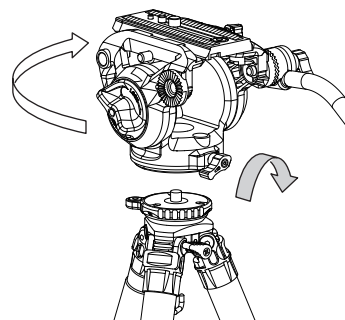


Tighten the pan lock knob on the head, align the screws on the tripod and head, and turn the head clockwise to screw it in tightly.

Camera installation

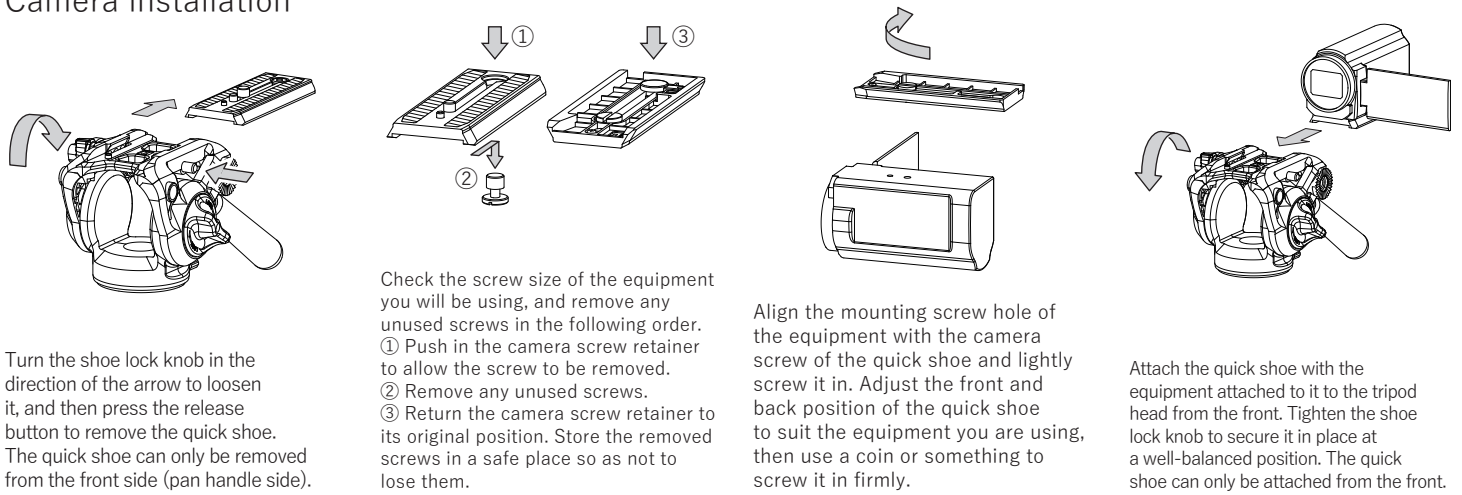

How to use the tripod head

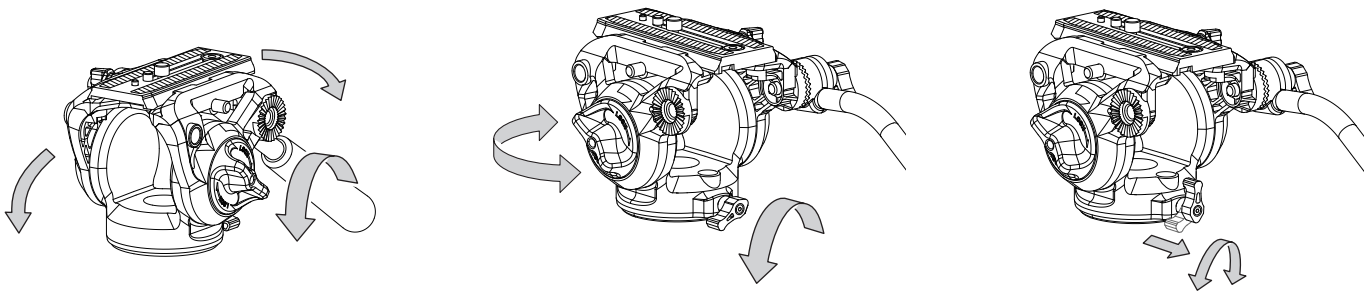


Loosening the tilt lock knob allows you to tilt the equipment upwards or downwards.

Loosen the pan lock knob to pan your equipment left and right.

You can change the position by turning the pan lock knob while pulling it towards you. Please adjust it to a position that does not interfere with the tripod.


Removing the tripod head

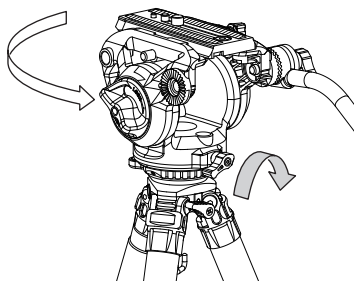

You can remove the tripod head by tightening the pan lock knob on the head and rotating the head counterclockwise.

Leveller

⚠ Caution

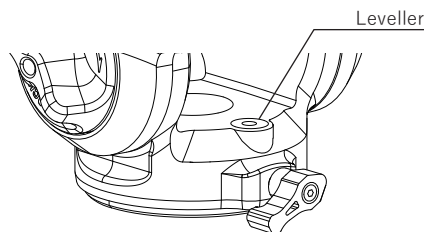


Using the leveller on the camera head can be used as a guide for leveling when taking photos. The leveller for the tripod is a guide for level adjustment. The accuracy is different from the leveller built into the camera.

Accessory mounting screws


⚠ Caution

Accessory mounting screws (U3/8")

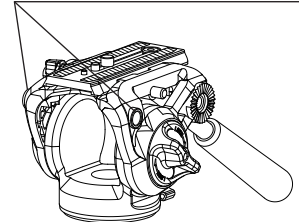

Accessories such as arms can be attached to the accessory mounting screw section. When accessories are attached, the center of gravity may change, so please be careful not to tip over.

Prohibited

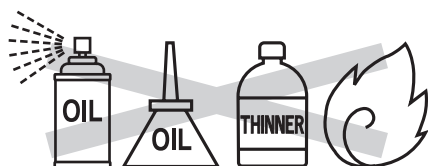

- Never add oil, grease, etc. to the tripod or head. This may cause damage or malfunction. If any moving parts start to move poorly, contact the retailer where you purchased the product or our after-sales service.
- Keep away from fire. Do not leave the camera in a hot car or other location for long periods of time in the summer.

Maintenance

- If it gets dirty, wipe it with a soft cloth soaked in neutral detergent. Then wipe it with a clean, dry cloth.

Replacement parts for this product will be available for approximately five years after production is discontinued. Therefore, we will accept repairs during this period.

Homepage: <https://www.tokiwa-style.com/>

* Please note that for the purpose of improvement, the design and specifications may be changed without prior notice.

©2025 Tokiwasayashin Co., Ltd.