



COMMERCIAL TRAINING TOOLBOX TIPS

Lennox CORE Service App Test and Balance/Blower Setup

Applies to Lennox Model L and Enlight Rooftop Units 3-25 tons



Helpful Resources

1. Download installation and service literature from LennoxCommercial.com or LennoxPros.com.
2. [CORE Service App Reference Guide](#) takes you step-by-step through the startup and commissioning procedures.
3. Log in to LennoxPros.com to start the online [CORE Service Curriculum](#).
4. View [Lennox Model L and CORE Control System](#) videos on YouTube.

Required Tools

1. Download the CORE Service App to your mobile devices by scanning these QR codes.



The startup technician will use the CORE Service App to setup the unit for operation. Configure Blower Airflow using the Test and Balance menu.

Pair a mobile device to the Lennox CORE Control System to perform the blower setup steps.

See the excerpt from the [CORE Service App Reference Guide](#) below. Complete instructions are included in the guide.

From the Unit Operation Overview screen.

Tap the Menu button. (3 lines in the upper left of the screen) to open the menu.

Tap Blower.

Scroll down and tap Test and Balance.

Set blower speed values per design.

Tap the + and - buttons to adjust the CFM values.

Tap the Next button.

Self-Service Technical Support with No Wait Times
Click on the black logos below to download these apps

Download all [Training Toolbox Tips](#)
Register for [Technical Training Webinars](#)

