


FIRST USE OF METAL CASH CLIP



VIDEO GUIDE
FIRST USE



VIDEO GUIDE
INSTALL CLIP

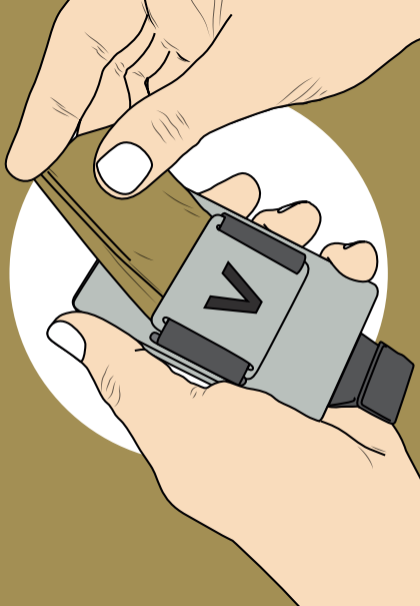



For the first use of the Metal Cash Clip, place the AVIATOR card under the edge of the Cash Clip to **protect the plate from scratches.**



Lift the Cash Clip at the opposite edge and then **pull it upwards** parallel to the plate. Remove card and insert your folded bills.