

# HBYGE

EN

## Bluetooth speaker USER'S MANUAL

Model No: A88



ENGLISH .....EN1-EN8  
FRANÇAIS.....FR1-FR8  
DEUTSCH .....DE1-DE8  
ESPAÑOL.....ES1-ES8  
ITALIANO.....IT1-IT8

Thank you for purchasing our product A88. It's a portable audio. This device can be easily connected with audio or video devices for your daily needs. Before you use this product for the first time, please read this manual carefully to get familiar with all its functions.

### Specifications:

Output power: 40W+15W x2  
Frequency: 60Hz-20KHz  
S/N ratio: ≥85db  
Output Impedance: 4Ω  
Input voltage: DC 5V-2A  
Battery capacity: 8000mAh  
Speaker driver size: 5" + 2.5" x 2  
Product size: 425 x 200 x 230mm

### Package contents:

1. A88 Speaker.....1PC  
2. User manual.....1PC  
3. 3.5mm Audio cable .....1PC  
4. USB charge cable .....1PC  
5. Remote control.....1PC  
6. Straps.....1PC  
7. Wired microphone.....1PC


### Product features:

1. Using the latest decoding chip, Bluetooth 5.0, connect quickly.
2. Comfortable handle and hangable shoulder strap, very portable and easy to carry.
3. Support Bluetooth, Aux in, USB, TF card, FM Recording, EQ, Remote, Microphone and so on.
4. 70W output power, 3 speaker drivers, 3D sound.
5. Double power supply: 5V-2A charging & Built-in rechargeable lithium battery.
6. Compatible for personal computer, MP3, MP4, smart phone and other smart Devices
7. Intelligently select MP3/FM station by remote number keys.
8. Can memory the song number after turn off.

### Safety Information:

1. Store the loudspeaker, away from humid areas, high temperature, oil and other liquids.
2. Do not expose the product to direct sunlight and rain.
3. Set a suitable volume to avoid hearing impairment.
4. If you do not use the product for a long time, charge it at least once per three months in order to avoid damage to lithium battery.
5. It is forbidden to disassemble, repair or open the product.
6. When charging, please keep away from the reach of children to avoid electric shock or suffocation.

EN2

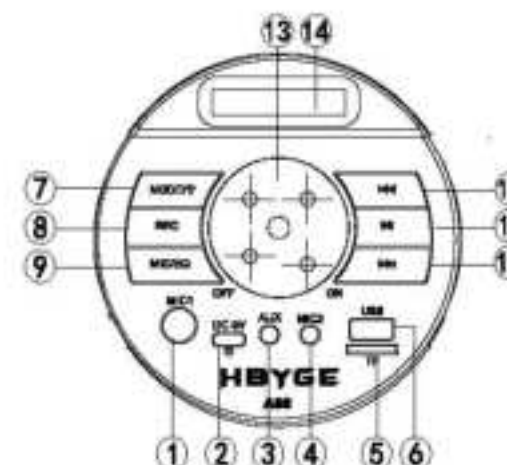

### Function operational specification:

1. MIC1: 6.5mm wired microphone socket
2. DC 5V: Charging port
3. AUX: Socket for 3.5mm audio cable
4. MIC2: Socket for 3.5mm Microphone
5. TF Card: Socket for TF card
6. USB: Socket for USB driver
7. Mode: Press this button to switch between Bluetooth/USB/TF Card/AUX and FM modes. Long press for speaker LED lights switch on/off
8. REC: After you insert a USB or TF card, short press this button, it will play the recording files of the flash. Long press this button, it starts recording (indication voice recording) you can use a inserted microphone to record the sound out from microphone, Short press it again, it will play the recording file you just did.
9. MIC/EQ: Under Bluetooth mode, long press this button to switch between Off/Normal/Pop/Jazz/Rock/Class. When the microphone is in use, short press this button once, turn the knob to adjust the microphone volume, press again, turn the knob to adjust the ECHO volume.

EN3

10. Previous song under USB/TF/Bluetooth mode. In FM radio mode, short press for previous station stored. Long press for automatically search of previous station.
11. Play/Pause: Short press for play and pause under USB/TF/Bluetooth mode. Under FM radio mode, Long press to start auto-search and memory stations, Long press again to stop auto-search
12. Next song under USB/TF/Bluetooth mode. In FM radio mode, short press for next station stored. Long press for automatically search of next station.
13. Volume knob: Volume Knob for master volume and mic volume.
14. Display: Digital LED display.

### MODES:

Mode button is used to switch the speaker modes: Bluetooth, FM radio and input devices, such as U-disk, Micro SD and AUX.

### BLUETOOTH MODE:

- (1) Power on/off: Turn the volume knob to the right to turn on the speaker. Turn the volume knob to the left to turn it off.
- (2) Bluetooth connection: Open the hands of the Bluetooth Settings (Mobile phone brand different, Bluetooth opening method will be different), enter search, the "A88" will be found, please connect it. When the Bluetooth pairing is successful, you will hear a "Ding-dong" sound. Then you can play the music. In case of unsuccessful pairing, turn the knob to "OFF" and restart it. After successfully connecting to Bluetooth, if you turn off the device, but the Bluetooth on your smart phone remains open, when you restart the device, the Bluetooth will be connected automatically.

### FM RADIO MODE:

To activate radio FM mode, turn on the speaker, use Mode button to select FM or press the FM button on the remote control. To search for available radio stations automatically, click and hold >||. FM Stations will be saved automatically. To switch stations, click << or >> or click the number keys on the remote control, each number key will save the corresponding FM radio station. To start searching radio stations manually, please use the number on the remote to enter the station number you need. For example: if you want to search for "90.5" radio station, you can directly press the number 905 on the remote control to go to 90.5 radio station.

EN4

### AUX MODE

To activate AUX mode, turn on the loudspeaker, Use Mode button to select AUX. Once you have selected this mode, you can use AUX cable to connect your MP3 or computer with the speaker, and then play your music.

### SD MODE

To activate the SD mode, turn on the speaker and insert the SD card to automatically switch to SD mode and play the music from SD card. After pulling out, if you re-insert the TF card, the speaker will start playing from the previous breakpoint.

### USB DISK MODE

To activate USB mode, turn on the loudspeaker and insert your USB to automatically switch to USB mode. After pulling out, if you re-insert the USB, the speaker will start playing from the previous breakpoint.

### RECORDING MODE

In TF / USB mode, you click REC to enter the recording mode, and then you must use the microphone to record. Press REC again to end the recording and play the recording. The recording will be saved in TF card or USB flash memory. The steps to record the sound out through microphone as follows: (Premises) The TF card or usb drive with the storage device must be plugged into the device:

- Step 1. Plug in the microphone
- Step 2. Long press the REC button to prompt RECORDING MODE
- Step 3. Speak and record through microphone. Short Press the REC to end the recording then play the recording automatically.
- Step 4. Long press the REC to quickly display the del. to delete the recording

### CHARGING

To charge the battery, insert the USB charge cable to the loud speaker port and then connect it to a DC 5V charger, and plug the charger into an AC 220V power source. Charge the speaker the same as Charge your phone. Charging LED light indicator: It is always red when charging; the red light will be off after fully charged.

EN5


### SOLUTIONS TO COMMON PROBLEMS

Trouble	Causes and Solutions
Bluetooth pairing failed	Cause 1: The speaker is not in Bluetooth mode Cause 2: The speaker Bluetooth is automatically connected to other devices Solution: Press "Mode" choose Bluetooth mode if other devices are automatically connected, long press "M" to disconnect Bluetooth, turn on the phone Bluetooth and connect to A88
Speaker sound is too small	Cause 1: The volume of the speaker is too low Cause 2: The volume of the phone is too low Solution: Please increase the speaker and phone volume.
Music playing at a cost	Cause 1: The Effective distance between the speaker and the mobile phone may be more than 100 feet Cause 2: There are obstacles between the speaker and the mobile phone Solution: If it is the above reasons, please shorten the effective distance between the speaker and the mobile phone. If not, please reconnect to Bluetooth.
Speaker doesn't work	Cause 1: The speaker may have run out of power Cause 2: Bluetooth is not connected Cause 3: The volume of the speaker may not be turned on, or the volume of the mobile phone may not be turned on Solution: Please turn on the speaker again after fully charged, reconnect Bluetooth, increase the volume of the speaker and the phone.

EN6

### THE REMOTE INSTRUCTIONS

1. To turn the unit on for music playback or standby mode
2. When the unit is operating USB/SD playback mode, press this button to permanently stop playing the source file. You need to press to restart playback.
3. Pressing this button to mute the unit's speaker output at anytime. Press again to resume speaker output.
4. Mode: Change the playback source mode of BLUE CONNECT/LINE/FM/USB/TF
5. When playback from the USB/SD source, pressing this button to set repeat playback setting (Single or All track repeat).
6. EQ: Under USB/TF source playback mode, press this button to select different EQ hearing, such as Off / Normal / Pop/Jazz/Rock/Class /Etc.
7. Previous song for USB/SD playback. Previous channel for radio operation
8. Next song for USB/SD playback. Next channel for radio operation
9. Pause/Play: During USB/SD playback mode, press this button to pause the playback. Press again to resume playback. During FM radio mode, Long press to start auto-scan stations. Then Short press it again to stop the auto-scan.
10. Volume Decrease
11. Volume Increase
12. The number keys 0-9: During USB/SD playback mode, press the number combination to designate that song number to start playback. During Radio Channel or Radio Frequency mode, press the number combination to select the Channel number to play. (Note: When done pressing the number combination, just wait 2 seconds and the system will automatically confirm your input).
13. Karaoke priority: This speaker does not have this function.
14. Record/Playback: After you insert a USB/TF card, press this button to enter the record state, press again to play the recording.
15. FM trimming decrease
16. FM trimming increase
17. FM memory button from F1 to F6.

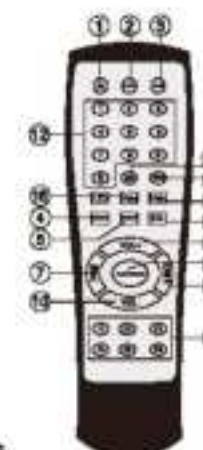

EN7

### The FM programming operations are as follows:

1. Setting the speaker mode to FM radio mode,
2. After long pressing the "PAUSE" button, The radio will complete the automatic search after 3 minutes and automatically store all radio stations that can be found.
3. After the search is complete, short press "NEXT" to select your favorite radio station, then program and store it. For example, if you like 90.5 radio station, short press F1 twice to save this radio station on F1, in FM radio mode, you can press F1 to enter FM 90.5 directly. If you don't want the 90.5 station to be in F1, you can long press F1 to delete this station. Or select another station such as 95.5, short press F1 twice, 95.5 can cover 90.5 station, so as to store 95.5 on F1. The operations of other F2 to F6 are the same as F1.

This is a great feature that allows you to choose your favorite radio station faster. Thank you for giving us good praise, which makes us more motivated to develop better speakers.

Thank you for your purchase!

EN8



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.