

CHECK PROFILE #

Check current profile number. Pulse/Rumble indicates profile.

For example, 5 pulses/rumbles = profile 5.



TOGGLE PROFILES ON/OFF

Quickly return controller to stock functionality.



LOCK

Prevent mods from being turned on/off during gameplay.

Hold for 3 seconds. When LED pulses, release.



MASTER RESET

Restore the controller to factory settings. Do not perform this operation unless you want to overwrite all of your customized profiles. **This action cannot be undone.**

Note: Mods must be toggled off in order to perform Master Reset.

Hold for 10 seconds



HOW-TO VIDEOS ON [TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)



INSTRUCTION MANUAL



HOW-TO VIDEOS ON
[TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)



Your Evil Controller comes with 20 customizable profiles. They operate just like classes in Call of Duty®. Simply select the profile (class) and assign mods (perks).

By default, the first 10 profiles have a fire rate equal to that of their profile number. For example, profile 5 = 5 shots per second. Learn how to modify these defaults under **ADJUSTABLE RAPID FIRE**.

**UPON PROFILE ACTIVATION,
PROFILE 1 WILL AUTOMATICALLY BE SELECTED.**



SELECT A PROFILE

Tap **X** (profile #) of times to choose desired profile. For example, tapping **X** 5 times = profile 5.

 


CLEAR ALL

Forgot what mods are on? Clear all in current profile.




RAPID FIRE

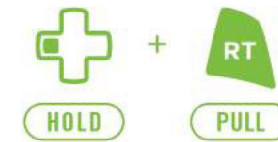

See **Advanced Mods** for adjusting rate of fire.

 LEFT TRIGGER RAPID FIRE

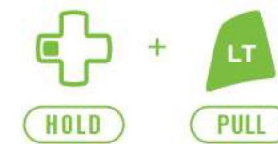

AKIMBO RAPID FIRE



TACTICAL RAPID FIRE

- 1 Activate mod. Pressing **Y** to swap weapons will toggle Rapid Fire on/off.



- 2 Toggle Rapid Fire on/off without switching weapons.



- 3 Return to standard Rapid Fire.



DROP SHOT

Default button layout:



Press **A** to stand up and keep Drop Shot active.

Press **B** to stand up and deactivate Drop Shot.

 
Tactical button layout:



Press **A** to stand up and keep Drop Shot active.

Press **RS** to stand up and deactivate Drop Shot.

AUTO SCOPE / AUTO RUN



To enable Auto Run, tap LT while moving.

AUTO SPOT

Battlefield 4® Only



 
Auto spot must be toggled off when in menu, otherwise the controller cycles through classes.

ADJUSTING RATE OF FIRE



Hold for 2 seconds.


It's possible for the rate of fire to be so fast that it doesn't register in-game. Slowing automatic weapons down to reduce recoil and increase accuracy can be effective. Features 15,000 speed increments.

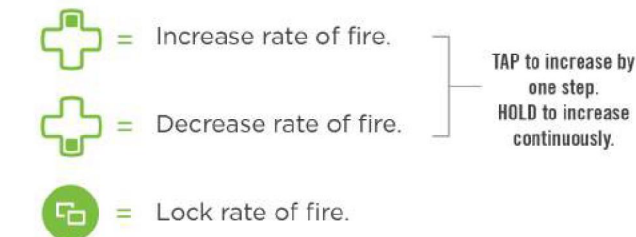

EVIL RAPID FIRE INCREMENTS

FAST RELOAD *Call of Duty: Ghosts*
Call of Duty: Modern Warfare

 Functions like the Sleight of Hand perk, but does not animate in a similar manner. Because weapons reload at different rates, Fast Reload must be programmed and adjusted accordingly.

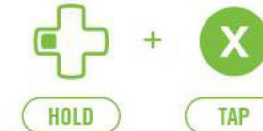

- 1 Equip your gun of choice.
- 2 Fire off a few rounds.
- 3 Press and hold **d-pad down** and **X** to reload.
- 4 Release **d-pad down** and **X** when the bullet counter shows a full magazine.
- 5 Fire off a few more rounds.
- 6 Test the reload by tapping **X**.
- 7 Hold **RT** after tapping **X** and your gun will immediately fire once the Fast Reload is complete. The animation may appear "glitchy", but that's just the mod cutting away the unnecessary animation.

Note: Holding **d-pad down** and **X** will restart the programming process.

JITTERMOD (AUTO BURST)

Call of Duty: MWR Only (M16A4)

Enter a profile then,



Activating jitter will disable Rapid fire. Repeat function to disable jitter and reactivate Rapid Fire.



HOW-TO VIDEOS ON
[TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)