# SIZE:70\*90mm 书纸, 折页, 正反面印刷

# **BLUETOOTH SPEAKER** WITH WIRELES CHARGER

USER MANUAL



Please read user manual carefully and keep it for your records.

### Notice for Use:

- 1. For the first use, please charge the battery first. Do not play music while charging.
- 2. When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 3. Active the bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device.

- Material: ABS+ Fabric

- Weight:827g
- Function:BT/FM/TF/USB/AUX/Handsfree/TWS/Clock/Alarm clock
- Input:5V/3A.9V/2A
- 7 kinds of white noise

1\*Type C Charging Cable 1\*User Manual


### Specifications:

 
- Bluetooth distance: 10M
- Built-in battery: 1200mAh Speaker power: 2\*5W
- Dimension: 179\*98\*89mm
- /Timing/White noise/Wireless charger/RGB light
- Wireless output:15W

 
# Includes:

1\*Bluetooth Speaker

### **Functional buttons:**

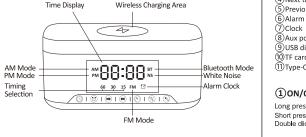





1)ON/OFF/Light mode button (2) Mode button/Play/Pause

- (3)Timing button/TWS/Handsfree (4) Next track/Volume up
- (5) Previous track/Volume down
- 6 Alarm clock
- 8)Aux port
- (9) USB disk playback 10 TF card playback
- 11) Type-C charging port

## 1)ON/OFF/Light mode button

Long press to turn on/off the speaker. Short press to turn on the light&switch different light. Double click to turn off the light.

When you turn on the device, a sound will indicate the speaker is on. Activate the bluetooth feature on your phone, and set the phone to search for Bluetooth device " DAC-SPKBT-QC15 ".

# (2) Mode button/Play/Pause/Handsfree

Short press to play or pause music.

Long press to change to BT/White Noise/FM/TF/USB/Aux mode. For incoming calls, click the button to answer the call, click again to hang up the call, long press to reject the phone call. Double click in short time to redial the last number.

In FM mode, connect the charging cable to the type-c interface as a radio antenna, the other end doesn't need to be connected to any device, short press (2) button to enter the station to automatically search and automatically save, the searched station can be selected by (4)(5) button.

# (3)Timing button/TWS

Short press to select 15/30/60 mins timing, the device will automatically turn off after the corresponding time. Long press to connect/disconnect TWS.

### TWS Function(need 2pcs speakers):

Prepare 2pcs speakers and turn on, long press either (3) button of the 2 speakers to connect TWS.When you hear the tone, that mean the TWS connection is successful. At this time, your phone will only show one bluetooth name, pair it, then you can hear two speakers playing music at the same time.

Long press again to disconnect TWS.

# 4) Next track/Volume up

Short press to change to next track. Long press to increase the volume.

# (5) Previous track/Volume down

Short press to change to previous track. Long press to decrease the volume.

# (6) Alarm clock

1)Short press the alarm button to enter the alarm setting state. At this time, the display of the hour part is flashing, short press the volume buttons to set the hour time gradually, long press to quickly setting.

- 2)After the hour time setting is completed, short press the alarm clock button to enter the minute setting, short press the volume buttons to set the minute time gradually, long press to quickly setting.
- 3)After the minute time setting is completed, short press the alarm clock button to enter the alarm clock music setting, short press the volume buttons to select different alarm clock music. Finally, short press the alarm clock button to complete the alarm clock setting. The alarm clock sign appears on the screen after successful setting.

When the alarm clock rings, press any button to close. If no one turns off, the alarm clock will automatically turn off after ringing for 1 minute, but it will ring normally in the shutdown state, so please cancel the alarm clock if no need.

# Cancel alarm clock setting:

Long press the (6) alarm clock button, the alarm clock sign disappears on the screen after successful cancellation.

- 1)Short press the clock button to enter the clock setting state. At this time, the hour display flashes, short press the volume buttons to set the hour time gradually, long press to quickly setting.
- 2)Short press the clock button again to enter the minute setting, then short press the volume buttons to set the minute time gradually, long press to quickly setting. Finally, short press the clock button to complete the clock

Long press the clock button to turn the "AM" or "PM" mode on or off.

# (8) Aux port

For Aux mode, please plug 3.5mm cable (not included) to the Aux hole, and connect the other end of the 3.5mm cable into your music device.

# 9 U disk playback 10 TF card playback

Insert the USB drive/TF card (not included) into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by the corresponding speaker buttons.

# Use of Wireless Charger:

Put the mobile phone that supports wireless charging function into the wireless charging area to charge.

Tips:when using the wireless charging function, you need to connect the charging cable to supply power.

# Use of White Noise:

Long press (2) button to switch to white noise mode, short press (4)(5) button to select your favorite white noise.

Connect the small end of the type-C charging cable (included) to the type-C charging port, and connect the larger end of the cable to your computer's USB port or an AC adaptor (not included) to charge the speaker. The red light will be on while charging. Once fully charged, the red light will be off.

### Safety instructions:

- 1. Do not expose the product to water or wet areas such as bathrooms.
- Please do not hit or drop the product hard to avoid damage.
- 3. When not in use for a long time, please turn off the power.