

kogan

**16" LED TV & DVD
Player Combo**

KALED16DVDVA

USER MANUAL



Table Of Contents

Preparations Guide	
Safety Information.....	2
Important Safety Precautions.....	3
Installed And Connected TV	
TV Bracket assemble.....	4
TV Buttons And Terminal Interface.....	5
External device connection diagram.....	6
Install And Connect TV.....	7
TV Stand installation Instructions.....	7
TV Menu	
Input Source.....	8
Picture Menu.....	8
Sound Menu.....	9
Channel Menu.....	9
Lock System Menu.....	11
Setup Menu.....	11
USB Operation.....	12
DVD.....	13-14
Other Information	
Help.....	15
Specifications.....	16
Remote Controller	17-19

This user manual for reference only

Safety Information

CAUTION

 
**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove the cover of the cabinet. Refer all servicing to the Kogan customer support team.

If you experience any issues with the television at all, do not attempt to repair it yourself as this may cause further damage or serious injury. It will also void your warranty. Contact the Kogan customer support team.



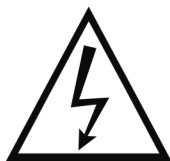

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating instructions in the literature accompanying the appliance.



Warning

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 
 
 
 
Important Safety Precautions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Warning to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
16. The power socket shall be installed near the equipment and shall be easily accessible.
17. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
18. Apparatus shall not be exposed to dripping or splashing liquids.
19. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lit candles).
20. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
21.  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
22. The USB terminal should be loaded with 0.5 A under normal operation.

TV Bracket assemble

Fix the TV on the wall

1. First, put the TV facedown on a table carefully, with some soft padding on the table to avoid scratching the screen.
2. Use a screw driver to take off the screws which are fixed on the bottom stand (the direction of the arrow, refer to the photo1). Take off the bottom stand (please take off the screws and bottom stand carefully).
3. Make one bracket which can fix on the wall according to the size of arrow direction of photo 2 and photo 3.
4. Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts) Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts)
5. As according to step 4, use the screwdriver to lock the screw on the back of the TV. then hang the TV on the wall.

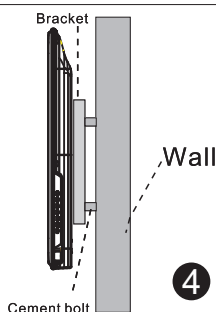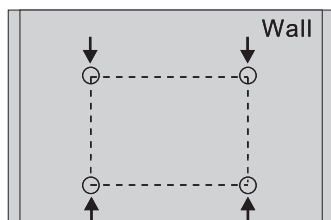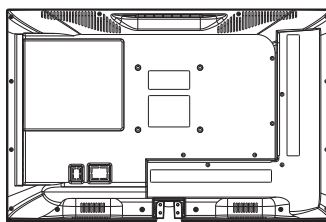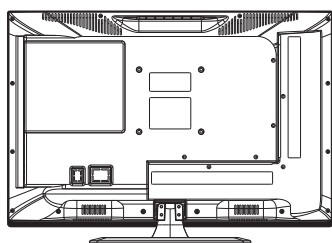

Note:

1. The bracket fixed on the wall is an optional part.
2. When you assemble the TV, there should be no other articles attached to the front or sides, and please keep a distance from other articles.
3. When mounting the TV, we recommend the use of a professional installer.
4. The pictures above are only for reference.
5. Please follow the user manual about bracket assemble to fix the TV.
6. Attach the mounting bracket from the VESA compatible wall mounting kit.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only a functional schematic. The actual position and arrangement of different models may be different.



: Turn ON/OFF Power.

SOURCE: External Signal Input Selection.

MENU: Display Main MENU And Confirm MENU Item Selection.

CH+/-: Selecting Channel.


VOL+/-: Adjusting Volume.

Terminal Interface


Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	AV input External AV Signal Input And Relevant Right/Left Sound Channel		EARPHONE output When earphones are plugged in, speakers are disabled
	USB input Connect a USB device here to play its media files or to record programs via the PVR function.		
	Y Pb Pr input Connect to the composite terminal of your DVD/VCR (Some models without this interface)		
	HDMI input Digital signal input from HDMI video connector.		
	ANT 75 Connect the antenna/cable tv input (75/VHF/UHF)		
	VGA input PC analog signal input		
	PC AUDIO INPUT VGA input and audio input when VGA input		

 External device connection diagram

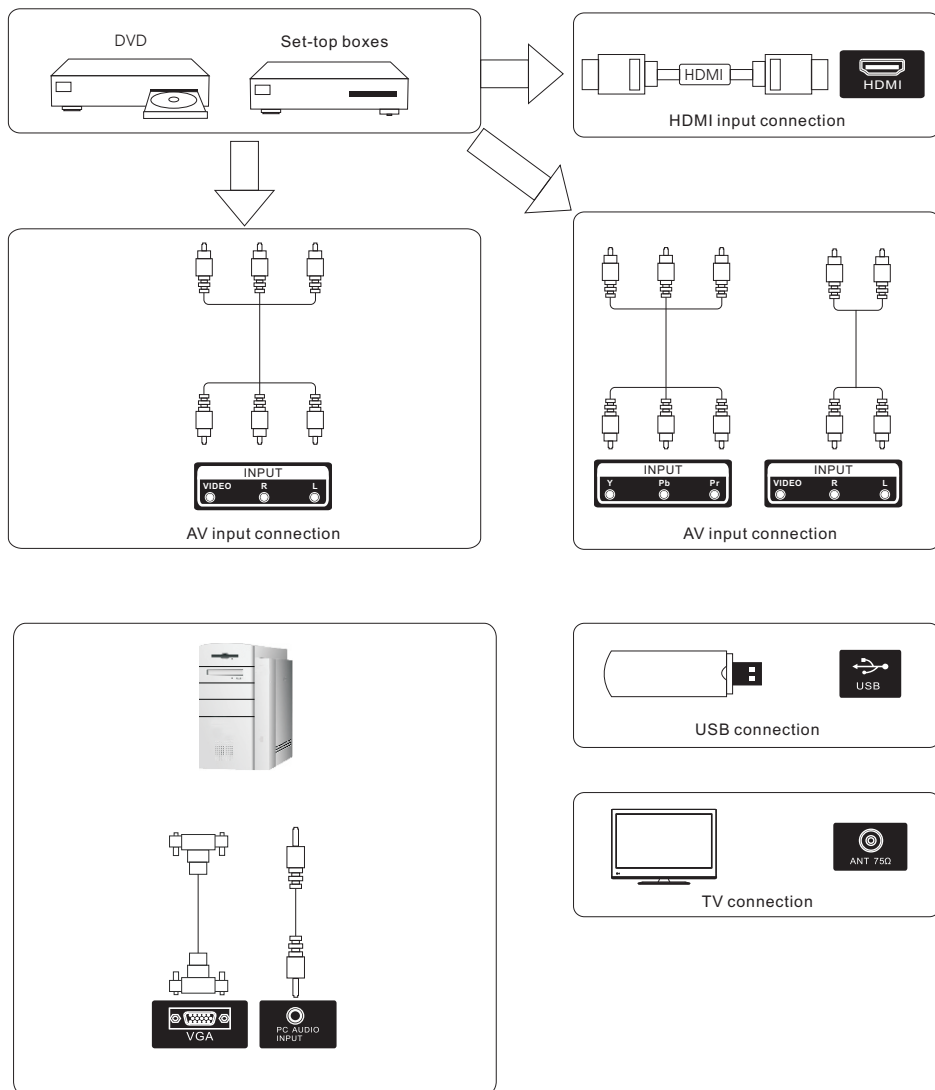

Install And Connect TV

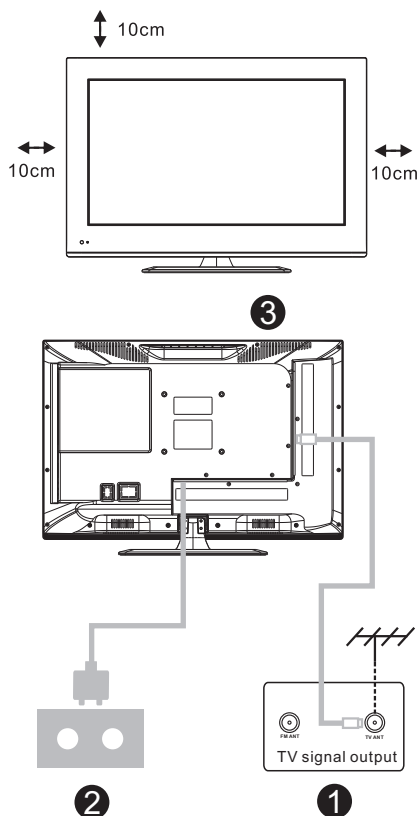 

Set your TV

To put your TV in a sturdy place which can bear the weight of the TV.

To avoid danger, please don't expose the TV to water or hot locations (such as near lights, candle, heaters). Do not block the ventilation at the back of TV.

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

Turn on TV

 
3. Press the power button of the TV the indication light will turn to green. If it is on standby mode (the light is red), press the power button on the remote control to turn on the TV.

Note:

Pictures for reference purposes only.


TV Stand Installation Instructions

1. Open the carton and remove the TV and assorted accessories and base (some models without base).
2. To avoid damage to the TV, cover screen with a soft mattress, put it on the table face down on the soft layer, the base of the neck is fixed on the TV with screws.
3. Screw the base and connections to the TV.
4. The installation is complete.

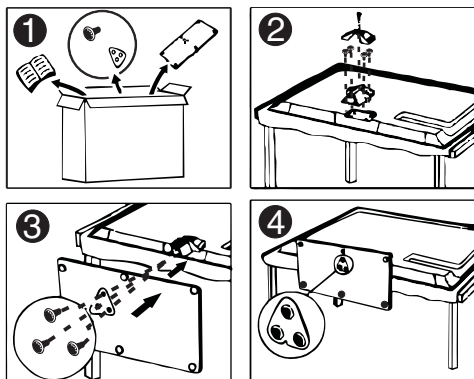

TV Menu

 Input Source

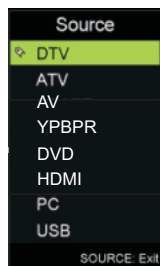

Note: The above is for reference only. Actual menu may be slightly different.

Press **INPUT** button to display the input source list,

Press **▼ / ▲** or **INPUT** button to select the input source.

 
Press **ENTER** button to enter the input source,

Press **EXIT** button to quit.

Picture Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button select **PICTURE** in the main menu, then press **ENTER / ▼** to enter.

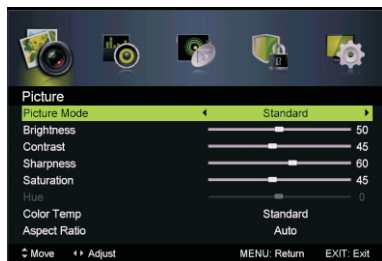

1. Press **▼ / ▲** button to select the option that you want to adjust in the **PICTURE** menu.
2. Press **Enter/◀ / ▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Picture MODE

Press **▼ / ▲** button to select Picture Mode, then press **◀ / ▶** button to select.

TIPS: You can press **PMODE** button to change the Picture Mode directly.

Brightness/Contrast/ Sharpness/Saturation/Hue

Press **◀ / ▶** button to select option, then press **◀ / ▶** button to adjust.

Brightness Adjust the brightness output of the entire picture, it will effect the dark region of the picture.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture won't change.

Sharpness Adjust the peaking in the detail of the picture.

Saturation Adjust the saturation of the color based on your own like.

Hue Use in compensating color changes with the transmission in NTSC format.

Color Temp

Change the overall color cast of the picture.

Press **▼ / ▲** button to select Color Temp, then press **◀ / ▶** button to select Standard/Cool/Warm.

Standard Produces a vivid image.

Cool Produces a gentle blue-hued image.

Warm Produces a red-hued image.

Aspect Ratio

Press **▼ / ▲** button to select Aspect Ratio, then press **◀ / ▶** button to select.

Auto Automatically adjust Aspect Ratio based on TV size and TV program.

Full/4:3 /Zoom1/Zoom2 To select the available display format.

PC Setting

Press **INPUT** to select PC source.

Press **MENU** to enter the main menu, then press **◀ / ▶** button to select **PICTURE** menu.

Press **ENTER / ▼** to enter and press **▼** to select PC Setting.

Advanced Settings

Adjust advanced video features to fine tune the picture.

 
 
Press **▼ / ▲** button to select Advanced Settings, then press **Enter / ▶** button to enter sub-menu.

TV Menu

SOUND MENU

Press **MENU** button to display the main menu.

Press **◀ / ▶** button select **SOUND** in the main menu, then press **ENTER / ▼** to enter.

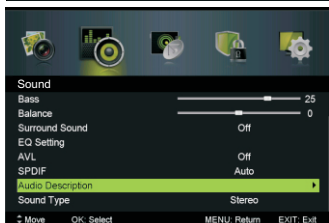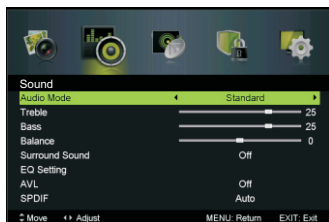

1. Press **▼ / ▲** button to select the option that you want to adjust in the **SOUND** menu.
2. Press **Enter / ◀ / ▶** button to adjust.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

Sound Mode

Press **▼ / ▲** button to select Sound Mode, then press **◀ / ▶** button to select.

Treble/Bass/Balance

Press **▼ / ▲** button to select option, then press **◀ / ▶** button to adjust.

Treble Adjust the treble effect. Increases or decreases high-pitched sounds.

Bass Adjust the bass effect. Increases or decreases lower-pitched sounds.

Balance Adjust the balance between left and right speakers to adapt to your listening position.

Surround Sound

Press **▼ / ▲** button to select Surround Sound, then press **◀ / ▶** button to select On or Off.

EQ Setting

Adjust the curve of 7 bands equalizer.

Press **▼ / ▲** button to select **EQ Setting**, then press **Enter / ▶** button to enter sub-menu.

AVL

Set the auto volume control.

Press **▼ / ▲** button to select AVL, then press **◀ / ▶** button to select On or Off.

SPDIF

Press **◀ / ▶** button to select **SPDIF**, then press **◀ / ▶** button to select Off / Auto / PCM.

Audio Description

Press **▼ / ▲** button to select Audio Description, then press **Enter / ▶** button to enter sub-menu.

 
Sound Type

Press **▼ / ▲** button to select Sound Type, then press **◀ / ▶** button to select. (Available Sound Type: Stereo, Dual I, Dual II, Mixed).

Channel Menu

Press **MENU** button to display the main menu.


Press **◀ / ▶** button to select **CHANNEL** in the main menu, then press **ENTER / ▼** to enter.

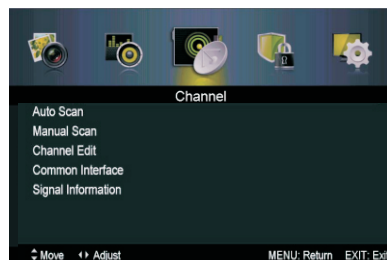

1. Press **▼ / ▲** button to select the option that you want to select in the **CHANNEL** menu.
2. Press **Enter** button to enter sub-menu.
3. Press **MENU** button to return back to the previous menu.


Auto Scan

 Press **▼ / ▲** button to select Auto Scan, then press **Enter / ▶** button to enter sub-menu.

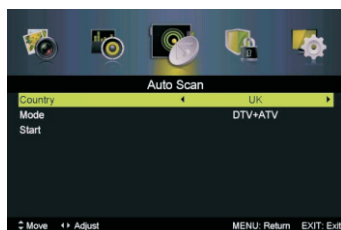

Manual Scan

 Press **▼ / ▲** button to select Manual Scan, then press **Enter / ▶** button to enter sub-menu.

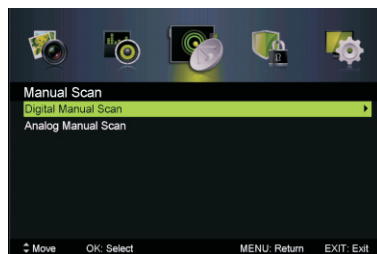

Digital Manual Scan

 
Press **▼ / ▲** button to select Digital Manual Scan, then press **Enter / ▶** button to enter sub-menu.

TV Menu



Analog Manual Scan

Press **▼ / ▲** button to select Analog Manual Scan, then press **Enter / ►** button to enter sub-menu.

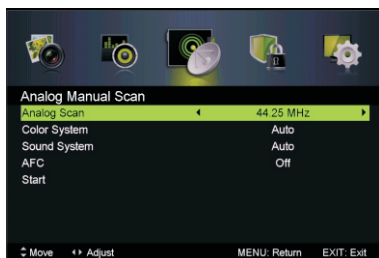

Analog Scan

Press **◀ / ►** button to select Analog Scan.

Color System

Press **◀ / ►** button to select Color System:Auto,PAL or SECAM.

Sound System

Press **◀ / ►** button to select Sound System :Auto,DK,BG,I or L.

Modulation

Press **◀ / ►** button to select Modulation:**Auto,16QAM,32QAM, 64QAM,128QAM,256QAM.**

 
AFC

Automatic Fine tuning.

press **◀ / ►** button to select On or Off.


Start

Press **Enter / ►** button to start the channel searching.

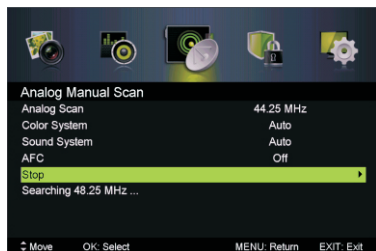

Channel Edit

 Press **▼ / ▲** button to select Channel Edit, then press **Enter / ►** button to enter sub-menu.

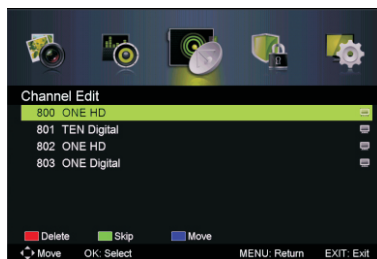

Red Green Blue The three colored keys are the shortcut keys for programming the channel.

First press **▼ / ▲** to highlight the channel you want to delete or move or skip, then:

Press the **Red** button to delete the channel.

Press the **Green** button to skip the select channel.

(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Press the **Blue** button to to set the channel to a movable state, then press **▼ / ▲** to move it to the position you want to put.

Signal Information

 
Press **▼ / ▲** button to select Signal Information, then press the **Enter** button to see the detail information about the signal. Only available under DTV mode.

TV Menu

Lock System Menu

Press **MENU** button to display the main menu.

Press **◀/▶** button select **Lock System** in the main menu, then press **ENTER/▼** to enter.

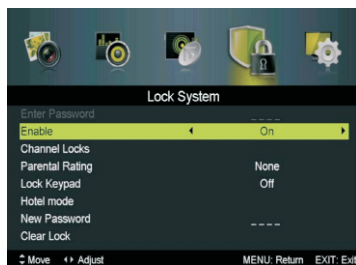

1. Press **▼/▲** button to select the option that you want to adjust in the **Lock System** menu.
2. Press **Enter/◀/▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Default password is 0000. [* Forget what] æ • , ! å Å æ setÉ] | æ ^ & } æ & @ S [* æ & • d { ^ ! service center.

Press **▼/▲** button to select **Enable** then press **◀/▶** button to select **On** or **Off**.

Channel Locks, Parental Rating and Lock Keypad are available when **Enable** is **On**.

Channel Locks

Press **▼/▲** button to select **Channel Locks**, then press **Enter/▶** button to enter sub-menu.

Parental Rating

Press **▼/▲** button to select **Parental Rating**, then press **◀/▶** button to select.

Lock Keypad

Set to prevent it from being used by young children, for other unexpected usage.

Press **▼/▲** button to select **Lock Keypad**, then press **◀/▶** button to select **On** or **Off**.

Hotel mode

Press **▼/▲** button to select **Hotel mode**.

New Password

Press **▼/▲** button to select **New Password**, then enter a 4-digital number you want to set twice.

 
 
Clear Lock

Press **▼/▲** button to select **Clear Lock**.

SETUP MENU

Press **MENU** button to display the main menu.

Press **◀/▶** button select **SETUP** in the main menu, then press **ENTER/▼** to enter.

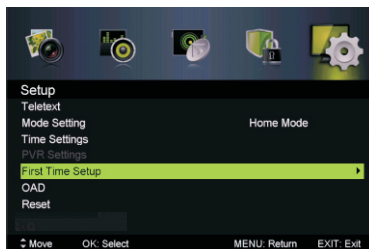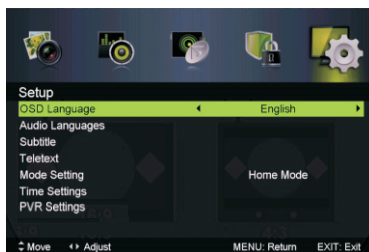

1. Press **▼/▲** button to select the option that you want to adjust in the **SETUP** menu.
2. Press **Enter/◀/▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

OSD Language

Press **▼/▲** button to select **OSD Language**, then press **◀/▶** button to select.

Audio Languages

Press **▼/▲** button to select **Audio Languages**, then press **Enter** button to enter sub-menu.

Press **▼/▲/◀/▶** button to select the **Audio Primary Language** and **Audio Secondary Language**.

Subtitle

Press **▼/▲** button to select **Subtitle**, then press **Enter** button to enter sub-menu.

Teletext

Adjust Teletext settings. Only available under DTV and ATV source. Press **▼/▲** button to select **Teletext**, then press **Enter/▶** button to enter sub-menu.

Mode Setting

Press **▼/▲** button to select **Mode Setting**.

Time Settings

Press **▼/▲** button to select **Time Settings**, then press **Enter/▶** button to enter sub-menu.

PVR Settings

Press **▼/▲** button to select **PVR Settings**, then press **Enter** button to enter sub-menu.

TV will then check the USB.

TV Menu



First Time Setup

Press **▼ / ▲** button to select First time Setup, then press **Enter** button to enter.

OAD

Press **▼ / ▲** button to select OAD, then press **Enter** button to enter sub-menu.

 
Reset

Press **▼ / ▲** button to select Reset, then press **Enter** button to enter sub-menu.

USB OPERATION

Note: Before operating **USB** menu, plug in USB device, then press **INPUT** button to set the Input Source to **USB**.

Press **◀ / ▶** button to select **USB** in the Source menu, then press **Enter** button to enter.

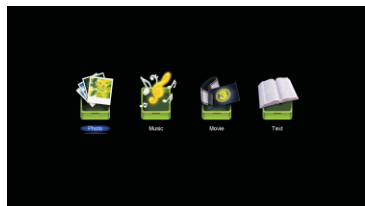

Press **◀ / ▶** button to select the option you want to adjust in the main **USB** menu, then press **Enter** button to enter.

DVD

 
Press the "D.Setup" button to enter the DVD settings menu,use the "◀/▶" buttons to select the desired menu page (General / Audio / Dolby / Video / Preferences),and use "▼/▲" buttons to select the items in each menu,then use "▶" button to enter the selected item. If you then change any setting,press "ENTER" button to confirm the value you changed.Press the "◀" button to return to the left submenu; to go back up to one of the main DVD menu pages,press "EXIT" button.

1.General Setup Page

Osd Language:Set the language of the setup menu and screen display.


Screen saver:Set the screen protection.

Last Memory:Remember and resume from the position of the previous playback.

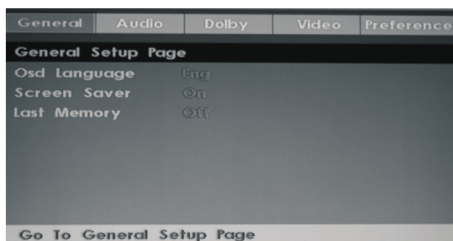

2.Speaker Setup Page

 Downmix: This is DVD L/R and stereo output. Default is stereo output.

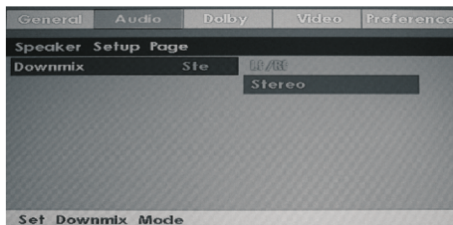

3.Dolby Digital Setup

Dynamic:Adjust sound dynamic range

DVD

 


4.Video Setup Page

Sharpness: adjust the sharpness of the image.

Brightness: adjust the brightness of the image.

Contrast: adjust the contrast of the image.

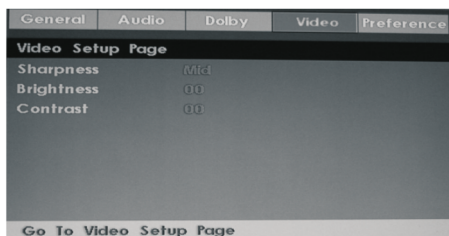

5.Preference Page (Note: This menu page will pop up before put the disc into DVD.)

TV Type: Select the local TV system (PAL TV/Multi/NTSC TV)

Audio: Disc audio language selection (disc dependent)

 
Subtitle: Disc subtitle language selection (disc dependent)

Disc Menu: Disc Menu language selection (disc dependent)

Parental: Set the maximum disc rating (Kid Safe/G/Pg/Pg 13/Pgr/R/Nc 17/Adult) that can be viewed without a password (default password is 0000)

Password: Change the password

Default: Choose this to restore the original default Preference settings

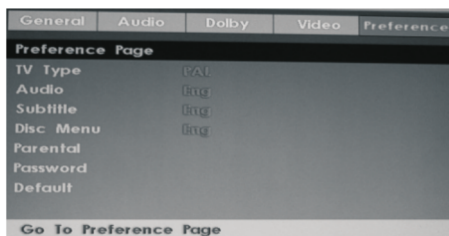

Help

No Power	Check that the power supply plug is plugged in or not. If you still have no power, please unplug it then plug it back in, then turn the TV on again.
Signal not being received properly	<ul style="list-style-type: none"> Weak signals can be caused by high buildings or high mountains being located between your antenna and the transmitter. To solve this issue, please try to change the location and direction of your external antenna. When using an indoor antenna, under certain circumstances receiving a strong signal can be difficult. Please try moving the antenna to different locations in your house and changing the orientation of it. If a strong signal is still not achievable, you may need to use an external antenna.
No picture	<ul style="list-style-type: none"> Check that the antenna cable at the back of the TV is connected properly. Try another channel to see if the issue is with the particular TV station.
Image is fine No audio	<ul style="list-style-type: none"> Increase the volume. Check if the TV is in mute mode. Press the mute button to resume sound.
Audio is fine Colour showing wrong or no picture	<ul style="list-style-type: none"> Increase contrast and brightness.
Snow and static	<ul style="list-style-type: none"> Check the antenna at the back of TV is connected or not.
Broken lines across screen	<ul style="list-style-type: none"> Electrical interference from an appliance such as a vacuum cleaner or a hair dryer. Please turn off devices and recheck the television.
The TV is not responding to the remote control	<ul style="list-style-type: none"> Check that the batteries in the remote controller are not flat, and that there are no obstacles between you and the infra-red receiver. Point the remote control towards a digital camera and look at it through the LCD viewfinder while pressing buttons. If you see flashing then the remote is working correctly and the issue may be with the TV receiver. Please contact the Kogan customer support team for information. The TV will change to STANDBY mode if there has been no signals received from the remote after a few minutes.
No image in (PC Mode)	<ul style="list-style-type: none"> Check to ensure the display cable is connected to the VGA port correctly. Check to ensure that there are no bends or twists in the display cable.
Vertical twinkling (PC Mode)	<ul style="list-style-type: none"> Enter the main menu, Use the clock regulator for the Video display noise to eliminate the vertical line.
horizontal ripping (PC Mode)	<ul style="list-style-type: none"> Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	<ul style="list-style-type: none"> Adjust the contrast ratio or brightness in the main menu.
PC Function no response	<ul style="list-style-type: none"> Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	<ul style="list-style-type: none"> Please use good quality connecting cable.
Problem still exists	<ul style="list-style-type: none"> If no troubleshooting ideas assist you with the issue, please unplug the television and contact the Kogan customer service team. Do not attempt to repair the television yourself.

Machine Technical Specifications


Screen Size	16"
Viewing angle	170 ° (Horizontal) / 170 ° (Vertical)
TV system	PAL/SECAM
Video system	PAL/NTSC
Preset Channels	ATV:99 DTV:1200
Input/Output	IN TV,AV,Y Pb Pr,PC,HDMI,DVD,USB OUT EARPHONE, COAXIAL
Speaker Output	5W+5W
Power requirement	DC 12V==3A
Power consumption	36W
Accessories	AC adapter, Remote controller, warranty card 2xAAA Batteries

NOTE:

This user manual is for reference only. Specifications are subject to change without notice.

Remote Controller

 1. **POWER** : Set your TV to power on or standby mode.
2. **MUTE** : Press to mute the sound. Press again or press VOL+ to unmute.
3. **0-9** : Press 0~9 to select a TV channel directly while watching TV. The channel will change after 2 seconds.
4. **DTV/ATV**: Switch between Analog and Digital TV
5. **↶** Return to the previous viewed program.
6. **S.MODE**: Press to cycle through the different sound settings
7. **SLEEP**: Select amount of time before TV turns itself off automatically.
8. **MTS** : Press to search the NICAM modes.
9. **P.MODE**: Press to cycle through the different picture settings
10. **MENU**: Open the main menu.
11. **SOURCE**: Press to view and select available input sources
12. **▲▼◀▶ ENTER**: Allow you to navigate the on-screen menus and adjust the system settings to your preference.
13. **EXIT**: Exit from the menu or sub-menu and cancel the current in process (if applicable)
14. **DISPLAY**: Press to display the source and channel's info.

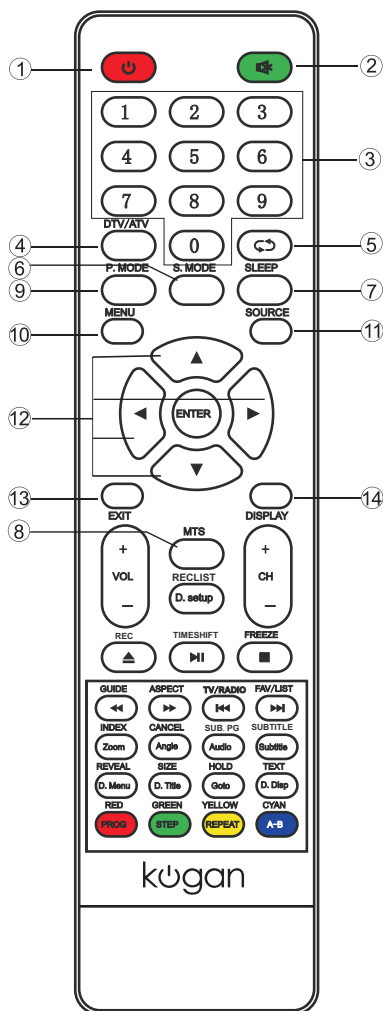


Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Slide the lid until you hear it click into place.

Remote Controller

 15. **VOL+/VOL-**: Press to increase / decrease the sound level.
16. **TV/RADIO** : 1.When watching a channel, allows you to switch between TV and Radio modes.
2.Previous chapter in PVR or Media Player mode
17. **GUIDE**:1. Launches the EPG (Electronic Program Guide)
2. Fast reverse in PVR or Media Player mode.
18. **REC LIST**: list of PVR recordings.
19. **CANCEL**: When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found , the page number will appear at the top of the TV picture, press the CANCELkey to return to the mode of text for you to browse this page.
20. **INDEX**: Request the Index page in Teletext mode.
21. **SIZE**: Change the size of display in Teletext mode.
22. **REVEAL**: Reveal or Hide the hidden words.
23. **COLOR BUTTONS**: In the on-screen menus, these buttons have different functions as specified by the colours shown on-screen. See next page for their DVD-playback functionality.
24. **CH+/CH-** : Press to scan through channels.
25. **FAV/LIST**:1. press to open the favorite list.
then you can select the favorite channel.
2. Next chapter in PVR or Media Player mode.
26. **ASPECT**:1. Select picture scale.
2.fast forward in PVR or Media Player mode.
27. **FREEZE**: press to ' pause' the picture (actual broadcast continues in background)
28. **SUB. PG** : Press to access sub page.
29. **SUBTITLE**:To show subtitles when watching DTV (broadcast-dependent)
30. **HOLD**: HOLD On or Off for current page display .
31. **TEXT**: Switch the teletext on and off.
32. **TIMESHIFT**:
1.DTV channel time shift Function.
2.Play / Pause during PVR or media playback.
33. **REC**: Begin recording current program to connected USB memory device, in PVR mode

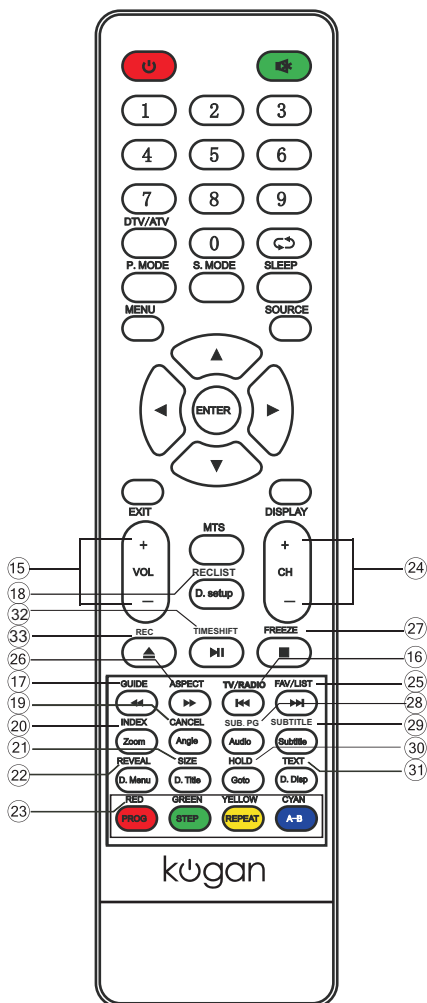

Note: Teletext is not currently broadcast in Australia.

Remote Controller

Button functionality when watching DVD
(Note that some features are disc-dependent):

- 34. **▲** :DVD EJECT.
- 35. **▶** :Play/pause DVD program.
- 36. **◀◀** :DVD previous chapter.
- 37. **▶▶** :DVD next chapter.
- 38. **◀◀** :DVD fast reverse.
- 39. **▶▶** :DVD fast forward.
- 40. **■** :Stop DVD program.
- 41. **D.setup**:DVD system setup.
- 42. **ZOOM**: In DVD source adjust DVD picture size.
- 43. **Angle**:Select DVD picture angle.
- 44. **Audio**:Select DVD disc language.
- 45. **Subtitle**:Select DVD disc subtitle language.
- 46. **D.MENU**: DVD disc menu – press this to access the menu.
- 47. **D.Title**:Press to select the DVD title.
- 48. **GOTO**:Play your favorite title/chapter/track.
- 49. **D.DISP**:Press to display the source and channel' s info.
- 50. **PROG**:Press this button to change the playback order .It varies according to the different discs.
- 51. **STEP**: Entrance of DVD OSD features.
- 52. **REPEAT**:Repeat playing the title or chapter.
- 53. **A-B**:Whilst watching a DVD, press this button the start and again at the end of a desired section to watch it repeatedly.

