



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu/DVD		Menu
	Guide		Guide
	[■][■■■]		3D
	Exit/Back		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[<>]		Format
	→ ▢ ←		TV/R
	[i+] / [≡i]		Info
	Text / [≡][/≡][]		Text
	▢▢▢▢ / [▢]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual



 
 
 
 
 
 
 
 
 
 


Original	Replacement
 << / [≡>]	 <<
 << / [≡>]	 OPT Options
 >> / Subtitle	 SUBT Subt
 >> / Subtitle	 >>
 ▲	 HOME SMART Smart
 ■ / [≡>]	 Stop
 ■<<< / [≡>]	 ZOOM Eject
 ■<<< / [≡>]	 I<<
 >>> / [⊖][≡X]	 >>I
 >>> / [⊖][≡X]	 RETURN BACK Back
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue

Original	Replacement





Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / 	 Pause
 4	 4	  / 	 Play
 5	 5	  / 	 Dual
 6	 6	  / 	 <<
 7	 7	  / 	 TV/R
 8	 8	  / Subtitle	 >>
 9	 9	  / Subtitle	 Subt
 0	 0	 	 Smart
 _ Menu/DVD	 TOP MENU MENU Menu	  / 	 Stop
 - Exit/Back	 CLEAR EXIT Exit	  / 	 Eject
 - Up	 Up	  / 	 I<<
 Left	 Left	  /  [X]	 >>I
 OK	 OK	  /  [X]	 RETURN BACK Back





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 P+	 Ch +
 P-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +

Original	Replacement
 Pause	 Pause
 Play	 Play
 Dual	 Dual
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward

