

---

# USER MANUAL

EKASN C900 DLP Smart Projector

---

V1.0



Please read this manual before operating your smart projector,  
and keep it for future reference.

Thank you for your trust and support for our products sincerely.



## Please read this instruction carefully before using the product

Thanks for purchasing and using our company product, in order to make sure your personal safety and rights, please read our product manual and operating instructions carefully, our company would not take the responsibility of which caused by any non-standard operations, please understand.

## About the product manual (described as "manual" for short below)

All Trademarks, Font Size in the manual belong to the owner of their respective rights.

If the contents in the manual is different with the actual product, please be based on the actual Product.

If there are any questions about the manual, please contact our company in 7 days from the day you bought the device, otherwise we'll think you are agreed with all the manual contents.



"The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries."

Support address: [cs@ekasn.net](mailto:cs@ekasn.net)

## There is an electronic directions app in the product system

### ① Select how to turn on the projector

1. Plug projector into power supply by provided power adapter, please ensure that the machine has been powered correctly.

**Step 1:** Turn the ON/OFF switch on device body to the ON position (if it is not turned on, it cannot be operated),

**Note:** This product has a built-in battery. After sliding the switch to ON, the indicator light will be displayed as a red-light source, and it will be displayed as a blue light source when working.

Power Button



- ① Low battery → Red light flashes
- ② Charge → green light flashes
- ③ Fully charged → green light is always on
- ④ Normal working battery status → blue light is always on
- ⑤ Standby state → Blue light flashes

**Step 2:** Press power switch on device body to turn on/off machine or press the power button on remote control to turn on/off.

**Step 3:** If you don't use it for a long time, please slide the toggle switch to OFF.


**Note:** Avoid the machine be turned on by mis-touch when the product is placed in the storage bag, thus please be sure turn the Power Switch to OFF state and the indicator light goes out before putting it into bag.

## ② Projection focusing method

Rotate focusing wheel on right side to adjust the focus manually.



## ③ Remote key description

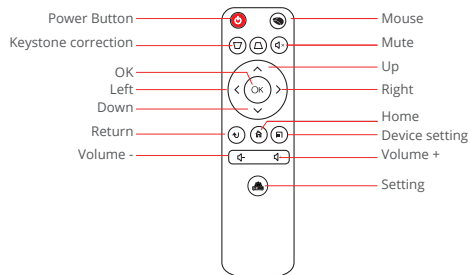

### Notice:

Please aim at projection screen when you use remote control to adjust.  
Please pull out the battery of remote control if you did not use it for a long time.

### Lens maintenance:

Please wipe it by soft dust-free cloth or with some alcohol if the lens gets dirty.  
The glass lens will be easily scratched if normal care doesn't do properly, which will affect the visual effect

### Notice:

Before maintaining the lens, please disconnect projector from power supply, wait projector lens to be cooled down. Do not touch the lens with your hands. Do not use benzene, thinners, chemical sprayers and other chemicals.  
(Please maintain projector lens accordance with our instructions strictly.)

- 4 Click the 'Manual' app, and you can scan the product manual.



Enter app and browse electronic instructions



## After-sales warranty service

### 1 year warranty service

Promise: For product performance failure caused by non-human damage, free repairing and parts replacement will be provided within 1 year from the day you received the product.

### Not covered by Warranty (but not limited to the following)

As a responsible seller, we'll take full responsibility for everything we sell, but in some avoidable situation, the device will not be covered by our warranty. We strongly recommend you follow our instruction and read following information carefully before using.

- Any repair carried out without prior authorization, misuse, impact, carelessness, abuse, fluid intake, accident; product quality problems because the improper installation software system; tear up or alter the product table, product series number, false proof mark and the seals.
- No effective 'warranty card' or has out of the warranty time.  
(Except the situation that you can prove the product is still in warranty period.)
- Alter warranty card without authorization.
- Product function damage caused by man-made reason.
- Damages caused by using non-original parts or using the device's parts improperly.
- Damages caused by incorrect usage, maintenance, safekeeping which is not following our product manual.