


Outdoor Light Sensing Stake Timer

Instruction Manual

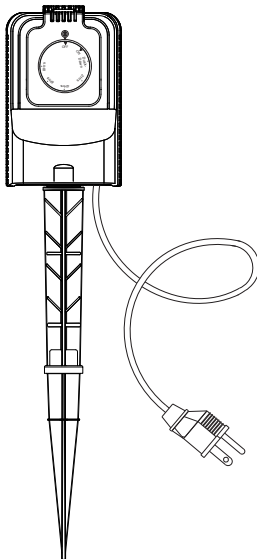

Thank you for your purchase.
Please contact us if you have any problem.
Email: support@dewenwils.com
Please attach your User Name or Order ID so that
we can assist you better.

◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

1. Do not connect any devices which may exceed the maximum ratings of this timer.
2. Do not immerse in water.
3. Children are not allowed to use the timer without supervision.
4. Do not disassemble or repair the product, but only by authorized service personnel.
5. Please always unplug and store indoors when not in use.

◆ **Installation**

As shown in the figure, connect the three sections together. Be sure to firmly tighten the stake to the body before installing into the ground.

Tips: If the ground is too hard to insert the stake, digging a hole that matches the stake with a hard object will be perfect.

◆ **Operating Instructions**

OFF: Power is OFF to attached devices

ON: Power is ON to attached devices

Dusk - Dawn: Power will turn on at dusk and remain on until dawn

2 Hrs: Power will turn on at dusk and remain on for 2 hours

4 Hrs: Power will turn on at dusk and remain on for 4 hours

6 Hrs: Power will turn on at dusk and remain on for 6 hours

8 Hrs: Power will turn on at dusk and remain on for 8 hours

Cycle repeats every 24 hours

02

◆ **Notes**

- 1) Once programming activates at dusk in the 2H, 4H, 6H, or 8H Mode, the program cycle will repeat before the timer being reset. Headlights, porch lights, street lamps and other external lighting sources will not interfere with the active timer program.
- 2) In the Dusk- Dawn Mode, temporary light sources like headlights, porch lights and other external light sources will not interfere with the photocell function unless the external light source is on for more than 15 minutes. In that case, the timer will shut off until darkness is restored.
- 3) When set to "ON", the timer will provide continual power to attached devices until the timer is switched to "OFF", or to any of the other operating modes.

◆ **Specifications**

Input Voltage: 125VAC, 60Hz

Max Power Rating: 15A 1875W

Cord: 6ft 14AWG SJTW

Risk of Fire. Not for permanent installation. Use only with outdoor equipment, Christmas-tree, or other seasonal decorative-lighting products having a total of 15 Ampere maximum. Do not install or use this product for more than a 90-day period. If using Christmas tree or decorative - lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.

Cord sets shall be plugged into a GFCI - protected receptacle.

If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.

After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

SUITABLE FOR INDOOR/OUTDOOR USE – STORE INDOORS WHILE NOT IN USE.

CAUTION: PLUG INTO GROUND FAULT PROTECTED RECEPTACLE ONLY.

◆ **Safety Information**

Federal Communications Commission Interference Statement

03

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

One-year Limited Warranty

Dewenwils warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty will be void if damage is caused by misuse or improper installation. Please contact us if you have any questions. Email: support@dewenwils.com.

Our dedicated customer service team will get back to you within 24 hours.



04