



Original	Substituto	Original	Substituto
 BD/ DVD Power	 +  Shift + Power	 [B]	 +  Shift + AV / Input / RDS
 Sleep	 Sleep / Timer	 Dock	 +  Shift + 5
 Power	 Power	 Tuner	 +  Shift + 6
 HDM 1	 +  Shift + 1	 FM	 Smart / List
 HDM 2	 +  Shift + 2	 AM	 +  Shift + Smart / List
 HDM 3	 +  Shift + 3	 Preset +	 CH+ / Page+
 HDM 4	 +  Shift + 4	 Preset +	 +  Shift + >> / Preset +
 AV 1	 +  Shift + 8	 Tuning+	 +  Shift + >> /
 AV 2	 +  Shift + 9	 Info	 Info / Angle
 AV 3	 +  Shift + Guide / EPG / - / -	 Memory	 Text / Go to
 AV 4	 +  Shift + 0	 Preset -	 CH- / Page-
 AV 5	 +  Shift + Favourite / Marker / PC	 Preset -	 +  Shift + I << / Preset -
 AV 6	 +  Shift + Red / Netflix /	 Tuning-	 +  Shift + << /
 Audio 1	 +  Shift + Green / APP /	 Movie	 Sound / Title
 Audio 2	 +  Shift + Yellow / YouTube /	 Music	 Audio / Language / I / I
 V-AUX	 +  Shift + 7	 Stereo	 Subtitle / EQ
 [A]	 AV / Input / RDS	 Sur Decode	 Eject / Surround





 
Original	Substituto
	Strai ght
	Di rect
	Scene BD/ DVD
	Scene TV
	Scene CD
	Scene Radi o
	Set up
	Up
	Opt i on
	Vol ume+ Vol +
	Lef t
	Ent er
	Ri ght
	Vol ume- Vol -
	BD/ DVD Ret ur n
	Down
	BD/ DVD Di spl ay

Substituto	Original
	Pi ctur e / Form at
	Zoom / Si ze
	Red / Netf lix / Search
	Green / APP / Repeat
	Yel low / You Tube / Repeat
	Bl ue / Pri me Vi deo / Random
	Set up / OPT /
	Up
	Shi ft + Set up / OPT / Tool s
	Vol +
	Lef t
	OK
	Ri ght
	Vol -
	Back / Ret ur n
	Down
	Di spl ay / Medi a

 
 
 
 
Original	Substituto
	BD/ DVD Top
	BD/ DVD Menu
	Mut e
	BD/ DVD Rec
	BD/ DVD Pl ay
	BD/ DVD St op
	BD/ DVD Pause
	BD/ DVD <<
	BD/ DVD >>
	BD/ DVD I <<
	BD/ DVD >> I
	BD/ DVD 1
	BD/ DVD 2
	BD/ DVD 3
	BD/ DVD 4
	BD/ DVD 5
	BD/ DVD 6

Substituto	Original
	D. Menu / Top
	Menu / Home
	Mut e / Di mmer
	Rec / Rec Mode
	Pl ay / Sl ow
	St op / Hol d
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	I << / Preset-
	>> I / Preset+
	1
	2
	3
	4
	5
	6



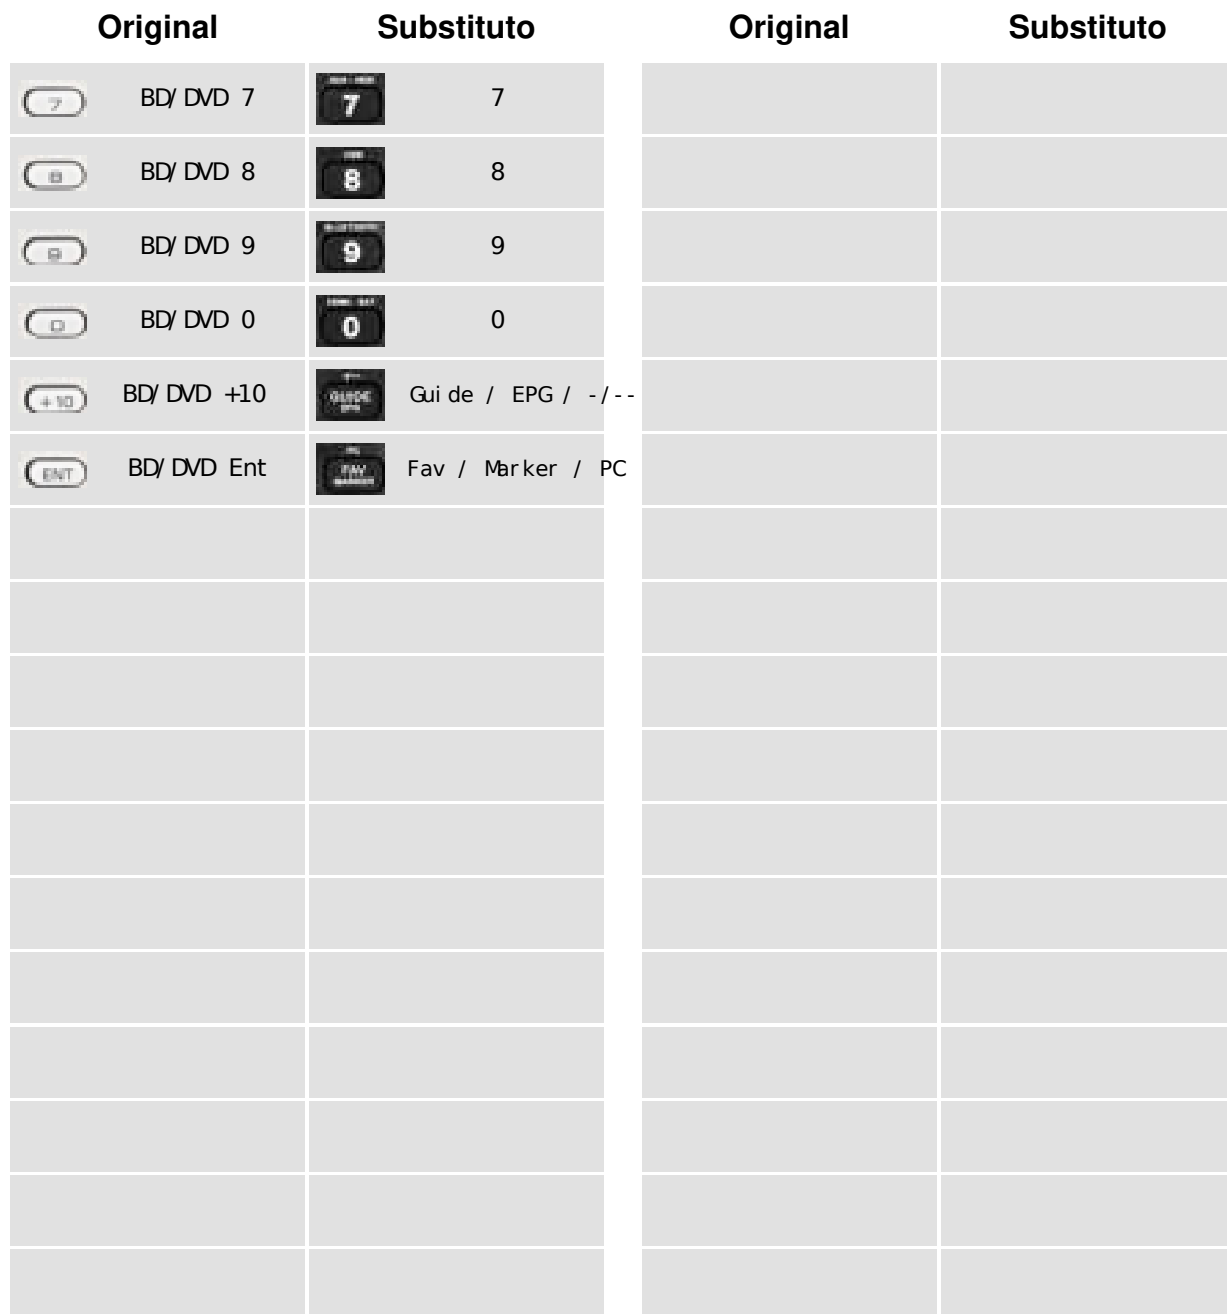



Original	Substituto	Original	Substituto
 Power Radi o	 Shift + Power	 [B]	 Shift + AV / Input / RDS
 Sleep	 Sleep / Ti ner	 Dock	 Shift + 5
 Power	 Power	 Tuner	 Shift + 6
 HDM 1	 Shift + 1	 FM	 Smart / Li st
 HDM 2	 Shift + 2	 AM	 Shift + Smart / Li st
 HDM 3	 Shift + 3	 Preset +	 CH+ / Page+
 HDM 4	 Shift + 4	 Preset +	 Shift + >> / Preset +
 AV 1	 Shift + 8	 Tuning+	 Shift + >> /
 AV 2	 Shift + 9	 Info	 Info / Angl e
 AV 3	 Shift + Gui de / EPG / - / -	 Memory	 Text / Got o
 AV 4	 Shift + 0	 Preset -	 CH- / Page-
 AV 5	 Shift + Fav / Marker / PC	 Preset -	 Shift + I << / Preset -
 AV 6	 Shift + Red / Netflix /	 Tuning-	 Shift + << /
 Audi o 1	 Shift + Green / APP /	 Movi e	 Sound / Title
 Audi o 2	 Shift + Yel low / YouTube /	 Musi c	 Audi o / Lang I / I
 V-AUX	 Shift + 7	 Stereo	 Subt it le / EQ
 [A]	 AV / Input / RDS	 Sur Decode	 Ej ect / Surround





Original	Substituto	Original	Substituto
	Strai ght		Pi ctur e / Form at
	Di rect		Zoom / Si ze
	Scene BD/ DVD		Red / Netf lix / Search
	Scene TV		Green / APP / Repeat
	Scene CD		Yel low / You Tube / Repeat
	Scene Radi o		Bl ue / Pri me Vi deo / Random
	Set up		Set up / OPT /
	Up		Up
	Opt i on		Shi ft + Set up / OPT / Tool s
	Vol ume+		Vol +
	Lef t		Lef t
	Ent er		OK
	Ri ght		Ri ght
	Vol ume-		Vol -
	RADI O Ret ur n		Back / Ret ur n
	Down		Down
	RADI O Menu		Menu / Hone
			Mute
			RADI O >>
			RADI O I <<
			RADI O >>I
			RADI O 1
			RADI O 2
			RADI O 3
			RADI O 4
			RADI O 5
			RADI O 6
			RADI O 7
			RADI O 8
			RADI O 9
			RADI O 0
			RADI O Ent
			Mute / Di mmer
			>> / Tune+
			I << / Preset-
			>>I / Preset +
			1
			2
			3
			4
			5
			6
			7
			8
			9
			0
			Fav / Marker / PC





Original	Substituto
 CD Power	 +  Shift + Power
 Sleep	 Sleep / Timer
 Power	 Power
 HDM 1	 +  Shift + 1
 HDM 2	 +  Shift + 2
 HDM 3	 +  Shift + 3
 HDM 4	 +  Shift + 4
 AV 1	 +  Shift + 8
 AV 2	 +  Shift + 9
 AV 3	 +  Shift + Guide / EPG / - / -
 AV 4	 +  Shift + 0
 AV 5	 +  Shift + Fav / Marker / PC
 AV 6	 +  Shift + Red / Netflix /
 Audio 1	 +  Shift + Green / APP /
 Audio 2	 +  Shift + Yellow / YouTube /
 V-AUX	 +  Shift + 7
 [A]	 AV / Input / RDS

Original	Substituto
 [B]	 +  Shift + AV / Input / RDS
 Dock	 +  Shift + 5
 Tuner	 +  Shift + 6
 FM	 Smart / List
 AM	 +  Shift + Smart / List
 Preset +	 +  Shift + Preset +
 Preset +	 CH+ / Page+
 Tuning+	 +  Shift + >> /
 Info	 Info / Angle
 Memory	 Text / Go to
 Preset -	 CH- / Page-
 Preset -	 +  Shift + I << / Preset -
 Tuning-	 +  Shift + << /
 Movie	 Sound / Title
 Music	 Audio / Lang I / I
 Stereo	 Subtitle / EQ
 Sur Decode	 Eject / Surround





Original	Substituto
	Straight
	Direct
	Scene BD/ DVD
	Scene TV
	Scene CD
	Scene Radi o
	Set up
	Up
	Opt i on
	Vol ume+
	Lef t
	Ent er
	Ri ght
	Vol ume-
	Down
	CD Di spl ay
	Mut e
	Pi ctur e / Form at
	Zoom / Si ze
	Red / Netf lix / Search
	Green / APP / Repeat
	Yel low / You Tube / Repeat
	Bl ue / Pri me Vi deo / Random
	Set up / OPT /
	Up
	Shi ft + Set up / OPT / Tool s
	Vol +
	Lef t
	OK
	Ri ght
	Vol -
	Down
	Di spl ay / Medi a
	Mut e / Di mmer

Original	Substituto
	CD Rec
	CD Pl ay
	CD St op
	CD Pause
	CD <<
	CD >>
	CD I <<
	CD >>I
	CD 1
	CD 2
	CD 3
	CD 4
	CD 5
	CD 6
	CD 7
	CD 8
	CD 9
	Rec / Rec Mode
	Pl ay / Sl ow
	St op / Hol d
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	I << / Preset-
	>>I / Preset +
	1
	2
	3
	4
	5
	6
	7
	8
	9



