



Kodak Easyshare Printer Dock (Series 3) Paper Jam Solution

This is a guide on how to clear a paper jam for the Kodak Easyshare Printer Dock (Series 3).

Written By: Henry Ta



INTRODUCTION

This guide will show you Step-By-Step on how to fix a paper jam on your [Kodak EasyShare Printer Dock \(Series 3\)](#)



TOOLS:

- [No tools required.](#) (1)



PARTS:

- [No parts required.](#) (1)

Step 1 — Identify the Problem




- Identify that your printer is jammed. This is usually indicated by the paper light blinking quickly.

Step 2 — Removing the Paper Tray




- Gently pull the paper tray out of the printing dock to remove it.
- When the paper tray is empty, the Paper light should glow a steady amber.

Step 3 — Disconnecting the Power Adapter

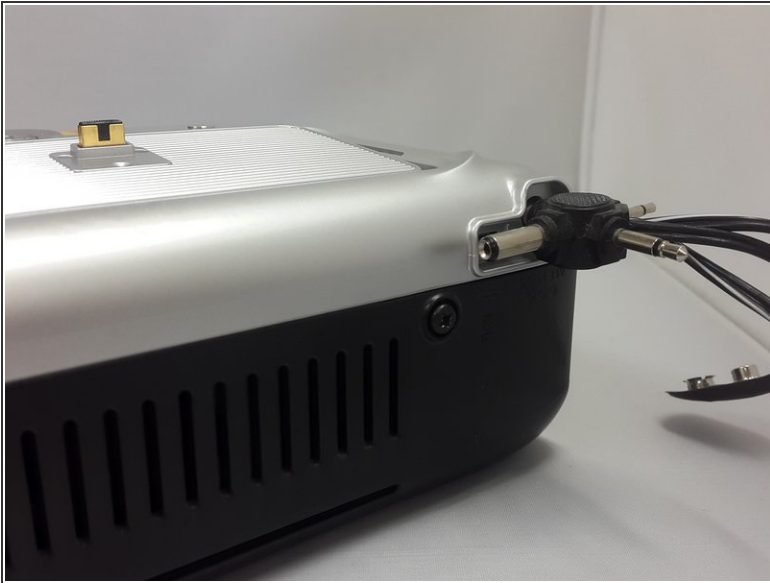

- Disconnect the power adapter from the printer for 10 seconds, and then reconnect the cord.
- ⓘ On some models, you may have to press the power button in addition to plugging in the power adapter.
- Wait for the printer to initialize in order for the jammed paper to exit from the back side.
- **Notice:** Carefully remove the paper if it does not automatically eject.

Step 4 — Removing the Paper Supply

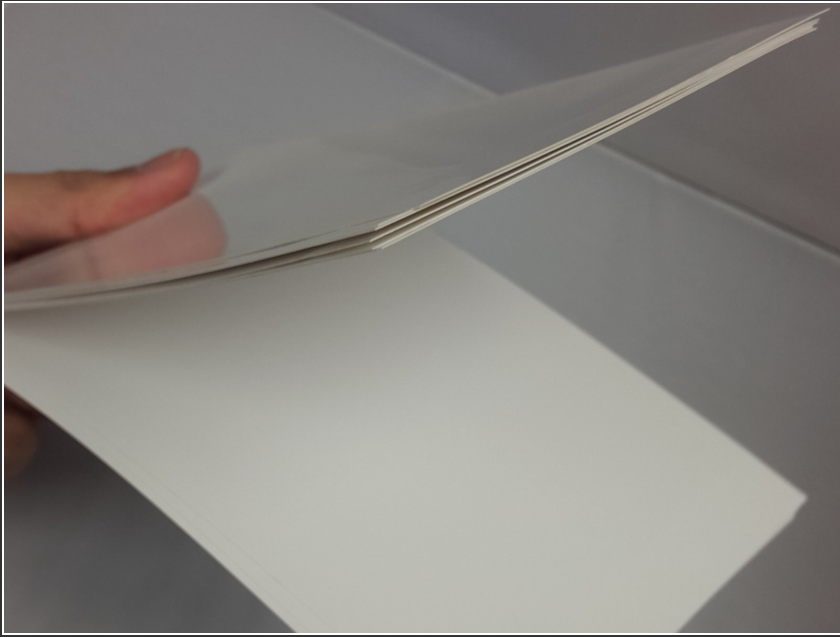

- With the paper tray in hand, open the front lid in order to gain access to the paper supply.
- Take hold of the paper bundle, and carefully “fan” it to keep the sheets from sticking together.

Step 5 — Reloading and Reinstalling the Paper Tray



- Reload the paper tray by sliding the paper bundle back into the intended slot, and then close the lid.
- Next, slide the paper tray in the printer tray slot until the tray locks into place.
- ❗ To ensure the paper tray fits squarely on the printer dock, make sure to keep the paper tray cover all the way open while installing.
- Press the power or print button to clear the paper error and resume printing.

To reassemble your device, follow these instructions in reverse order.