

## Transparent Bluetooth Speaker with Colourful Lights


NBK1TRSBLSK



# Safety & Warnings

- Read all safety notes and instructions before first use even if you are familiar with this product. Retain this user guide for future reference.
- Keep the speaker away from heat sources, open flames, direct sunlight, and moisture.
- Do not expose the speaker to rain or submerge it in water. This product is not waterproof.
- Do not attempt to open, disassemble, or modify the product in any way.
- Ensure the speaker is placed on a stable, flat surface during use.
- Supervise children when using this product. It is not a toy.
- Disconnect the speaker from power before cleaning or when not in use.
- Use a dry or slightly damp cloth to clean the exterior. Do not use abrasive cleaners or solvents.
- Charge the speaker only with the included USB-C cable or an equivalent USB-C charger.
- Avoid listening at high volume for prolonged periods to prevent hearing damage.
- Do not dispose of the product in household rubbish. Please consult local regulations for proper battery disposal and recycling methods.

# Overview

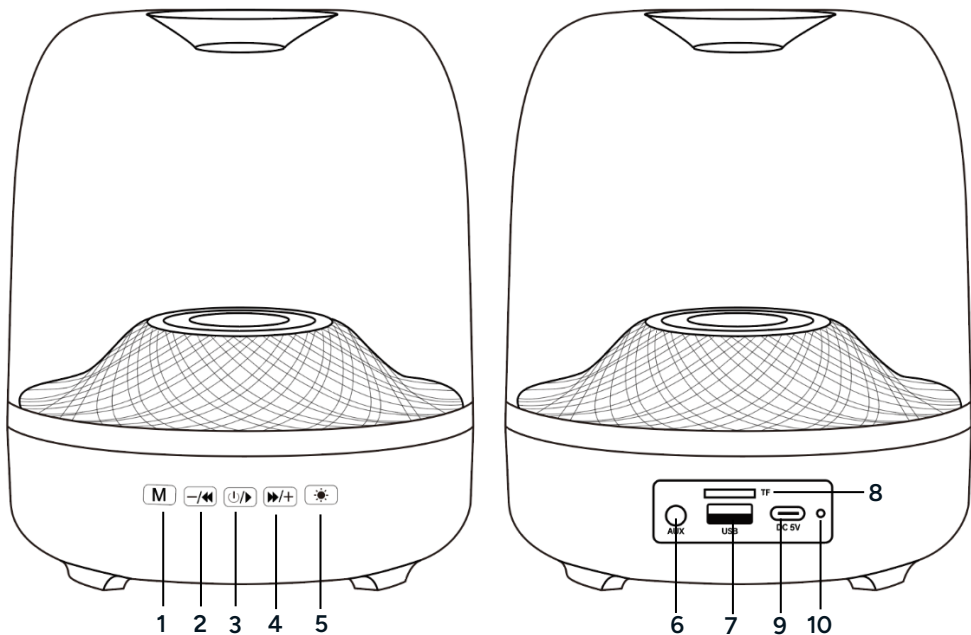

1	Mode button	Press to switch between music modes.
2	Prev. Track/Volume -	<ul style="list-style-type: none"><li>• Press the previous song.</li><li>• Press and hold to decrease volume.</li></ul>
3	Power/Play/Pause	<ul style="list-style-type: none"><li>• Press to play/pause current track.</li><li>• Press and hold to turn the speaker On/Off.</li></ul>
4	Next Track/Volume +	<ul style="list-style-type: none"><li>• Press the next song.</li><li>• Press and hold to increase volume.</li></ul>
5	Light button	<ul style="list-style-type: none"><li>• Press the switch light mode.</li><li>• Press and hold to turn the lights On/Off.</li></ul>
6	Aux Input	Connect a device using a 3.5mm aux cable.
7	USB Port	Connect a USB flash drive to play audio files.
8	SD Card Slot	Insert a MicroSD card to play audio files.
9	USB Charging Port	Charge the speaker using the USB charging cable.
10	Indicator	Shows charging status.

# Operation

## Turning the Speaker On/Off

Press and hold the 'Power/Play/Pause button' to turn the speaker on/off.

## Charging the Speaker

1. Connect the supplied USB-C charging cable to the USB charging port.
2. Connect the other end of the charging cable to a USB power adaptor (not supplied).
3. If the battery is low, the speaker will emit a 'low-power' voice prompt before shutting down.
4. During charging the indicator will turn on. When the speaker is fully charged the indicator will turn off.
5. If not used for extended periods, recharge the speaker at least once a month.

## Changing Modes

Press the 'Mode button' to cycle through available playback modes (Bluetooth, AUX, USB, MicroSD, FM).

## Bluetooth Connection

1. Turn the speaker on.
2. Enable Bluetooth on your mobile device and select 'MQ-M4' from the list of available devices.

## Aux Input

Connect your phone, computer, or other audio source to the speaker using the supplied 3.5mm AUX cable. The speaker will switch to AUX mode automatically.

## USB and MicroSD Card Playback

Insert a USB flash drive or MicroSD card with supported music files into the corresponding port.

- Supported formats include WMA, MP3, and WAV, with a maximum capacity of 32GB.

## **FM Radio**

1. Switch to FM mode by pressing the 'Mode button' until FM radio is selected.
2. Press the 'Power/Play/Pause button' to automatically scan and save available stations.

### **In FM mode:**

- Short press 'Next Track/Volume + button' to skip to the next saved station.
- Short press 'Previous Track/Volume - button' to return to the previous station.

## **TWS (True Wireless Stereo) Pairing**

1. Power on 2 identical speakers and ensure neither is currently paired via Bluetooth.
2. Double-tap the 'Power/Play/Pause button' on one speaker to enter TWS pairing mode.
3. Once the speakers are connected, open your mobile device's Bluetooth settings and connect to 'MQ-M4' to use them as a stereo pair.

## **Lighting Function**

- Press and hold the 'Light' button to turn the lighting effects on/off.
- Press the 'Light button' to cycle through the different lighting effects.

## **Music Controls**

- Press the 'Power/Play/Pause button' to play or pause music.
- Press 'Next Track/Volume + button' to skip to the next track.
- Press and hold 'Next Track/Volume + button' to increase volume.
- Short press 'Previous Track/Volume - button' to go to the previous track.
- Press and hold 'Previous Track/Volume - button' to decrease volume.

## Notes

[illegible]

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

