



GET TO KNOW YOUR MINI ROLL
GET TO KNOW YOUR MINI ROLL
GET TO KNOW YOUR MINI ROLL

SHORT PRESS to power ON/OFF
PRESS 3 seconds for Bluetooth® pairing
SHORT PRESS to power ON/OFF
PRESS 3 seconds for Bluetooth® pairing
SHORT PRESS to power ON/OFF
PRESS 3 seconds for Bluetooth® pairing

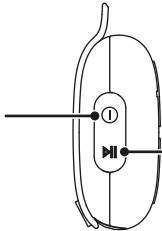

SHORT PRESS to play/pause
DOUBLE PRESS to skip
TRIPLE PRESS to previous track
SHORT PRESS to play/pause
DOUBLE PRESS to skip
TRIPLE PRESS to previous track
SHORT PRESS to play/pause
DOUBLE PRESS to skip
TRIPLE PRESS to previous track

SHORT PRESS "+" or "-" to
increase/decrease volume
SHORT PRESS "+" or "-" to
increase/decrease volume
SHORT PRESS "+" or "-" to
increase/decrease volume

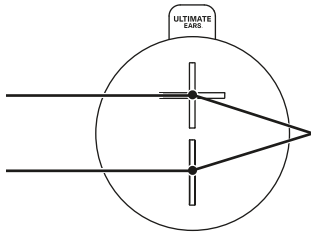


SIMULTANEOUSLY PRESS "+"
or "-" to check battery level
SIMULTANEOUSLY PRESS "+"
or "-" to check battery level
SIMULTANEOUSLY PRESS "+"
or "-" to check battery level

ULTIMATEEARS.COM


PARTY UP UNLIMITED MINI ROLL WITH AURACAST™ | PARTY UP UNLIMITED MINI ROLL
WITH AURACAST™ | PARTY UP UNLIMITED MINI ROLL WITH AURACAST™

Long Press 3 seconds on play/pause button to turn Party Up ON/OFF. Please note that when you turn on Party Up and play music, the device is in Broadcast Mode and your MINI ROLL will connect to other MINI ROLLS. | Long Press 3 seconds on play/pause button to turn Party Up ON/OFF. Please note that when you turn on Party Up and play music, the device is in Broadcast Mode and your MINI ROLL will connect to other MINI ROLLS. | Long Press 3 seconds on play/pause button to turn Party Up ON/OFF. Please note that when you turn on Party Up and play music, the device is in Broadcast Mode and your MINI ROLL will connect to other MINI ROLLS.

PRIMARY MINI ROLL

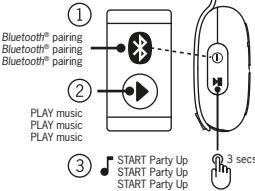


ADDITIONAL MINI ROLLS

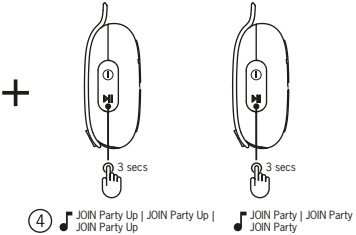

Power on. No need to connect to the phone. | Power on. No need to connect to the phone. | Power on. No need to connect to the phone.

ENSURE the hook is fully inserted into the hole on the speaker
ENSURE the hook is fully inserted into the hole on the speaker
ENSURE the hook is fully inserted into the hole on the speaker

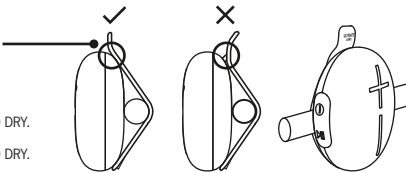

Charge with USB-C cable.
ONLY CHARGE WHEN THE SPEAKER IS CLEAN AND DRY.
Charge with USB-C cable.
ONLY CHARGE WHEN THE SPEAKER IS CLEAN AND DRY.
Charge with USB-C cable.
ONLY CHARGE WHEN THE SPEAKER IS CLEAN AND DRY.

For full user guide, visit MY.ULTIMATEEARS.COM/MINIROLL | For full user guide, visit MY.ULTIMATEEARS.COM/MINIROLL
MY.ULTIMATEEARS.COM/MINIROLL | For full user guide, visit MY.ULTIMATEEARS.COM/MINIROLL



620-012903.000

Project Macaron Mini Roll - QSG
Date 29 May 2024
File Name PDM-620-012903 00D Macaron Mini Roll qsg LOC v2.ai
P/N 620-012903 Rev. 00D

Print size 101.6mm x 101.6mm
Trim size 101.6mm x 101.6mm
Fonts News Gothic Std

Dieline

USE SOY OR VEGETABLE INKS

Inks

Black
Dieline (does not print)

Finish Matte PP Lamination
Notes

logitech