

eMAX

INSTRUCTION MANUAL *360 DEGREE ROTATION AUTOMATIC CORDLESS KETTLE*



FK-1206

Made In PRC

IMPORTED BY

ROMICO J.T. Traders Ltd

11 Dias Str., 1056 Nicosia Cyprus

Tel.22430310

CE  **LFGB**

General safety instructions

- Before commencing this device, please read the instruction manual carefully.
- Please keep these instructions, the warranty certificate, the sales receipt and, if possible, the manual with the inner packaging!
- The device is intended exclusively for private and not for commercial use.
- Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device beforehand. Pull on the plug, not on the cable.
- In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, be on in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
- This appliance can not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by the person who is responsible for their safety. Children should be supervised to keep away from this appliance and be told to play with it.
- Test the device and the cable regularly for damage. If there is damage of any kind, the device should not be used.
- Do not repair the device yourself, but rather consult an authorised expert.
- For safety reasons a broken or damaged mains lead may only be replaced by an equivalent lead from the manufacturer, our customer service department or a similarly qualified person.
- Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and scratches.
- Never use the device unsupervised! Switch on the device when ever you are not using it, even if this is only for a moment.
- Use only original accessories.
- Do not use the device outdoors.
- Under no circumstances must the device be used in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- Should the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into the water.
- Use the device only for the intended purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The kettle is only to be used with the stand provided.
- Warning: If the kettle is overfilled, boiling water may be ejected.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified personnel in order to avoid a hazard.

Special Safety Instructions for this Machine

- Use only cold water when filling.
- The water level must be between the MAX. and MIN. marks.
- Switch the machine off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the machine must not become wet.
- The kettle body used must be match with the kettle base.

First Use of the Machine

Before using the machine for the first time water should be boiled in it twice without any additives.

1. Fill the kettle with water. Do not overfill the water level indicator.
2. Place the kettle on the base.
3. Electrical connection
 - Check whether the electrical voltage that you intend to use is the same as that on the machine. Details are to be found on the label on the base.
 - Only connect the machine to a properly installed 220-240V / 50/60Hz safety socket.
4. Switch the machine to position "1". The control lamp on the water level indicator shows that the water is being boiled.
5. After boiling the machine switches off automatically.
Disconnect the machine from the mains electrical supply.
Do not press up the lid when pouring.
6. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other customer type environments;
 - bed and breakfast type environments.

Cleaning

Always remove the plug from the mains supply before cleaning the machine! The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.

The security filter can be removed for cleaning.
power supply: 220-240V ~ 50/60Hz ~ 350-2200W

The company is not responsible for any errors or omissions in any information provided.

