

Please Note: SD card not included.



Car Karaoke System *with microphone*

Thank you for purchasing this Car Karaoke System With Microphone from Streetwize. This product is designed to wirelessly transmit calls and music from your Bluetooth device to your vehicle's FM stereo system. The included karaoke microphone lets you sing-along to your favourite songs, and it can also be used for speaking as well.

The product also features two USB ports. One of the USB ports is for playing music via a USB memory stick, and the other port is for charging your portable devices. It also has a SD card slot for also playing back audio files.

To get best use out of this product, please read all of the information in this document. And, please keep this document safe for future reference.



SWSING1

Contents

<i>Product Elements</i>	3
<i>Product Connection Overview</i>	3
<i>Linking The Device To Your Vehicle's FM Stereo System</i>	4
<i>Connecting Your Smartphone to the Transmitter Via Bluetooth</i>	4
<i>Playing Music Off Your Smartphone Using the Microphone For Karaoke or Speaking</i>	4
<i>Connecting the Microphone</i>	5
<i>Using the Microphone For Music</i>	5
<i>Enabling/Disabling Voice Cut</i>	5
<i>Adjusting the Microphone Volume</i>	5
<i>Using the Microphone For Speaking</i>	5
<i>Bluetooth Calling</i>	5
<i>Playing Music from Your USB Stick / Micro SD card</i>	6
<i>Charging Your Device</i>	6
<i>Technical Support & Spare Parts</i>	7
<i>Technical Specifications</i>	7

Product Elements



Product Connection Overview

The Transmitter device connects to your smartphone via Bluetooth connectivity and it connects to your vehicle stereo via FM radio frequency.



Linking The Device To Your Vehicle's FM Stereo System

Important: In order to play music, answer calls or use the karaoke function, you need to link the transmitter to your vehicle's FM stereo.

To link the transmitter to your vehicle's FM stereo, please follow the instructions below:

1. Carefully remove the product from its packaging.
2. Plug in the transmitter to your vehicle's 12V socket.
3. Switch on your vehicle. On doing so, you will notice that the unit will turn on and will show a 'Welcome' display message.
4. On top of the display, you will notice a radio frequency has already been set. But for best performance, you will need to set the unit to an unused frequency. To change the radio frequency, press & hold the 'Answer Call' dial () button until the display prompts you to set radio frequency. Here you can change the radio frequency by rotating the dial. Please note: To change the radio frequency on the device, do not connect the karaoke microphone.
5. Once you're happy with your chosen radio frequency, switch on your vehicle's radio system and tune it to the same radio frequency as the unit to link.

Connecting Your Smartphone to the Transmitter Via Bluetooth

To connect your smartphone to the transmitter through Bluetooth connectivity, please follow the instructions below:

1. Before connecting your smartphone, make sure the Bluetooth connectivity on your smartphone has been enabled.
2. Plug in the transmitter to your vehicle's 12V socket and switch on your vehicle to turn on the device.
3. Then, on your smartphone, search for nearby Bluetooth devices. Your smartphone should pick up the transmitter's Bluetooth signal. The name of the device will vary and will be between 6 to 7 characters.
4. Link your smartphone to the transmitter. Once connected, the display on the transmitter will show that your smartphone has been connected to the transmitter.

Playing Music Off Your Smartphone

To play music off your smartphone via the Transmitter, please ensure your Smartphone is connected to the transmitter device (see instruction above). Once connected, just select and play your track on your smartphone and the transmitter will play it through your vehicle's stereo system.

When playing music off your smartphone, you can play music from various apps that stream music which include Youtube, Spotify and Amazon Prime.

When playing music off your smartphone, you can then execute the following commands via the transmitter device as shown in Table 1 on the next page.

Command	Instruction
Play / Pause Music	Press the Answer call dial () to pause/play music
Change Music Track	Press the "Λ" to play the previous track Press the "V" to play the next track
Boost Bass	Press the "Bass" button to boost the bass when playing music
Adjust Volume	Rotate the Answer call dial () to adjust volume
Change Music Source	Press the "M" button and hold on for 2 seconds to switch between Bluetooth, USB disk and Micro SD

TABLE 1

Using the Microphone For Karaoke or Speaking

Important: When you connect the microphone to the transmitter, the transmitter will automatically go into 'Karaoke Mode'.

Connecting The Microphone

1. Plug in the transmitter and switch on your vehicle.
2. Ensure the transmitter is linked to your vehicle's FM stereo system.
3. Using the supplied aux cable, connect the microphone to the transmitter. On doing so, the transmitter will automatically go into 'Karaoke mode' and this will show on the display.

Using the Microphone For Music

Once your microphone has been connected, you can play music from your Bluetooth device, USB or Micro SD card and you can sing along via the microphone.

Enabling/Disabling Voice Cut

The "Voice Cut" feature automatically lowers the volume of the music being played when you speak or sing into the microphone.

To enable the Voice Cut feature, long press the Answer call dial (). Long press the Answer call dial () to disable.

Adjusting the Microphone Volume

When in Karaoke mode, you can rotate the Answer call dial () to adjust the volume of the microphone.

Using the Microphone For Speaking

You can also use the microphone for speaking. This is ideal for coach/van/MPV tours and taxi drivers. For this you do not need to play music, just connect the microphone as shown in the steps above and speak into the microphone.

Bluetooth Calling

When your smartphone is connected to the transmitter, you are able to use the device to answer calls hands free. To use the product for Bluetooth calling, please see Table 2 below.

Command	Instruction
Answer / Hang Up Call	Press the Answer call dial () to answer/hang up a call.
Ignore Call	Press and hold the Answer call dial () for 3 seconds to reject incoming call.
Call Last Number	Press the Answer call dial () twice to dial last number.
Private Calling	When answering a call, press and hold the Answer call dial () for 3 seconds to switch to private call mode.

TABLE 2

Playing Music from Your USB Stick/Micro SD card

The transmitter comes with a Micro SD card slot found on the side and two USB ports. Out of the two USB ports, one is for playing back music tracks via a USB stick. The other is for charging USB devices.

When playing music via a Micro SD card or USB stick, please ensure the music files are either MP3/WMA/FLAC.

Please note: When playing music via USB, please use the correct USB port.

To play music via USB/Micro SD, please follow the instructions below:

1. Ensure your vehicle is switched on.
2. Insert either your USB stick/Micro SD card to the transmitter device, then plug in the transmitter to your 12V socket.
3. Please ensure the transmitter device is linked with your vehicle's FM stereo.
4. Then press the "M" button and hold for two seconds to switch between Bluetooth, USB disk & Micro SD card.
5. Refer to Table 1 for playing music.

Please Note: SD card not included.

Charging Your Device

You can use the designated USB charge port on the transmitter device to charge your portable device, which includes smartphones & tablets. Just connect your device via the designated USB charge port and switch on the vehicle to commence charge.

Troubleshooting

For information on trouble shooting please see table 3 on the next page.

Issue	Resolution
When speaking into the microphone, there is echo coming through the vehicle's sound system.	The echo is caused by microphone picking up the sound from the vehicle's speaker. To reduce the echo, position the microphone away from the speaker.
When speaking into the microphone while the music is playing, the music cuts off when speaking into the microphone.	Ensure the voice cut feature is disabled.
The USB charge time is very slow.	Check to see if you are using the designated USB charge port. The USB port that is designated for playing music has a much lower amperage, hence the slow charge time.
The transmitter is not connecting with the vehicle's FM stereo system.	Ensure the set radio frequency matches the vehicle's radio frequency.
The transmitter is not picking up the USB stick.	Check to see if you are using the USB port that is designated for playing music files.
Neither the USB/Micro SD is playing the audio file.	Check to see if the music files are either MP3/WMA/FLAC.

TABLE 3

Technical Support & Spare Parts

If you require any technical support or spare parts, please contact us on support@streetwiseaccessories.com and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

Technical Specifications

Product Name	Streetwise Car Karaoke System With Microphone
Supplier Code	SWSING1
Frequency Range	87.6 to 107.9MHz
Bluetooth IC	5.0
Frequency Stability	+/- 10ppm
Product input	12V/24V
SD card	Up to 32GB micro SD cards (SD Card Not Included)
Audio port	3.5mm stereo jack
Transmit distance	3 metres
Compatible music formats	MP3/WMA/FLAC
USB charge port (music playback)	5V/1.0A

Streetwize: Ashburton Road West, Trafford Park, Manchester M17 1RY

For Product Support:

E: support@streetwizeaccessories.com

T: +44 (0)161 447 8597

For Trade Enquiries:

E: sales@streetwizeaccessories.com

T: +44 (0)161 447 8580

www.streetwizeaccessories.com



EU Registered Address: Ace Supply Co
(Europe) Ltd, 25 Herbert Place, Dublin 2,
D02 A098 Republic of Ireland.