


# TriVision Ultra

4K Tri-LED-Laser Projector - PJ95

## User Manual

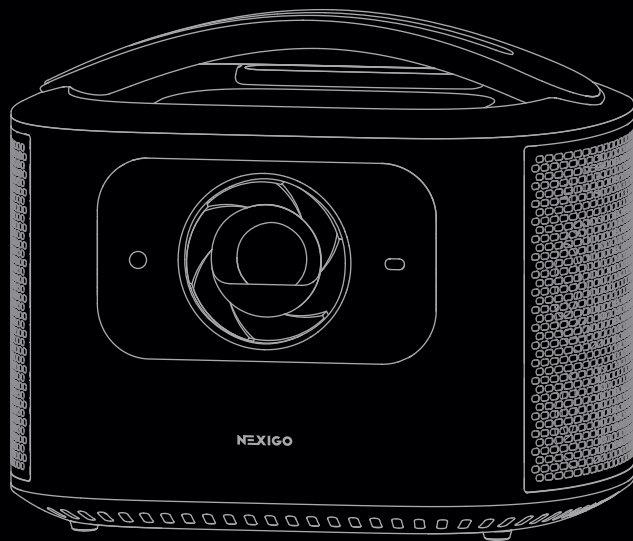

Projectors  
Support

Scan the QR code or visit our link to download  
the latest manual or watch the installation video.  
[nexigo.com/projectors-support](https://nexigo.com/projectors-support)

User Manual

# CONTENTS

---

Copyright .....	01
Disclaimer .....	01
What Does the Warranty Cover? .....	01
Important Safety Instructions .....	02
3D Safety Information .....	06
Maintenance .....	07
Welcome to the NexiGo Family! .....	08
Contact Information .....	08
What's in the Box? .....	09
Projector Diagram .....	09
Remote Introduction .....	11
Quick Start Guide .....	13
Connectors and Ports .....	24
Network Connection .....	26
Bluetooth Connection .....	26
Screen Mirroring .....	27
FAQ .....	29
Specifications .....	34
Copyright Information .....	38
Certification and Compliance .....	38

## COPYRIGHT

---

Copyright 2024 by NexiGo Corporation. All rights reserved. No part of this publication may be reproduced, distributed, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of NexiGo Corporation.

## DISCLAIMER

---

NexiGo Corporation makes no representations or warranties, either expressed or implied, regarding the contents of this publication. Specifically, NexiGo Corporation disclaims any warranties of merchantability or fitness for a particular purpose. Furthermore, NexiGo Corporation reserves the right to revise this publication and to make changes to the contents from time to time without any obligation to notify any person of such revisions or changes.

## WHAT DOES THE WARRANTY COVER?

---

For specific warranty policies, please refer to the NexiGo official website: <https://www.nexigo.com/pages/warranty-policy>.

# IMPORTANT SAFETY INSTRUCTIONS

---



The symbol is intended to alert you to read the instructions before operating and maintenance in the literature accompanying the product.

- Read the user manual in full before operating your projector and make sure to save it for future reference. Follow all instructions provided, failure to do so may result in the loss of the device or injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## CHILD SAFETY MEASURES

- Children should not play with this appliance. Cleaning and user maintenance should not be made without direct supervision by an adult.
- Children less than 3 years of age should be kept away from this device unless continuously supervised.
- Children from 3 to 8 years of age should not plug in, regulate, clean, or perform any type of maintenance on this device.
- Children from 3 to 8 years of age shall only switch the appliance on / off after all the following safety precautions have been met:
  1. The product has been placed or installed in its intended operating position.
  2. The child has direct supervision or has been given full instructions on how to use the device safely.
  3. The child is capable of understanding the hazards involved.



## OPERATIONAL SAFETY MEASURES

- For appliances having a specially prepared cord, if the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- To ensure the projector is operating smoothly and is protected from any potential overheating issues, make sure to install the projector in a location that does not block ventilation.
- To reduce the risk of fire and / or electric shock, **do not** expose the projector to moisture or liquids.
- **Do not** install the projector near heat sources or any other appliance that emits heat.
- **Do not** allow small objects to enter the projector. They may cause the projector to short circuit, which could start a fire or create an electric shock.
- **Do not** use the projector under the following conditions:
  - In extremely hot, cold, or humid environments.
    - (i) Ensure that the ambient room temperature is within 32°F~95°F (0°C~35°C)
    - (ii) Ensure that the relative humidity is 30%~85%
    - (iii) Ensure use at altitudes below 16000 feet.
  - In areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.
- **Do not** use the projector if it has been physically damaged or abused. Physical damage / abuse could include (but is not limited to) the following circumstances:
  - The projector has been dropped.
  - The power supply cord or plug has been damaged.
  - Liquid has been spilled onto/into the projector.
  - The projector has been exposed to rain or moisture.
  - Something has fallen into the projector, or something is loose inside.
- **Do not** place the projector on an unstable surface. The projector may fall over, resulting in injury or damage to the unit.

- **Do not** block the light coming out of the projector lens when in operation. Objects in the light's path may melt, cause burns, or start a fire.
- **Do not** open or disassemble the projector, as this may result in an electrical shock.
- **Do not** attempt to service the unit yourself. Opening the unit may expose you to dangerous voltages and/or other hazards. The unit should only be repaired by the manufacturer or its service agent.
- Only use attachments / accessories directly specified by the manufacturer.
- **Do not** look straight into the projector lens during operation. Excessively bright lighting has been shown to harm vision under some circumstances.
- When switching the projector off, please ensure the cooling cycle has been completed before disconnecting the power. Allow at least 90 seconds for the projector to cool down.
- **Do not** use a power source with a voltage other than what is specified in this manual.
- Disconnect the power plug from the AC outlet if the product is not being used for a long period of time.
- **Do not** set up the projector in areas where it might be subjected to vibration or shock.
- **Do not** touch the lens with your bare hands.
- Remove the battery / batteries from the remote control before storage. If the battery / batteries are left in the remote for a long period of time, they may leak.
- **Do not** use or store the projector in places where smoke may be present, as it can negatively affect the quality of the projector's performance.
- Please refer to the manual for how to properly install your projector, as nonstandard installation may affect the projector's performance.
- Use a power strip and / or surge protector with this device. Power outages and / or brownouts can damage your device.
- When installing or adjusting a ceiling or wall mount, do not use adhesives, oils, and / or lubricants. These may cause the projector case

to crack and allow it to fall from its ceiling mount causing damage to the device and / or serious injury.

- **Do not** stand the projector vertically. Doing so may cause the projector to fall over, causing damage and / or injury.
- While the projector is operating, you may notice hot air and a strong odor emanating from its ventilation grill. This is normal and not a malfunction.

**CLEANING THE PROJECTOR**

- Turn off the projector and unplug the power plug from the AC outlet before cleaning the unit.
- Use a soft, dry cloth with mild detergent to clean the product housing. Do not use harsh cleaners, waxes, or solvents to clean the unit.

**PHOTOSENSITIVE SEIZURE WARNING**

- Some viewers may experience a medical issue such as epileptic seizure or stroke when exposed to flashing images and / or lights displayed by this device. If you suffer from or have a family history of epilepsy or stroke, please consult with a medical specialist before using the projector.



**LASER**  
**1**

**CONSUMER LASER PRODUCT**

EN 50689:2021 EN 60825-1:2014+A11:2021  
IEC 60825-1:2014 IEC/EN 62471-5:2015

Complies with 21 CFR 1040.10 and 1040.11  
except for conformance as a Risk Group 2  
LIP as defined in IEC 62471-5:Ed. 1.0. For more  
information, see Laser Notice No. 57, dated  
May 8, 2019.

  
RG2

**Warning:** As with any bright light source, do not stare into the beam, RG2 IEC 62471-5:2015.

**Avertissement:** Comme pour toute source de lumière vive, ne regardez pas dans le faisceau, RG2 CEI 62471-5:2015.

## 3D SAFETY INFORMATION

---

- Children and teenagers may be more susceptible to health issues when viewing 3D projections and should be closely supervised to ensure they are not being affected.
- Pregnant women, the elderly, people who are sleep-deprived, people under the influence of alcohol, and those more prone to serious medical conditions are recommended to avoid using the projector's 3D functionality.
- Watching 3D projections while wearing 3D glasses for an extended period of time may cause headaches or fatigue. If you experience a headache, noticeable signs of fatigue, or dizziness, stop viewing the 3D projection and rest.
- If you experience any of the following symptoms, stop viewing the 3D projection immediately and consult a medical specialist: (1) altered vision; (2) light-headedness; (3) dizziness; (4) involuntary movements such as eye or muscle twitching; (5) confusion; (6) nausea; (7) loss of awareness; (8) convulsions; (9) cramps; and / or (10) disorientation. Children and teenagers may be more likely than adults to experience these symptoms. Parents should monitor their children and ask whether they are experiencing these symptoms.
- Watching 3D projections may also cause motion sickness, perceptual after-effects, disorientation, eye strain, and decreased postural stability. It is recommended that users take frequent breaks to reduce the possibility of these effects. If your eyes show signs of fatigue or dryness, or if you show any of the above symptoms, immediately stop using this device and do not resume using it until at least 30 minutes after the symptoms have subsided.
- **Do not** place your 3D projector near open stairwells, cables, balconies, or other objects that can be tripped over, run into, knocked down, broken, or in areas with fall hazards.
- Watching 3D projections while sitting too close to the screen for an extended period of time may damage your eyesight. The ideal viewing distance is at least three times the screen height. It is recommended that the viewer's eyes are level with the center of the screen.
- **Do not** use the 3D glasses for any other purpose than for watching 3D projections.

# MAINTENANCE

---

## GENERAL PRECAUTIONS

- Make sure the projector is turned off and the power cable is unplugged from the power outlet.
- Never remove any parts from the projector. Contact [Customer Support](#) when any part of the projector needs replacing.
- Never spray or pour any liquid directly onto the case.
- Handle the projector with care, as a darker-colored projector, if scuffed, may show marks more clearly than a lighter-colored projector.

## CLEANING DISCLAIMER

- It is not recommended to use any ammonia or alcohol-based cleaners on the lens or case. Some chemical cleaners have been reported to damage the lens and / or case of the projector.
- NexiGo will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

## CLEANING THE LENS

- Use a canister of compressed air to remove dust.
- If the lens is still not clean, use lens-cleaning paper or moisten a soft cloth with lens cleaner and gently wipe the surface.

CAUTION: Never rub the lens with abrasive materials.

## STORING THE PROJECTOR

If you intend to store the projector for an extended period:

- Ensure the temperature and humidity of the storage area are within the recommended range (-4°F-131°F, 30%~85% relative humidity).
- Retract the adjuster foot on the bottom of the projector.
- Remove the batteries from the remote control.
- Pack the projector in its original packaging or equivalent.

## WELCOME TO THE NEXIGO FAMILY!

---

Thank you for choosing the NexiGo TriVision Ultra! You are now part of an exclusive club: the NexiGo family! It's our job to make sure you enjoy your membership. If you have any problems, please contact us any time at [cs@nexigo.com](mailto:cs@nexigo.com) for further assistance.

From all of us here at NexiGo, we want to thank you for your trust in us. We look forward to serving you again in the near future.

Sincerely,  
The NexiGo Team

## CONTACT INFORMATION

---

Website: [www.nexigo.com](http://www.nexigo.com)


Manufacturer: Nexight INC

E-mail: [cs@nexigo.com](mailto:cs@nexigo.com)

Tel: +1(458) 215-6088

Address: 11075 SW 11th St, Beaverton, OR, 97005, US

# WHAT'S IN THE BOX?

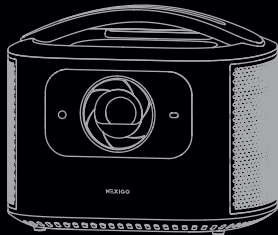

Projector x 1



AAA Batteries x 2



Power Cable with Adapter x 1




User Manual  
x 1



Quick Start  
Guide x 1



Remote x 1

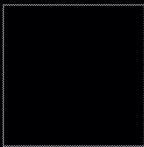


Cleaning Cloth  
x 1




Please keep the original packaging for future transportation.

# PROJECTOR DIAGRAM

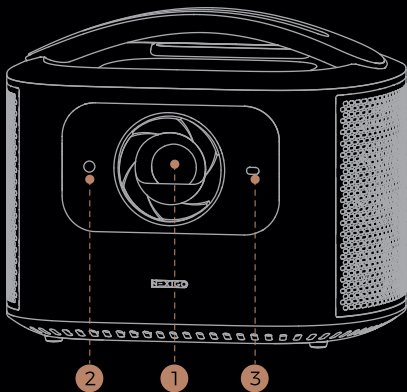


## FRONT VIEW

- 1 Projection Lens
- 2 Autofocus Camera
- 3 Eye Protection Sensor

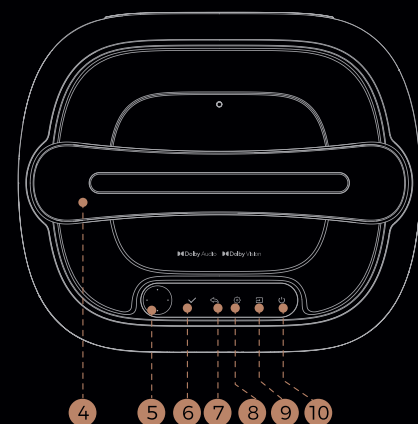


## TOP VIEW

- ④ Handle
- ⑤ Arrow Buttons
- ⑥ OK Button
- ⑦ Return Button
- ⑧ Settings Button
- ⑨ Source Button
- ⑩ Power Button

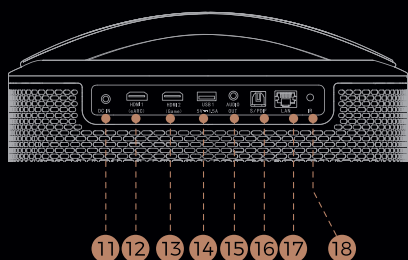

## BACK VIEW

- ⑪ Power Input
- ⑫ HDMI 1 (eARC)
- ⑬ HDMI 2 (Gaming)
- ⑭ USB 1
- ⑮ 3.5 mm Jack (Audio Out)
- ⑯ S/PDIF
- ⑰ LAN
- ⑱ IR Sensor

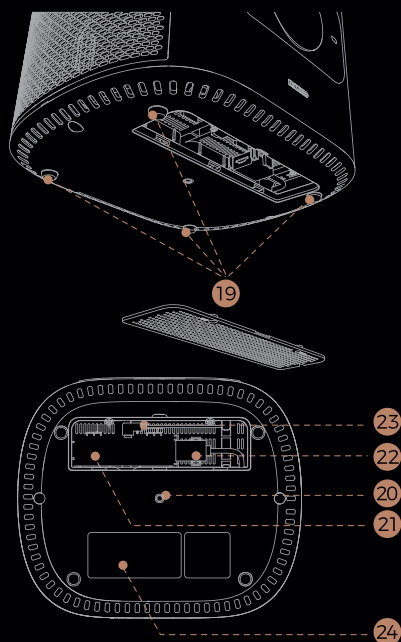


## BOTTOM VIEW

- ⑲ Height-Adjustable Feet / Ceiling Mounting Screw Threads (M4 x 20 mm)
- ⑳ Tripod Screw Thread (1/4" - 20UNC x 1/4")
- ㉑ Streaming Stick Storage Compartment
- ㉒ HDMI 3 (For Fire TV Stick)
- ㉓ Micro USB Connector (For Fire TV Stick)
- ㉔ Label Location



# REMOTE INTRODUCTION


## FUNCTION DIAGRAM

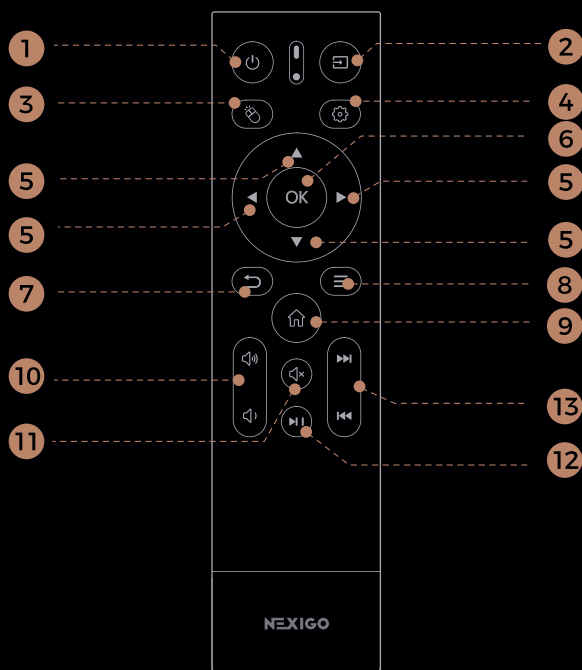

1. **Power:** Shutdown / Sleep / Restart / STR / Set Shutdown Timer
2. **Source:** Change input source
3. **Air Mouse:** Toggle motion control (recommend for typing)
4. **Settings:** Open sidebar menu
5. **Arrow Buttons:** Change selection
6. **OK:** Select the highlighted option
7. **Return:** Return to the previous screen
8. **Menu:** Press to pull up more functions on the current page (for USB devices); Press and hold to focus
9. **Home:** Return to the home page
10. **Volume + / -:** Increase or decrease the volume
11. **Mute:** Toggle audio on and off
12. **Play / Pause:** Start or stop a video
13. **Rewind / Fast Forward:** Move forward or backward within a video

## PUTTING BATTERIES IN THE REMOTE CONTROL

1. Press and slide off the battery cover.
2. Insert 2 new AAA batteries, matching the polarity (+ / -) as indicated.
3. Slide the battery cover on until it clicks into place.

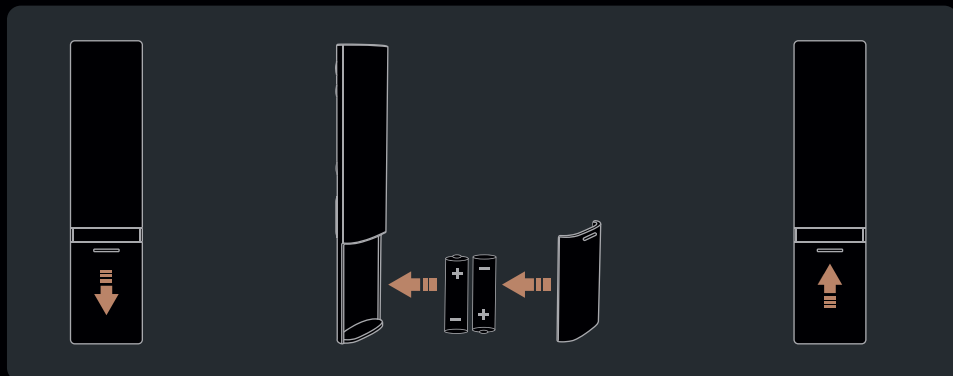

### Warning



1. Replace battery of the same type. Risk of explosion if the battery is replaced by an incorrect type;
2. Do not dispose the battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
3. Do not leave a battery in extremely high temperature environment that may result in explosion or the leakage of flammable liquid or gas;
4. Do not leave a battery in extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## CONNECTING THE REMOTE CONTROL


### Infrared (IR) Mode

Point the remote control towards the IR sensor on the back of the projector. The angle of the remote control must be within  $\pm 15$  degrees of the infrared sensor and the distance between the remote control and the sensor(s) should not exceed 26 feet (~ 8 meters).

## Bluetooth Mode

Enable Bluetooth on your TriVision Ultra by going to **Settings > Bluetooth Connection > Bluetooth > On**.

Please hold the remote within 7.87 inches of the projector. Point it towards the projector and press and hold the **Return** and **Menu** buttons simultaneously for at least 10 seconds to put the remote control into pairing mode. If the pairing is successful, the screen will display the message, "Bluetooth remote control is paired".

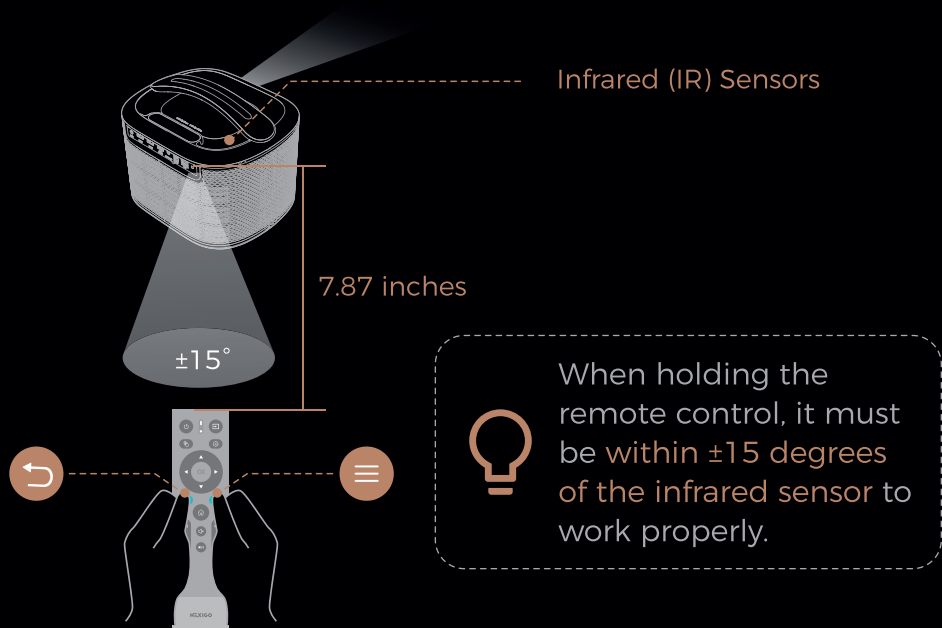

## QUICK START GUIDE


The screenshots provided in this manual are for reference only. The actual images that appear on your screen may differ depending on your current firmware.

## CHOOSING A LOCATION


The size and layout of a room is the most important factor when choosing where to place your projector. Consider the following when selecting a location:

- The size, shape, and position of your screen.
- Where a suitable power outlet is located, and
- Whether the projector will have enough room for adequate airflow.


The projector is designed to be installed in one of four layouts. You can either hang the projector from the ceiling using a special mounting bracket (not included), or simply place it on a level surface. If you choose a layout other than Desktop (front projection), you must change the projection mode. To do this, go to **Settings > Image > Projection Mode**, then select the corresponding projection mode for your layout.

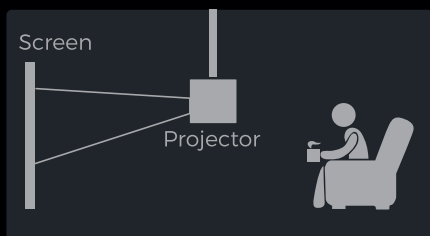


Ceiling mounted (front projection)

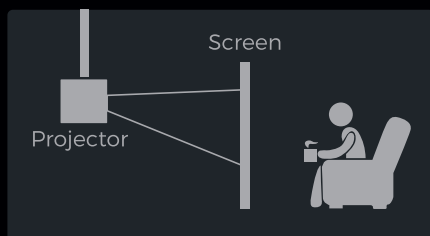

Ceiling mounted (rear projection)

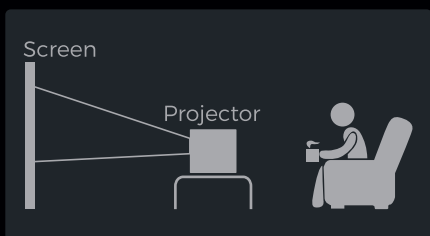

Desktop (front projection)

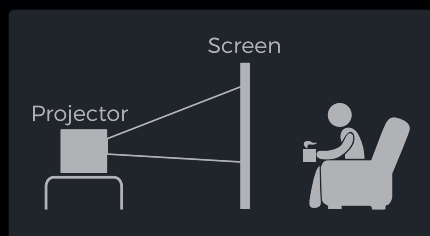

Desktop (rear projection)




- DO NOT project toward the ground.
- A rear projection screen is required to use the rear projection function.

## Mounting to a Ceiling

1. Remove the four feet on the bottom of the projector to access the mounting screw threads.


2. Find a suitable ceiling mount using the following specifications:

- The ceiling mounting holes are M4 x 20 mm in size
- 9.45" is the diagonal distance between the mounting holes
- 7.87" is the horizontal distance on the top row
- 6.89" is the horizontal distance on the bottom row
- 5.91" is the vertical distance between the top and bottom rows

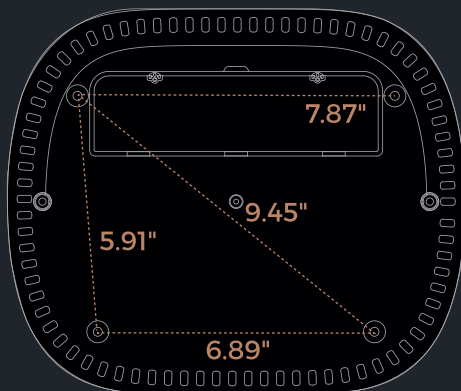

3. After mounting the projector, go to **Settings > Audio Settings > Swap Left and Right Channels** to fix the audio orientation.


DETERMINING PROJECTION DISTANCE & SIZE

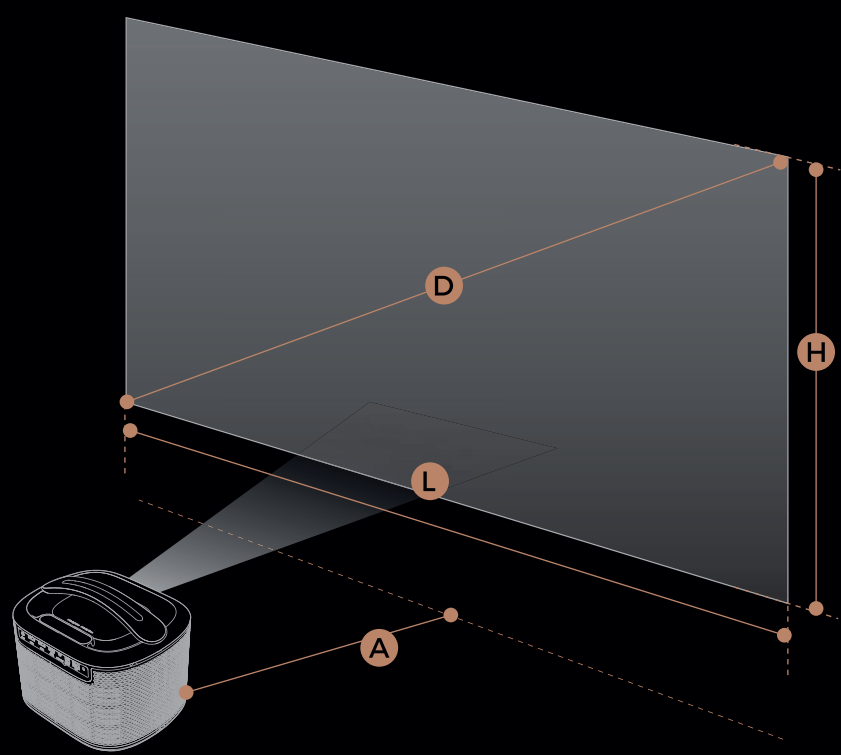

D (Inches) Screen Diagonal	L (Inches) Image Length	H (Inches) Image High	A (Feet) Projection Distance
80	68.9	39.25	7.55
90	78	44	8.48
100	87	49	9.22
110	96	54	10.1
120	104	58	11.02
130	113	63	11.96
140	122	69	12.88
150	131	74	13.88

## POWERING ON

1. Plug the projector into a power outlet using the provided power cable.
2. Press and hold the **Power** button on top of the projector for 3 seconds to turn on the TriVision Ultra.

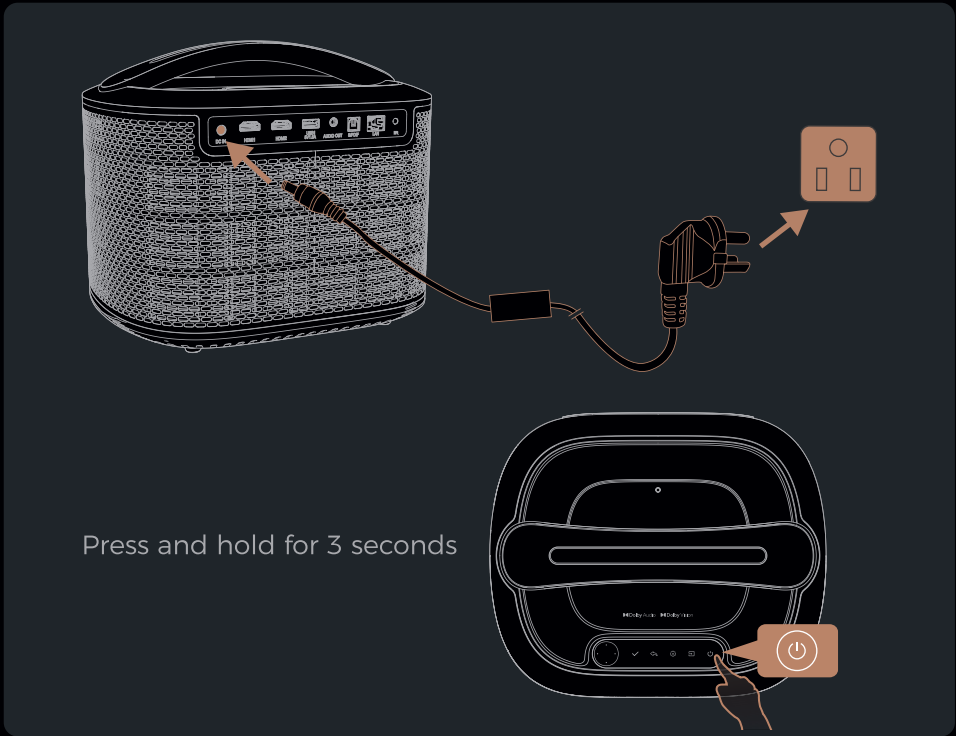

## COMPLETING FIRST TIME SET-UP

The first time you use your projector, follow the on-screen instructions to complete the basic set-up, which involves:


- Pairing the remote with the projector,
- Selecting your preferred language,
- Selecting your preferred time zone,
- Adjusting focus,
- Adjusting keystone, and
- Connecting to a network.

## ADJUSTING IMAGE CLARITY

Please adjust the focus if the image appears blurry.

### Automatic Focus

To achieve a clear image without manual adjustment, you can enable automatic focus. To do so, please go to **Settings > Image > Auto/Manual Focus > Autofocus**.

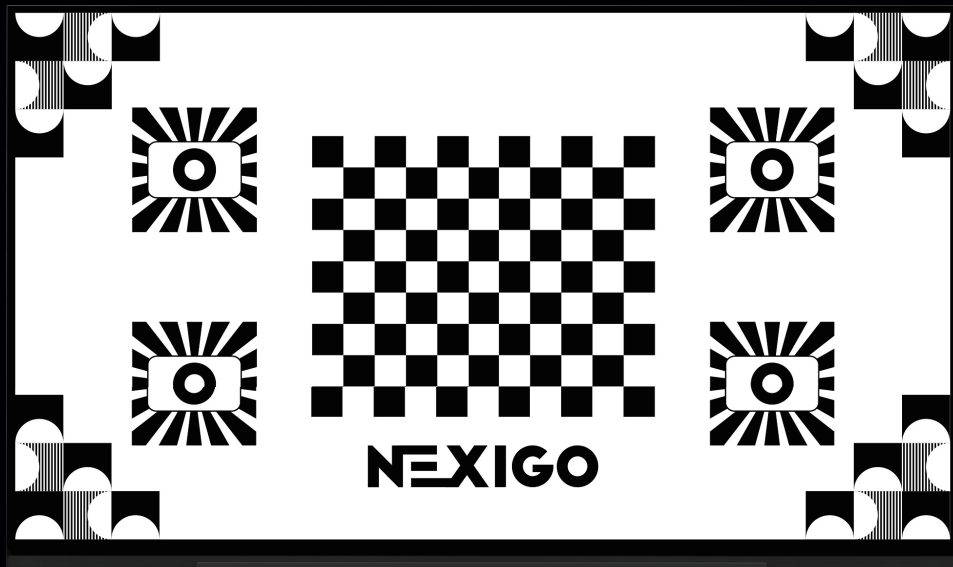


Please wait 3-5 seconds for changes to take effect.

Under **Advanced Settings**, you can also enable **Autofocus on Power on** and / or **Autofocus after Moving** as needed.



## Manual Focus

Go to Settings > Image > Auto/Manual Focus > Manual Focus. Then use the Left / Right buttons to adjust the focus.

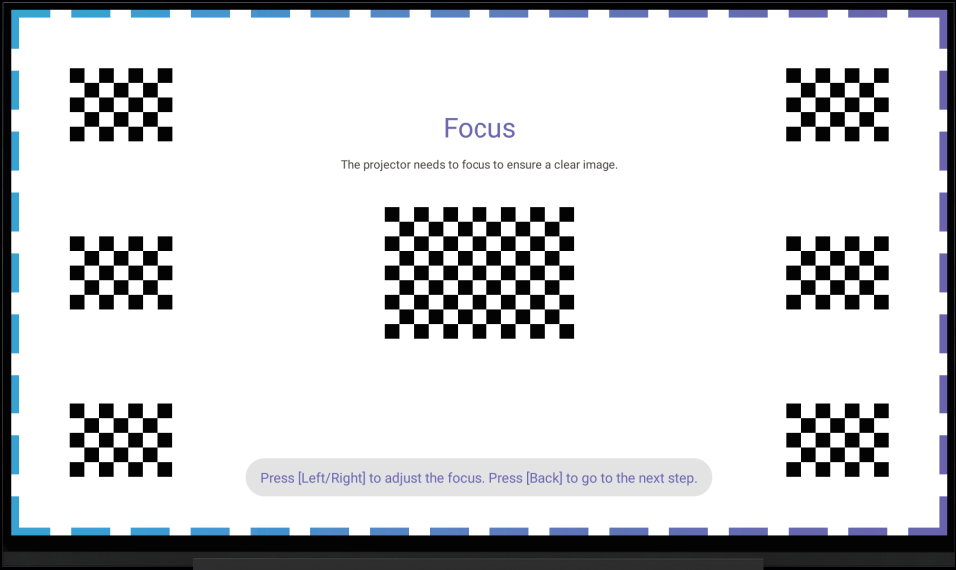


- Please wait to make manual adjustments until the TriVision Ultra has been on for at least 30 minutes.
- Please disable Autofocus on Power on and Autofocus after Moving to ensure your manual adjustments remain unchanged.

## FIXING IMAGE DISTORTION


### Adjusting the Projection Angle

Start by attempting to fix any projection distortion by twisting the adjustable feet to tilt the projector.

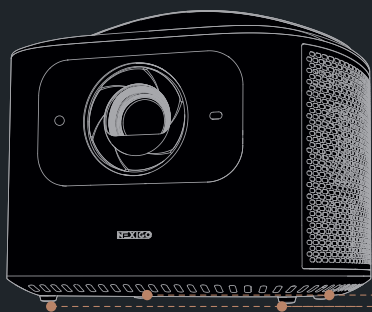


## Distortion Issue


## How To Fix

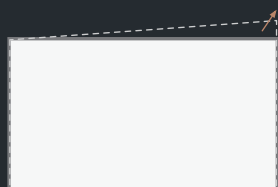


Projection is higher in the upper right corner

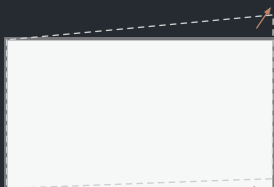


1. Raise the right feet of the projector

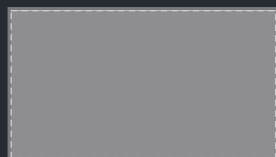

2. Rotate the projector counterclockwise.

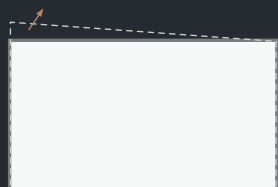

Projection is higher in the upper left corner

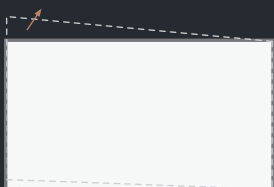

1. Raise the left feet of the projector




2. Rotate the projector clockwise

## Correcting Keystone

If the projection is still distorted after using the methods above, use **Keystone Correction** to adjust the projection.

### Automatic Keystone

If projecting onto a white wall, go to **Settings > Image > Keystone Correction > Automatic Keystone Correction**.

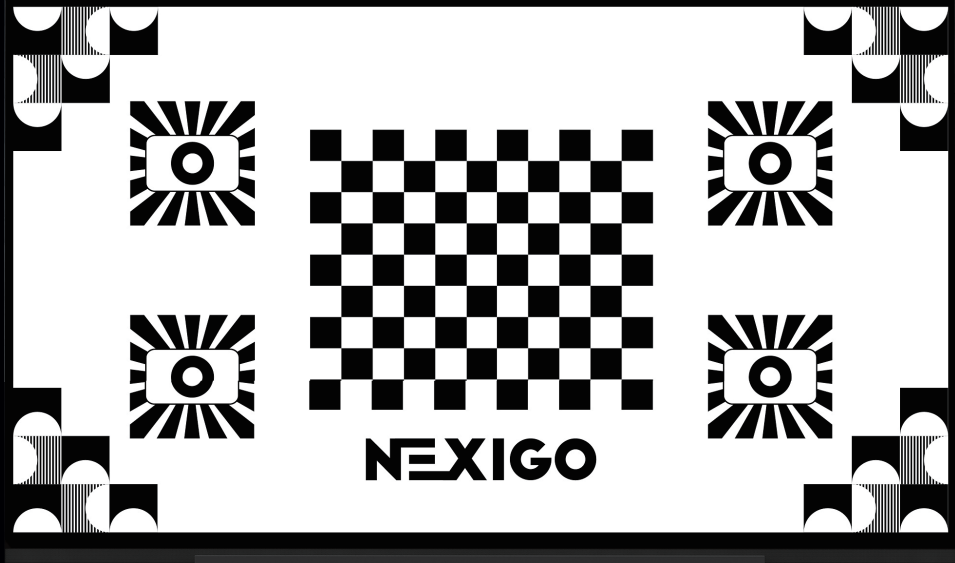

You can also activate **Auto Keystone Correction at Startup**, **Run Keystone Correction When the Device Moves**, and **Automatic Obstacle Avoidance** as needed.


If projecting onto a screen, go to **Settings > Image > Keystone Correction > Auto Screen Alignment**.



Please wait 3-5s for auto adjustment to take effect.

### Manual Keystone

Go to **Settings > Image > Keystone Correction > Manual Keystone Correction**. Then, select **Four Point** to adjust the corners only or **Eight Point** to adjust the corners and edges.

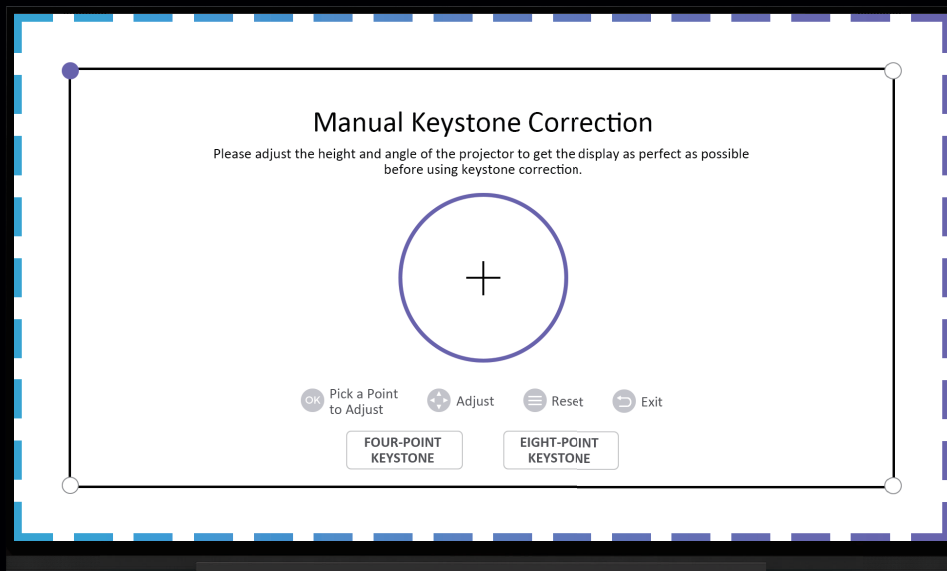

For small and precise changes, you can select **Fine Tune**.



Please disable **Auto Keystone Correction at Startup**, Run **Keystone Correction When the Device Moves**, **Automatic Obstacle Avoidance** and **Auto Screen Alignment** to ensure your manual adjustments remain unchanged.

## POWERING OFF

Press the **Power** button on the remote or device and select **Power Off** to turn off the projector. It is recommended to unplug the power if the projector is not in use for an extended period.



Press and hold for 3 seconds




Press once

# CONNECTORS AND PORTS

When connecting a device to the projector, please be sure to:

1. Turn off all devices before making any connections.
2. Make sure the cable is inserted securely, and
3. Use the appropriate cable for the device.

## DIAGRAM OF PORTS

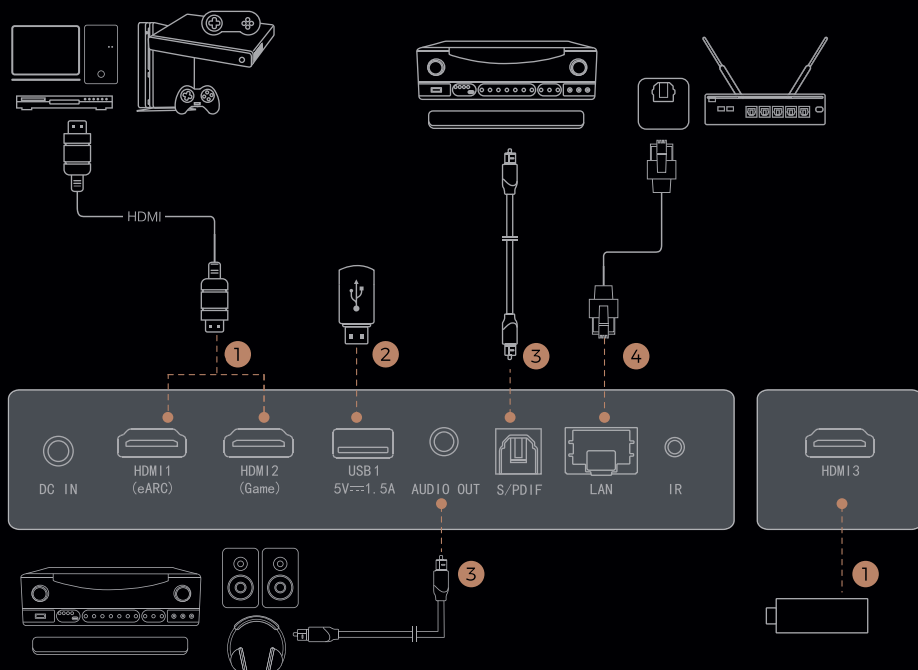

**1: HDMI 1 (eARC Support) / HDMI 2 (Recommend for Gaming) / HDMI 3 (For Fire TV Stick)**

To connect devices like cable boxes, DVD players, streaming sticks (Roku, Fire TV, etc.), and computers.

**2: USB 1**

To connect storage devices like mobile hard drives and USB flash drives.

**3: Audio Out / S/PDIF**

To connect audio devices like soundbars or speakers.

**4: LAN**

To connect an Ethernet cable.


- Please use an HDMI cable version 2.1 or higher for optimal performance (not included).
- Many laptops do not enable their video out ports automatically when connected to a projector. Usually there is a key combo to turn the external display on / off. Please refer to the documentation for your laptop to find which key combination to use to enable your laptop to display to your projector.



- If the selected input source is not displayed after the projector is turned on and the correct source has been selected, check that the input source device is powered on and properly plugged in. Also make sure that your device is in one of the supported formats below (see Timing Chart on page 35).

## FIRE TV STICK STORAGE COMPARTMENT

There is a Fire TV Stick storage compartment on the bottom of the TriVision Ultra. Loosen the screw to remove the cover. Inside, you will see an HDMI port and a USB power port inside the compartment. You can hide the TV stick inside to keep everything tidy, eliminating the need for any extra power cables.

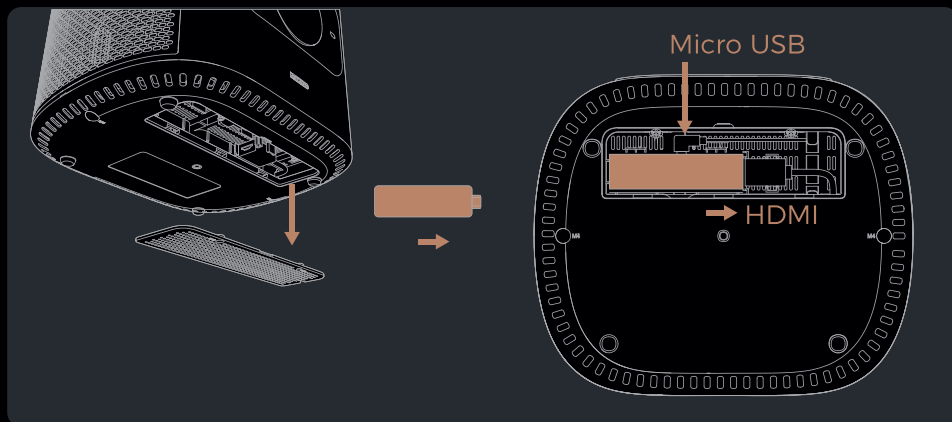

## NETWORK CONNECTION

---

You can connect to the internet via a wired or wireless connection. For a wired connection, plug in an Ethernet cable to connect. For a wireless connection, please go to **Settings > Wi-Fi Network > Wi-Fi Connection**, turn on the Wi-Fi, then select your wireless network from the list of available devices. Follow the on-screen instructions to connect your projector to Wi-Fi.



The "&" symbol is not available in the on-screen keyboard. Please use a USB keyboard as needed to input this symbol.

## BLUETOOTH CONNECTION

---

### USING THE TRIVISION ULTRA AS A BLUETOOTH SPEAKER

You can play audio from another source on the projector using Bluetooth. To do so, go to **Settings > Bluetooth Connection > Input**, then enable Bluetooth for the device you would like to connect. If necessary, connect to the TriVision Ultra from your other device as well.

### PAIRING AUDIO DEVICES

The projector can play on an external audio device via Bluetooth. To set this up, go to **Settings > Bluetooth Connection > Output**, then scroll down to **Search for Bluetooth Devices** until you see the Bluetooth audio device you wish to connect to.

### PAIRING WITH OTHER DEVICES

To pair with a controller, keyboard, mouse, remote, or most other Bluetooth devices, select **Search Devices** and choose a device to pair.



# SCREEN MIRRORING

---



Your device must be connected to the same Wi-Fi network as the TriVision Ultra before you can begin screen mirroring.

## AIRPLAY

AirPlay is an application designed to share content between Apple devices and specialized third-party pieces of hardware. To set up this connection, please refer to the following instructions.

### For iOS Devices

1. On the projector, go to **Home > Cast > AirPlay** and select **iPhone**.
2. Go to the **System Settings** on your iPhone and enable the **Screen Mirroring** function. Then, select "TriVision Ultra-XXXX" from the list of available devices to establish the connection.
3. Your device is now connected.

### For macOS Devices

1. On the projector, go to **Home > Cast > AirPlay** and select **MAC**.
2. Go to the **System Settings** on your Mac and enable the **Screen Mirroring** function. Then, select "TriVision Ultra-XXXX" from the list of available devices to establish the connection.
3. Your device is now connected.

## MIRACAST

Miracast is a software for wirelessly sharing the screen from an Android or Windows device. To set up this connection, please refer to the following instructions.

### For Android Devices

1. On the projector, go to **Home > Cast > Miracast** and select **Android**.
2. Open casting software on your Android and choose "TriVision Ultra-XXXX" from the available devices to establish the connection.
3. Your device is now connected.



Android devices may have mixed functionality with Miracast. Most devices have a built-in app that supports it. Please refer to the instructions for your device for details.

- If you have a OnePlus or Google Pixel, search for **Cast**
- If you have a Samsung, search for **Smart View**
- If you have a Sony, search for **Screen Mirroring**

Additionally, there may be third-party apps you can download to your Android device to provide Miracast functionality. We cannot guarantee that this will work as intended with all Android devices. Check with your device manufacturer for information regarding Miracast support.

### For Windows Devices

1. On the projector, go to **Home > Cast > Miracast** and select **Windows**.
2. On your Windows device, press **Windows Key + K** at the same time to open casting software and choose "TriVision Ultra-XXXX" from the available devices to establish the connection.
3. Your device is now connected.

### DLNA

DLNA is software that shares the display from another device that supports DLNA connections. To set up this connection, please refer to the following instructions.

1. On the projector, go to **Home > Cast > DLNA > DLNA**.
2. On the device that you want to cast from, open a video or other file you want to share that supports DLNA (e.g., YouTube), and then tap the button on the app that allows you to cast.
3. Select "TriVision Ultra-XXXX" from the list of options.
4. Your device is now connected.



Scan the QR code to find continuously updated FAQs and video support.

## CONNECT A SOUNDBAR OR SPEAKER TO THE TRIVISION ULTRA

To connect a soundbar or speaker, you can use one of the methods below, depending on the connection options available on your soundbar.

### Option 1: HDMI eARC or ARC (Recommended)

Connect your soundbar or speaker to the HDMI 1 port on the TriVision Ultra using an HDMI cable. Then, go to **Settings > Audio Settings > Sound Output Source** and select **HDMI eARC**. For an HDMI ARC compatible soundbar or speaker, you will also need to switch the **ARC** option to **On**. This ensures that audio is sent from the projector to the soundbar via HDMI with enhanced capabilities.

### Option 2: Optical

Connect your soundbar or speaker to the S/PDIF port on the projector using an optical cable. Then, go to **Settings > Audio Settings > Sound Output Source** and select **S/PDIF**.

### Option 3: Bluetooth

Enable Bluetooth on your soundbar or speaker and on the TriVision Ultra. On your projector, go to **Settings > Bluetooth Connection > Output**, then scroll down to **Search Device** and choose your soundbar from the list of available devices.

## CHOOSE AN AUDIO OUTPUT FORMAT

In the **Sound Output Source** menu, when you select an external speaker (options **HDMI eARC** or **S/PDIF**), you will see the following options: **PCM**, **RAW**, **Dolby Digital**, **Dolby Digital Plus**, and **Auto**. For help figuring out which of these formats to choose, refer to the advice below.

- With PCM output, the audio source is processed and decoded before it is sent to the speakers. It has wide compatibility, but the sound quality will be altered compared to the raw audio. PCM is the ideal choice if your speaker does not support end-line decoding, or if you prefer more processed sound quality.
- With RAW output, no processing or decoding is performed on the audio output by the projector, allowing the audio to retain much of the original sound quality. Generally, the RAW output is the optimal choice if you have a receiver that is capable of performing the decoding itself.
- With Dolby Digital output, the digital audio signal will be compressed into a smaller size, allowing for more efficient storage and transmission of audio data.
- With Dolby Digital Plus output, the digital audio signal will be compressed by an enhanced version of Dolby Digital that offers higher audio quality and supports additional channels.

## **NO SOUND FROM TRIVISION ULTRA**

If there is no sound coming from TriVision Ultra, you may have selected a different audio output source. Go to **Settings > Audio Settings > Sound Output Source** and select the **Built-in Speakers** to switch the audio output back to the TriVision Ultra.

## **ADJUST THE SCREEN SIZE**

### **Option 1: Moving the TriVision Ultra (Recommended)**

Change the distance between the TriVision Ultra and the surface that it projects onto to adjust the screen size.

### **Option 2: Adjust Digital Zoom**

Go to **Settings > Display > Keystone Correction > Adjust Size and Position**. Use the **Left** and **Right Arrow** buttons to adjust the Zoom, which will make the projected image smaller. Once you've adjusted Zoom, you can adjust the **Position** of the screen as needed.

## PLAY A 3D MOVIE

### Option 1: Watching on an HDMI Device

1. Press the **Source** button on the remote control and select the HDMI input source you wish to use to watch a 3D movie.
2. Turn off **Low Latency** and **24p / 50p Cinema Mode** before playing a 3D Movie. To do this, press the **Setting** button and go to **Image > Image Parameters > Others > Enable Low Latency > Off**, and **Image > 24p / 50p Cinema Mode to Off**.
3. Then, go to **Signal > Signal Source Settings > 3D Settings > 3D Format** and select one of the available 3D formats.

### Option 2: Watching on a USB Device

1. To play a video from a storage device, press the **Source** button and select **USB**.
2. Open a 3D movie file.
3. Then, enable 3D playback by navigating to **Settings > 3D Settings > 3D Format** and selecting one of the available 3D formats.

- To watch 3D videos, you must use a pair of 120Hz active shutter DLP 3D glasses with left / right eye rotation feature (not included). For the best experience, we suggest purchasing NexiGo DLP Link 3D glasses (B0CJQQHMGS) from our official website or our Amazon store. Using an external 3D Blu-ray player (not included) will further enhance your 3D viewing experience.



- 3D compatibility is limited by your input source device, as described below.

USB device: Supported 3D formats include Top-Bottom and Left-Right.

HDMI device: Supported 3D formats include Frame Sequential, Frame Packing, Top-Bottom, and Left-Right.



- Not every 3D format supports refresh rates over 30 Hz. Refer to the chart below to determine which Refresh Rates are supported by your preferred 3D format.

3D Format	Signal	Resolution	Aspect Ratio	Refresh Rate(Hz)
Frame Packing	720p	1280 x 720	16:9	24 / 30 / 50 / 60
	1080p	1920 x 1080	16:9	24 / 25 / 30 / 50 / 60
	4K	3840 x 2160	16:9	24 / 25 / 30
Left Right	720p	1280 x 720	16:9	24 / 30 / 50 / 60
	1080p	1920 x 1080	16:9	24 / 30 / 50 / 60
	4K	3840 x 2160	16:9	24 / 25 / 30
Top Bottom	720p	1280 x 720	16:9	24 / 30 / 50 / 60
	1080p	1920 x 1080	16:9	24 / 30 / 50 / 60
	4K	3840 x 2160	16:9	24 / 25 / 30

## CONTROL FIRE TV WITH TRIVISION ULTRA REMOTE

Access an HDMI device by going to **Settings > Signal Source Setting > CEC Control > On**.

This enables you to control your TV stick using the remote control that came with the TriVision Ultra.



After enabling the CEC function, the **Return** button cannot exit the current HDMI source. You can use the **Home** button to return to the projector home page, use the **Source** button to switch to another input source, or disable CEC to use the **Return** button as usual.

## **DOES NOT TURN ON**

- Please make sure that the device is properly connected to a power source. Press and hold the **Power** button on the projector to turn it on.
- If the projector is hot, please wait for it to cool down before restarting it.
- If this does not help resolve the issue, please contact NexiGo customer support at [cs@nexigo.com](mailto:cs@nexigo.com).

## **NO IMAGE**

- Power off the device and unplug the power cable. Let the device sit for one minute to allow the capacitors to discharge. After one minute, plug it in again and power on the device.
- The device providing the input source for the projector may not be powered on or connected properly. Please unplug the input device and then reconnect it, ensuring that the connection is solid.
- The input source may be incorrect. Press the **Source** button to select the correct input source.

## **SYSTEM CRASHES OR FREEZES**

- Power off the projector and unplug the power cable. Allow the projector to sit for one minute to allow the capacitors to discharge. After one minute, plug it in again and power on the device.
- Free up space on the system by deleting files you don't use.

## **PROJECTOR SHUTS DOWN FROM OVERHEATING**

- Please remove any objects that may be blocking the air vents on the projector. Then, restart the projector.
- Move the projector away from heat sources such as air ducts, space heaters, or direct sunlight.

## **THE REMOTE CONTROL DOES NOT WORK**

- The batteries may be drained. Please replace the remote control batteries with new AAA batteries.
- There may be objects in front of the IR sensor on the back of the projector. Please remove any obstacles blocking the sensor.
- The remote may be too far from the projector. Please use the remote within 26 feet of the projector.

# SPECIFICATIONS

## PROJECTOR SPECIFICATIONS

Projection System	
Display Type	DLP
Resolution	4K UHD (3840 x 2160)
Projection Size	80" to 150"
Throw Ratio	1.27:1
RAM / EMMC	4G / 128G
Audio	
Speakers	15W x 2
Dolby Audio	Yes
Connectivity	
HDMI	HDMI 2.1 x 3
USB	USB-A x 1, Micro-USB Connector x 1
Audio Out	3.5mm Jack x 1
Digital Audio Output	S/PDIF x 1
RJ45	RJ45 x 1
Wi-Fi	802.11ax Wi-Fi 6 2T2R
Bluetooth	5.2
Power	
Power Supply	24V $\Rightarrow$ 12.5A
Power Consumption	300W
Standby Mode	$\leq$ 0.5W
Adapter	Model No.: HKA300240A3-0A7 Input: 100-240V ~ 60/50Hz, 5A Output: 24V $\Rightarrow$ 12.5A, 300W



SUPPORTED FORMATS

USB File Formats:

Settings	Options	Supported Format
USB File Management	Video	MP4 / MPEG / VOB / MKV / TS / AVI / FLV / 3GPP
	Audio	MP3 / AC3 / FLAC / WAV / M4A
	Document	.doc / .docx / .txt / .pdf
	Photo	JPG / JPEG / PNG / BMP / TIF
	3D Video	Top Bottom / Left Right (Play a 3D video from applications or a USB flash drive) Frame Sequential / Frame Packing / Top Bottom / Left Right (Play a video from your HDMI source)

TIMING CHART

 The maximum supported video bit rate is 100 Mbps.

3D Support Timing

3D Format	Signal	Resolution	Aspect Ratio	Refresh Rate(Hz)
Frame Packing	720p	1280 x 720	16:9	24 / 30 / 50 / 60
	1080p	1920 x 1080	16:9	24 / 25 / 30 / 50 / 60
	4K	3840 x 2160	16:9	24 / 25 / 30
Left Right	720p	1280 x 720	16:9	24 / 30 / 50 / 60
	1080p	1920 x 1080	16:9	24 / 30 / 50 / 60
	4K	3840 x 2160	16:9	24 / 25 / 30

Top Bottom	720p	1280 x 720	16:9	24 / 30 / 50 / 60
	1080p	1920 x 1080	16:9	24 / 30 / 50 / 60
	4K	3840 x 2160	16:9	24 / 25 / 30

### HDMI PC Timing:

Signal	Resolution	Refresh Rate(Hz)
VGA	640 x 480	60 / 72 / 75 / 85
SVGA	800 x 600	56 / 60 / 72 / 75 / 85 / 120
XGA	1024 x 768	60 / 70 / 75 / 85 / 120
HD	1280 x 720	24 / 25 / 30 / 50 / 60 / 100 / 120
WXGA	1280 x 768	60 / 75 / 85 / 120
	1280 x 800	60 / 75 / 85 / 120
	1366 x 768	60
Quad-VGA	1280 x 960	60 / 85 / 120
SXGA	1280 x 1024	60 / 75 / 85 / 120
SXGA+	1400 x 1050	60 / 75 / 85 / 120
WXGA+	1440 x 900	60 / 75 / 85 / 120
UXGA	1600 x 1200	60 / 65 / 70 / 75 / 85 / 120
WSXGA+	1680 x 1050	60 / 75 / 85 / 120
WUXGA	1920 x 1200	60 / 75 / 85
HDTV	1920 x 1080	24 / 25 / 30 / 50 / 60 / 100 / 120 / 240
4K UHD	3840 x 2160	24 / 25 / 30 / 50 / 60 / 100 / 120
DCI 4K	4096 x 2160	24 / 25 / 30 / 50 / 60 / 100 / 120

HDMI Video Timing

Signal	Resolution	Aspect Ratio	Refresh Rate(Hz)
480i	720 x 480	4:3 / 16:9	60 / 120
480p	720 x 480	4:3 / 16:9	60 / 120
576i	720 x 576	4:3 / 16:9	50 / 100
576p	720 x 576	4:3 / 16:9	50 / 100
720p	1280 x 720	16:9	24 / 25 / 30 / 50 / 60 / 100 / 120
1080i	1920 x 1080	16:9	24 / 30 / 60 / 120
1080p	1920 x 1080	16:9	24 / 25 / 30 / 50 / 60 / 120 / 240
4K	3840 x 2160	16:9	24 / 25 / 30 / 50 / 60 / 120

## COPYRIGHT INFORMATION

---



Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2022 Dolby Laboratories. All rights reserved.



This product complies with the [SPECIFICATION][REVISION NUMBER]. The HDR10+™ logo is a trademark or registered trademark of HDR10+ Technologies, LLC in the United States and other countries.




FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://xperi.com/dts-patents/).  
MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, DTS-HD MASTER AUDIO, DTS-HD, THE DTS-HD LOGO, VIRTUAL:X, AND THE DTS VIRTUAL:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.

## CERTIFICATION AND COMPLIANCE

---

### CE CONFORMITY FOR EUROPEAN COUNTRIES

 EU Compliance Statement: Nexight INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

A copy of the EU Declaration of Conformity is available online at [www.nexigo.com/euro-compliance](http://www.nexigo.com/euro-compliance).

EU contact address: AMZLAB GmbH, Laubenhof 23, 45326 Essen.

## FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

## FCC Supplier's Declaration of Conformity

Product Name: 4K Tri-Color Laser Portable Projector

Model No.: PJ95

Suppliers Name: Nexight INC

Suppliers Address (USA): 11075 SW 11th St. Beaverton, OR 97005 U.S.A.

Suppliers Website: [www.nexigo.com](http://www.nexigo.com)

## FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

## IC STATEMENT

This device contains licence-exempt transmitter(s) / receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.


L'émetteur / récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Pour se conformer aux exigences de conformité CNR 102 RF exposition, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil et toutes les personnes.

# NEXIGO

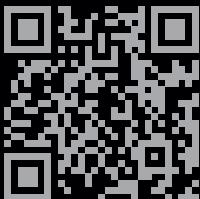

Get in touch with **FREE** online services.  
[facebook.com/letsnexigo](https://facebook.com/letsnexigo)