



MCHOSE ACE 68 HANDY GUIDE

· FN Key Combination Functions

													
Windows System	Mac System	~	F1	F2	F3	F4	F5	F6	F7	F8	F9		
	+												
F10	F11	F12	Pause	Print	Home	End	Previous Song	Next Song	Play/Pause	Stop	Mute		
													
Volume-	Volume+	Lock/Unlock Windows Key	Restore Default Settings (Spacebar)										

· Lighting Adjustments

	+							
Lighting On/Off	Switch Lighting Effects Colors	Cycle Through Lighting Effects	Lighting Brightness-	Lighting Brightness+	Lighting Speed-	Lighting Speed+		