

User Manual

Trackpad for PC, Wireless Touchpad w/ Multi-Touch Gestures, Slim, Portable, USB-C

Manuel de l'utilisateur

FR Trackpad for PC, Wireless Touchpad w/ Multi-Touch Gestures, Slim, Portable, USB-C

Manual del usuario

ES Trackpad for PC, Wireless Touchpad w/ Multi-Touch Gestures, Slim, Portable, USB-C

ユーザーマニュアル

JP Trackpad for PC, Wireless Touchpad w/ Multi-Touch Gestures, Slim, Portable, USB-C

BOF7JV5GP5

EN	Page	2	ES	Página	XX
FR	Page	XX	日本語	ページ	XX

Contents

Safety Instructions	3
Package Contents	3
Compatibility	3
Parts Overview	3
Charging the Trackpad	4
Connecting the Trackpad	4
Using the Trackpad	5
Cleaning and Maintenance	6
Troubleshooting	6
Specifications	8
Legal Notices	8
Feedback and Help	9

Safety Instructions



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury, including the following:

⚠ DANGER **Risk of suffocation!** Keep packaging materials away from children and pets. These materials are a potential source of danger, such as suffocation.

- ▶ Never use this product if it is damaged.
- ▶ Do not insert any foreign objects inside the casing.
- ▶ Protect this product from extreme temperatures, hot surfaces, open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapors, and solvents.
- ▶ Keep this product out of the reach of children and pets.

Package Contents

 
- ▶ Trackpad
- ▶ USB-C cable
- ▶ *User Manual*

 
Compatibility

- ▶ Windows 10 and Windows 11
- ▶ Android 10.0 and higher
- ▶ iOS 7.1.2 and higher
- ▶ An available USB-C port

Parts Overview

Top

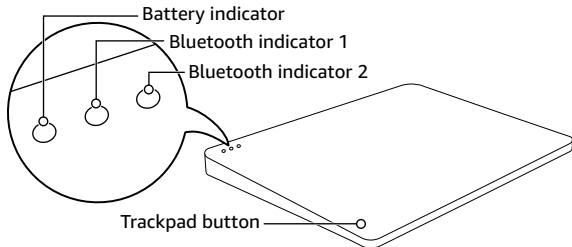



Charging the Trackpad

NOTICE: The battery indicator light blinks red when your trackpad's battery is low.

 
Connect the provided USB-C cable from the trackpad to your device or a wall charger. The battery indicator lights solid red while charging, then turns off when the battery is fully charged.

Connecting the Trackpad


You can connect your trackpad with Bluetooth or the provided USB-C cable.

USB-C Cable (Wired Mode)

1. Slide your trackpad's power switch to the OFF position.




 2. Connect the USB-C cable from your trackpad to your device. The battery indicator lights solid red when your trackpad is connected and charging. The indicator turns off when charging is complete.




Bluetooth

 1. Turn on your Bluetooth device, then make sure that Bluetooth is turned on.
2. Slide your trackpad's power switch to turn it on.



 3. Press the Bluetooth button to select Bluetooth channel 1 (green indicator) or Bluetooth channel 2 (blue indicator).



4. Press and hold the Bluetooth button for three seconds to enter pairing mode. The Bluetooth channel indicator flashes quickly.

NOTICE: If your trackpad does not pair, it continues to flash for five minutes, then enters sleep mode. Press **or touch** the trackpad button to wake it up.

5. Select **amazonbasics_trackpad 1** or **amazonbasics_trackpad 2** from your Bluetooth device's list of available devices. The Bluetooth channel indicator lights solid green (channel 1) or blue (channel 2) when successfully connected.

NOTICE: Your trackpad remembers your last Bluetooth settings. For example, if your trackpad was set to Bluetooth device 2, the next time it is turned on, it will try to connect using Bluetooth device 2.

6. To switch between Bluetooth devices, press the trackpad's Bluetooth button.

Using the Trackpad

After connecting your device, gently move your fingers on your trackpad.

- ▶ **Single-click:** Tap to select an item or perform a single click.
- ▶ **Double-click:** Tap twice to perform a double click.
- ▶ **Two-finger scrolling:** Move two fingers up or down to scroll through content.
- ▶ **Pinch-to-zoom:** Pinch two fingers together to zoom out or spread two fingers apart to zoom in.
- ▶ **Three-finger or four-finger swipe:** Swipe horizontally with three **or four** fingers to switch between open applications or desktops.

Sleep Mode

When your trackpad is connected to a device, it automatically enters sleep mode after five minutes of inactivity. Press **or touch** the trackpad button to wake it up.

If Bluetooth is connected, your trackpad enters deep sleep mode after 30 minutes of inactivity and disconnects the Bluetooth device. Press **or touch** the trackpad button to wake it up, then reconnect your Bluetooth device. See "Connecting the Trackpad" on page 4.

Cleaning and Maintenance

- ▶ Clean with a dry, lint-free cloth.
- ▶ Do not allow any water or other liquids to enter your trackpad.
- ▶ Never use corrosive detergents, wire brushes, abrasive scourers, metal, or sharp utensils to clean your trackpad.
- ▶ Store in a cool, dry area away from children and pets.

Troubleshooting

Problem

My trackpad does not pair with my Bluetooth device.

Solutions

- ▶ Make sure that your trackpad has enough battery life. The battery indicator blinks red when the battery is low. See "Charging the Trackpad" on page 4.
- ▶ Make sure that your trackpad is on.
- ▶ Make sure that your device is within the range of 10m (32.81ft). Move your trackpad closer to your device if necessary.
- ▶ Make sure that your trackpad is in pairing mode. See "Connecting the Trackpad" on page 4.
- ▶ Make sure that your trackpad is compatible with your device. See "Compatibility" on page 3.

Problem

My trackpad does not work with a wired connection.

Solutions

- ▶ Connect your trackpad using the provided cable.
- ▶ Try connecting to a different USB-C port on your device.

Problem

My trackpad stops working.

Solutions

- ▶ Make sure that your trackpad has enough battery life. The battery indicator light blinks red when the battery is low. See "Charging the Trackpad" on page 4.
- ▶ Your trackpad automatically goes to sleep after five minutes of inactivity. Press **or touch** the trackpad button to wake up your trackpad.
- ▶ If you are using a Bluetooth connection, make sure that your Bluetooth device is still paired. See "Connecting the Trackpad" on page 4.
- ▶ If you are using a wired connection, make sure that there is no damage to the provided USB-C cable.

Problem

My cursor skips/jumps around my screen.

Solutions

- ▶ Make sure that your trackpad has enough battery life. The battery indicator light blinks red when the battery is low. See "Charging the Trackpad" on page 4.
- ▶ If you are using a Bluetooth connection, make sure that your device is within the range of 10m (32.81ft). Move your trackpad closer to your device if necessary.
- ▶ If you are using a wired connection, make sure that there is no damage to the provided USB-C cable.
- ▶ Make sure that the surface of your trackpad is clean. Clean with a dry, lint-free cloth.

Specifications

Battery	1,200 mAH Li-ion (3.7 V)
Operating range	10m (32.81ft)
Working voltage	3.3 V
Operating current	30 mA avg
Standby current	4 mA avg
Sleep mode current	1.5 mA avg
Bluetooth frequency	2.402-2.480 GHz
Temperature range	-30°C to 60°C storage (-22°F to 140°F)
Operating temperature	0°C to 40°C (32°F to 104°F)
Humidity resistance	Up to 90% RH
Battery life	300 charge/discharge cycles
Charge time	3-3.5 hours
Product size	162.7mm x 122mm x 13.7mm (6.4in x 4.8in x 0.5in)
Cable length	1.8m (5.9ft)

Legal Notices

FCC – Supplier's Declaration of Conformity

Unique Identifier	Amazon Basics Trackpad for PC, Wireless Touchpad w/ Multi-Touch Gestures, Slim, Portable, USB-C ASIN: B0F7JV5GP5
Responsible Party	Amazon.com Services LLC.
U.S. Contact Information	410 Terry Ave N. Seattle, WA 98109, United States
Telephone Number	(206) 266-1000

FCC Compliance Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:

- (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more, of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and the receiver.
- ▶ Connect the equipment into an outlet on a circuit different to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Canada IC Notice

This Class B digital apparatus complies with Canadian CAN ICES (B)/NMB (B) standard.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Note to translators - please place the below text in the final FR version of the UM under the Canada IC Notice:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Feedback and Help

We would love to hear your feedback. Please consider leaving a rating and review through your purchase orders. If you need help with your product, log in to your account and navigate to the customer service / contact us page.



amazon.com/pbhelp

FCC ID: XXXXXXXX

IC: XXXXX-XXXXX



® XXX-XXXXXX



Amazon.com Services LLC, 410 Terry Ave N. Seattle, WA 98109 USA • Amazon.com.ca ULC, 605 5th Avenue South Suite 100 Seattle Washington, United States 98104 • Amazon México, S. de R.L. de C.V., Boulevard Manuel Ávila Camacho, #261 Piso 5 Colonia Polanco I Sección, Miguel Hidalgo, Ciudad de México, C.P.11510 México RFC: ACA140623TXA (☎: 800-874-8725)

Amazon Commercial Services Pty Ltd, L 37 2-26 Park ST, Sydney NSW 2000 Australia • Amazon Commerical Services (South Africa), Wembley Square 2 - 134 Solan Street, Gardens, Cape Town, Western Cape, 8001

アマゾンジャパン合同会社 東京都目黒区下目黒 1-8-1
153-0064 日本