

2501033



Please read all instructions carefully before use and retain for future reference.

Veuillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.

Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.

Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.

Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



ATTENTION This appliance has a thermal cut out switch. The thermal cut out will activate and shut down the appliance should the appliance overheat. Unplug from the mains and or battery and allow to cool for 30 minutes before re-use.

ATTENTION Cet appareil dispose d'un interrupteur d'arrêt thermique. L'arrêt thermique s'activera et éteindra l'appareil si l'appareil commençait à surchauffer.

Débranchez la prise, ou la batterie, et laissez refroidir pendant 30 minutes avant de réutiliser.

VORSICHT Dieses Gerät hat einen thermischen Ausschalter. Der thermische Ausschalter wird aktiviert und schaltet das Gerät aus, wenn das Gerät überhitzt.

Ziehen Sie den Stecker aus der Steckdose und/oder entfernen Sie den Akku und lassen Sie das Gerät 30 Minuten abkühlen, bevor Sie es erneut benutzen.

ATENCIÓN Este aparato tiene un interruptor de corte térmico. El corte térmico se activará y apagará el dispositivo si el aparato se sobrecalienta.

Desenchufe de la red y / o la batería y déjelo enfriar durante 30 minutos antes de volver a usarlo.

ATTENZIONE Questo apparecchio è dotato di un interruttore di protezione termica che accende e spegne l'apparecchio in caso di surriscaldamento.

Scollegare dalla rete elettrica e o la batteria e lasciar raffreddare per 30 minuti prima di un nuovo utilizzo.



CAUTION hot surfaces

ATTENTION Surfaces chaudes

VORSICHT heiße Oberflächen

PRECAUCIÓN superficies calientes

AVVERTENZA Superfici calde



Do not cover.

Ne pas couvrir.

Nicht abdecken.

No cubrir.

Non coprire.



Do not use outdoors.

Ne pas utiliser en extérieur.

Nicht im Freien verwenden.

No usar al aire libre.



CAUTION Do not immerse in water.

ATTENTION Ne pas immerger dans l'eau.

VORSICHT Nicht in Wasser tauchen.

PRECAUCIÓN No sumergir en agua.

AVVERTENZA Non immergere nell'acqua.

THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE.

CE PRODUIT NE CONVIENT QUE POUR DES ESPACES BIEN ISOLÉS OU UNE UTILISATION OCCASIONNELLE.

DIESES PRODUKT IST NUR FÜR GUT ISOLIERTE RÄUME ODER DEN GELEGENTLICHEN GEBRAUCH GEEIGNET.

ESTE PRODUCTO SOLO ES APTO PARA ESPACIOS BIEN AISLADOS O USO OCASIONAL.

QUESTO PRODOTTO È ADATTO SOLO PER SPAZI BEN ISOLATI O PER USO OCCASIONALE.



EN

Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only operate the appliance for its intended purpose and within the parameters specified in this manual.

This appliance is for domestic use only. Do not use outdoors or on wet surfaces.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

GENERAL SAFETY Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance.

If the appliance is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services. Do not use the appliance if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached as instructed by this instruction manual before use.

CABLES AND PLUGS Check to ensure your electricity supply matches that shown on the rating plate. This product should only be used as rated. Preferably, the socket outlet should be protected by a Residual Current Device RCD (UK/EU) Ground Fault Indicator (US).

Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorised service agent in order to avoid a hazard. The use of an extension cable is not recommended.

Do not handle the plug or appliance with wet hands.

Keep the cable away from heated surfaces.

Do not let the cable hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets.

Do not pull the cable around sharp edges or corners.

Do not leave unattended when plugged in. Unplug from outlet when not in use.

Turn off all controls before unplugging.

Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.

Always unplug before performing user maintenance, connecting or disconnecting attachments, or changing accessories.

Ensure the cable is stored safely to prevent hazards.

RISK OF PERSONAL INJURY Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides. Do not insert any objects into openings or cover the appliance.

Do not place any cardboard, plastics or paper inside or on the appliance unless stated in the instructions.

Do not use the appliance near any combustible surfaces. Only use suitable cookware where applicable. Do not use outdoors or near heat sources.

Take care not to touch any surfaces that may get hot when in use. Take care not to touch any surfaces that may remain hot for a period of time after use.

Never operate the appliance when empty.

Do not overload/overfill the appliance.

When using for the first time your appliance may give off a 'new' smell or vapour. This will dissipate after a few uses. Do not lift or move the appliance whilst in use.

Do not operate continuously for periods longer than those marked on the product or indicated in the instructions.

tions.

Ensure the appliance is switched off and unplugged before changing accessories or cleaning.

Use only as described in this manual and with DOMU Brands recommended attachments only.

TECHNICAL SPECIFICATION

Rated Voltage 220-240V

Rated Power 2500W

Rated Frequency 50Hz

FR

Veuillez lire attentivement toutes les instructions avant utilisation et conserver pour référence future.

UTILISATION PRÉVUE Utilisez uniquement l'appareil pour l'usage auquel il est destiné et dans les limites des paramètres spécifiés dans le présent manuel.

Cet appareil est destiné à un usage domestique uniquement. Ne pas utiliser à l'extérieur ou sur des surfaces mouillées.

Cet appareil n'est pas destiné à être utilisé par des personnes ayant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, à moins d'être supervisé ou de recevoir des instructions appropriées concernant l'utilisation du produit par une personne responsable de leur sécurité.

L'appareil n'est pas destiné à être commandé au moyen d'une minuterie externe ou d'un système de télécommande séparé.

SÉCURITÉ GÉNÉRALE

Ne pas laisser utiliser comme jouet. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.

Si l'appareil ne fonctionne pas correctement, a été laissé tomber, endommagé, laissé à l'extérieur ou immergé dans un liquide, ne l'utilisez pas, contactez le service clientèle de DOMU Brands.

N'utilisez pas l'appareil si des pièces semblent défectueuses, manquantes ou endommagées.

Assurez-vous que toutes les pièces sont solidement fixées conformément aux instructions de ce manuel d'instructions avant utilisation.

CÂBLES ET FICHES

Vérifiez que votre alimentation électrique correspond à celle indiquée sur la plaque signalétique. Ce produit ne doit être utilisé que tel quel. De préférence, la prise de courant doit être protégée par un indicateur de défaut de mise à la terre (US) du dispositif de courant résiduel RCD (UK/EU).

Ne pas utiliser avec un câble ou une fiche endommagée. Si le câble d'alimentation est endommagé, il doit être remplacé par un ingénieur qualifié ou un agent de service agréé afin d'éviter tout danger. L'utilisation d'une rallonge n'est pas recommandée.

Ne manipulez pas la fiche ou l'appareil avec les mains mouillées.

Gardez le câble à l'écart des surfaces chauffées.

Ne laissez pas le câble pendre au-dessus du bord de la table ou du comptoir où il pourrait être tiré accidentellement par des enfants ou des animaux domestiques.

Ne tirez pas le câble autour des arêtes vives ou des coins.

Ne laissez pas sans surveillance lorsque vous êtes branché. Débranchez la prise lorsqu'il n'est pas utilisé.

Désactivez toutes les commandes avant de les débrancher.

Ne débranchez pas en tirant sur le câble. Pour débrancher, saisissez la fiche, pas le câble.

Débranchez toujours avant d'effectuer l'entretien de l'utilisateur, de connecter ou de déconnecter des pièces jointes ou de changer d'accessoires.

Assurez-vous que le câble est rangé en toute sécurité pour éviter les dangers.

RISQUE DE BLESSURE PERSONNELLE

Placez toujours votre appareil loin du bord du plan de travail, sur une surface ferme, plane et résistante à la chaleur avec suffisamment d'espace de tous les côtés. N'insérez pas d'objets dans les ouvertures et ne couvrez pas l'appareil.

Ne placez pas de carton, de plastique ou de papier à l'intérieur ou sur l'appareil, sauf indication contraire dans les instructions.

N'utilisez pas l'appareil à proximité d'un combustible

Surfaces. N'utilisez que des ustensiles de cuisine appropriés, le cas échéant.

Ne pas utiliser à l'extérieur ou près de sources de chaleur.

Veillez à ne pas toucher les surfaces qui pourraient devenir chaudes lors de l'utilisation. Veillez à ne pas toucher les surfaces qui peuvent rester chaudes pendant un certain temps après utilisation.

N'utilisez jamais l'appareil lorsqu'il est vide.

Ne surchargez pas ou ne surchargez pas l'appliance.

Lors de la première utilisation, votre appareil peut dégager une « nouvelle » odeur ou vapeur. Cela se dissipera après quelques utilisations. Ne soulevez pas ou ne déplacez pas l'appareil pendant son utilisation.

Ne pas utiliser en continu pendant des périodes plus longues que celles indiquées sur le produit ou indiquées dans les instructions.

Assurez-vous que l'appareil est éteint et débranché avant de changer d'accessoires ou de nettoyer.

Utilisez uniquement comme décrit dans ce manuel et avec les pièces jointes recommandées par DOMU Brands uniquement.

SPÉCIFICATION TECHNIQUE

Tension nominale 220-240V
Puissance nominale 2500W
Fréquence nominale 50Hz

DE

Bitte lesen Sie alle Anweisungen vor dem Gebrauch sorgfältig durch und bewahren Sie sie zum späteren Nachschlagen auf.

BESTIMMTER GEBRAUCH Betreiben Sie das Gerät nur für den vorgesehenen Zweck und innerhalb der in dieser Anleitung angegebenen Parameter.

Dieses Gerät ist nur für den Hausgebrauch bestimmt. Nicht im Freien oder auf nassen Oberflächen verwenden.

Dieses Gerät ist nicht dafür bestimmt, durch Personen mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangels Erfahrung und mangels Wissen benutzt zu werden, es sei denn, sie werden durch eine für ihre Sicherheit zuständige Person beaufsichtigt oder erhalten von ihr eine angemessene Einweisung in die Benutzung des Geräts.

Das Gerät ist nicht für den Betrieb mit einer externen Zeitschaltuhr oder einem separaten Fernbedienungssystem vorgesehen.

ALLGEMEINE SICHERHEIT

Das Gerät darf nicht als Spielzeug verwendet werden. Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.

Wenn das Gerät nicht richtig funktioniert, fallen gelassen, beschädigt, im Freien gelassen oder in Flüssigkeit getaucht wurde, verwenden Sie es nicht, sondern wenden Sie sich an den Kundendienst von DOMU Brands.

Verwenden Sie das Gerät nicht, wenn Teile defekt sind, fehlen oder beschädigt sind.

Vergewissern Sie sich vor dem Gebrauch, dass alle Teile entsprechend den Anweisungen in dieser Bedienungsanleitung sicher befestigt sind.

KABEL UND STECKER

Vergewissern Sie sich, dass Ihre Stromversorgung mit der auf dem Typenschild angegebenen übereinstimmt. Dieses Produkt darf nur für den angegebenen Zweck verwendet werden. Vorzugsweise sollte die Steckdose durch einen Fehlerstromschutzschalter (RCD) (UK/EU) oder einen Erdschlussanzeiger (US) geschützt sein.

Verwenden Sie das Gerät nicht mit einem beschädigten Kabel oder Stecker. Wenn das Versorgungskabel beschädigt ist, muss es von einem qualifizierten Techniker oder einer autorisierten Kundendienststelle ausgetauscht werden, um eine Gefährdung zu vermeiden. Die Verwendung eines Verlängerungskabels wird nicht empfohlen.

Fassen Sie den Stecker oder das Gerät nicht mit nassen Händen an.

Halten Sie das Kabel von erhitzten Oberflächen fern.

Lassen Sie das Kabel nicht über den Rand des Tisches oder der Arbeitsplatte hängen, wo es von Kindern oder Haustieren versehentlich herausgezogen werden könnte.

Ziehen Sie das Kabel nicht um scharfe Kanten oder Ecken.

Lassen Sie das Gerät nicht unbeaufsichtigt, wenn es eingesteckt ist. Ziehen Sie den Stecker aus der Steckdose, wenn Sie ihn nicht benutzen.

Schalten Sie alle Steuerungen aus, bevor Sie den Stecker ziehen.

Ziehen Sie nicht am Kabel, um den Stecker zu entfernen. Fassen Sie zum Ausstecken den Stecker an, nicht das Kabel.

Ziehen Sie immer den Netzstecker, bevor Sie Wartungsarbeiten durchführen, Anbaugeräte anschließen oder abtrennen oder Zubehörteile austauschen.

Stellen Sie sicher, dass das Kabel sicher gelagert wird, um Gefahren zu vermeiden.

VERLETZUNGSGEFAHR

Stellen Sie Ihr Gerät immer von der Kante der Arbeitsplatte entfernt auf eine feste, ebene, hitzebeständige Fläche mit ausreichend Platz an allen Seiten. Stecken Sie keine Gegenstände in die Öffnungen und decken Sie das Gerät nicht ab.

Legen Sie keine Pappe, Plastik oder Papier in oder auf das Gerät, es sei denn, dies ist in der Anleitung angegeben.

Verwenden Sie das Gerät nicht in der Nähe von brennbaren Oberflächen. Verwenden Sie gegebenenfalls nur geeignetes Kochgeschirr.

Nicht im Freien oder in der Nähe von Wärmequellen

verwenden.

Achten Sie darauf, dass Sie keine Oberflächen berühren, die während des Gebrauchs heiß werden können.
Achten Sie darauf, dass Sie keine Oberflächen berühren, die nach der Benutzung noch einige Zeit heiß bleiben können.

Betreiben Sie das Gerät niemals im leeren Zustand.

Überladen Sie das Gerät nicht und füllen Sie es nicht zu voll.

Bei der ersten Benutzung kann Ihr Gerät einen "neuen" Geruch oder Dampf abgeben. Dieser verflüchtigt sich nach einigen Benutzungen. Heben Sie das Gerät nicht an und bewegen Sie es nicht, während es in Betrieb ist.

Betreiben Sie das Gerät nicht ununterbrochen über die auf dem Produkt angegebene oder in der Anleitung genannte Dauer hinaus.

Vergewissern Sie sich, dass das Gerät ausgeschaltet und vom Stromnetz getrennt ist, bevor Sie das Zubehör wechseln oder das Gerät reinigen.

Verwenden Sie das Gerät nur wie in diesem Handbuch beschrieben und nur mit den von DOMU Brands empfohlenen Anbaugeräten.

TECHNISCHE SPEZIFIKATION

Nennspannung 220-240V

Nennleistung 2500W

Nennfrequenz 50Hz

ES

Lea atentamente todas las instrucciones antes de usar y consérvelas para futuras referencias.

USO PREVISTO Utilice el aparato únicamente para el fin previsto y dentro de los parámetros especificados en este manual.

Este aparato es solo para uso doméstico. No lo use al aire libre ni en superficies mojadas.

Este aparato no está diseñado para ser utilizado por personas con capacidades físicas, sensoriales o mentales reducidas, o falta de experiencia y conocimiento, a menos que una persona responsable de su seguridad lo supervise o le dé las instrucciones adecuadas sobre el uso del producto.

El aparato no está diseñado para ser operado por medio de un temporizador externo o un sistema de control remoto separado.

SEGURIDAD GENERAL

No permita que se use como juguete. Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.

Si el aparato no funciona correctamente, se ha caído, dañado, dejado al aire libre o sumergido en líquido, no lo use, comuníquese con el Servicio de atención al cliente de DOMU Brands.

No utilice el aparato si alguna pieza parece estar defectuosa, faltante o dañada.

Asegúrese de que todas las piezas estén bien ajustadas según las instrucciones de este manual de instrucciones antes de usarlas.

CABLES Y ENCHUFES

Verifique que su suministro de electricidad coincida con el que se muestra en la placa de características. Este producto solo debe usarse según la clasificación. Preferiblemente, la toma de corriente debe estar protegida por un Dispositivo de Corriente Residual RCD

(Reino Unido/UE) Indicador de Falla a Tierra (EE.UU.).

No lo use con un cable o enchufe dañado. Si el cable de alimentación está dañado, debe ser reemplazado por un ingeniero calificado o un agente de servicio autorizado para evitar una situación peligrosa. No se recomienda el uso de un cable de extensión.

No manipule el enchufe o el aparato con las manos mojadas.

Mantenga el cable alejado de superficies calientes.

No permita que el cable cuelgue sobre el borde de la mesa o la encimera, donde los niños o las mascotas podrían tirar de él sin darse cuenta.

No tire del cable alrededor de bordes afilados o esquinas.

No lo deje desatendido cuando esté enchufado. Desenchufe del tomacorriente cuando no esté en uso.

Apague todos los controles antes de desenchufarlos.

No desenchufe tirando del cable. Para desenchufar, sujete el enchufe, no el cable.

Desenchufe siempre antes de realizar el mantenimiento del usuario, al conectar, desconectar o al cambiar accesorios.

Asegúrese de que el cable esté guardado de forma segura para evitar peligros.

RIESGO DE LESIONES PERSONALES

Siempre ubique su aparato lejos del borde de la encimera, en una superficie firme, plana y resistente al calor con suficiente espacio alrededor de todos los lados. No inserte ningún objeto en las aberturas ni cubra el aparato.

No coloque cartón, plástico o papel dentro o sobre el aparato a menos que se indique en las instrucciones.

No utilice el aparato cerca de ninguna superficie combustible. Solo use utensilios de cocina adecuados cuando corresponda.

No lo use al aire libre ni cerca de fuentes de calor.

Tenga cuidado de no tocar ninguna superficie que pueda calentarse durante el uso. Tenga cuidado de no tocar ninguna superficie que pueda permanecer caliente durante un período de tiempo después de su uso.

Nunca opere el aparato cuando esté vacío.

No sobrecargue ni llene en exceso el aparato.

Al usarlo por primera vez, su aparato puede desprender un "nuevo" olor o vapor. Esto se disipará después de algunos usos. No levante ni mueva el aparato mientras esté en uso.

No opere continuamente por períodos más largos que los marcados en el producto o indicados en las instrucciones.

Asegúrese de que el aparato esté apagado y desenchufado antes de cambiar los accesorios o limpiarlo.

Úselo solo como se describe en este manual y solo con los accesorios recomendados por DOMU Brands.

ESPECIFICACIÓN TÉCNICA

Voltaje clasificado 220-240V

Potencia nominal 2500W

Frecuencia clasificada 50Hz

IT

Leggere attentamente le istruzioni prima dell'uso e conservarle per riferimenti futuri.

USO PREVISTO Utilizzare l'apparecchio solo per lo scopo previsto e specificato in questo manuale.

Questo apparecchio è destinato esclusivamente all'uso domestico. Non utilizzarlo all'aperto o su superfici bagnate.

Questo apparecchio non è destinato all'uso da parte di persone con capacità fisiche, sensoriali o mentali ridotte, mancanza di esperienza o conoscenza, a meno che non siano sorvegliate o abbiano ricevuto adeguate istruzioni sull'uso del prodotto da parte di una persona responsabile della loro sicurezza.

L'apparecchio non è destinato ad essere utilizzato con un timer esterno o un sistema di controllo remoto separato.

SICUREZZA GENERALE

L'apparecchio non è un giocattolo. I bambini devono essere sorvegliati per garantire che non giochino con esso.

Se l'apparecchio non funziona correttamente, è caduto, danneggiato, lasciato all'aperto o immerso in un liquido, non utilizzarlo, ma contattare immediatamente il Servizio Clienti DOMU Brands.

Non utilizzare l'apparecchio se alcune parti sembrano difettose, mancanti o danneggiate.

Assicurarsi che tutte le parti siano fissate saldamente, come indicato da questo manuale.

CAVI E SPINE

Verificare che l'alimentazione elettrica corrisponda a quella indicata sulla targhetta dei dati di funzionamento. Questo prodotto dovrebbe essere utilizzato solo con la potenza nominale. Preferibilmente, la presa di corrente dovrebbe essere protetta da un Dispositivo di Corrente Residua RCD (Regno Unito/Unione Europea) o da un Indicatore di Guasto a Terra (Stati Uniti).

Non utilizzare con un cavo o una spina danneggiati. Se il cavo di alimentazione è danneggiato deve essere sostituito da personale qualificato o da un agente di assistenza autorizzato per evitare un pericolo. L'uso di prolunghine non è raccomandato.

Non maneggiare la spina o l'apparecchio con le mani bagnate.

Mantenere il cavo lontano da superfici calde.

Non lasciare il cavo penzolante dal bordo del tavolo o del piano cucina dove potrebbe essere tirato involontariamente da bambini o animali domestici.

Non far scorrere il cavo su spigoli o angoli appuntiti.

Non lasciare incustodito quando collegato. Scollegare dalla presa quando non in uso.

Spegnerne completamente tutti i comandi prima di scollegare.

Non scollegare tirando il cavo. Per scollegare, afferrare la spina, non il cavo.

Scollegare sempre prima di eseguire la manutenzione da parte dell'utente, cambiare, collegare o scollegare accessori.

Assicurarsi che il cavo sia riposto in modo sicuro e corretto per evitare pericoli.

RISCHIO DI LESIONI

Posizionare sempre l'apparecchio lontano dal bordo del piano di lavoro, su una superficie ferma, piatta e resistente al calore con spazio sufficiente su tutti i lati. Non inserire alcun oggetto nelle aperture o coprire

l'apparecchio.

Non mettere cartone, plastica o carta all'interno o sull'apparecchio, a meno che non sia indicato nelle istruzioni.

Non utilizzare l'apparecchio vicino a superfici infiammabili.

Non utilizzare all'aperto o vicino a fonti di calore.

Stare attenti a non toccare le superfici che potrebbero scaldarsi durante l'uso. Prestare attenzione a non toccare le superfici che potrebbero rimanere calde per un certo periodo di tempo dopo l'uso.

Non far funzionare l'apparecchio a vuoto.

Non sovraccaricare o riempire eccessivamente l'apparecchio.

Quando si utilizza per la prima volta, l'apparecchio potrebbe emettere odore "di nuovo" o un vapore. Questo svanirà dopo alcuni utilizzi. Non sollevare o spostare l'apparecchio durante l'uso.

Non utilizzare in modo continuo per periodi più lunghi di quelli indicati sul prodotto o nelle istruzioni.

Assicurarsi che l'apparecchio sia spento e scollegato prima di cambiare accessori o pulirlo.

Utilizzare l'apparecchio solo come descritto in questo manuale ed esclusivamente con accessori raccomandati da DOMU Brands.

SPECIFICHE TECNICHE

Tensione Nominale 220-240V

Potenza Nominale 2500W

Frequenza Nominale 50Hz

WELCOME

Thank you for purchasing the new Oil filled radiator . In order to fully benefit from this product please read the following instructions

carefully and store this user manual in a safe place for future reference.

IMPORTANT INSTRUCTIONS

IMPORTANT: Read these instructions fully before using the heater. Retain these instructions for future reference.

Basic safety precautions should always be followed when using electrical products, especially when children are present.

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PERSON, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE

ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.

WARNING

To reduce the risk of fire, electrical shock, or injury to person:

1. Ensure the power source conforms to the electrical requirements of the appliance 220-240V~50-60Hz.
2. Connect the appliance to a single-phase AC power supply of the voltage specified on the rating label.
3. This product is intended for indoor, non-commercial, non-industrial, household use only. Do not use outdoors. Do not use the product for any other purpose.
4. This appliance will get hot when in use. To avoid injury, do not touch hot surfaces.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. In order to avoid overheating, do not cover the heater.
8. Never leave the heater unattended while it is in use. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
9. Do not use the product while sleeping or place it near a person who is sleeping.
10. Extreme caution is necessary when any heater is used by or near children, invalids or elderly person and whenever the heater is left operating and unattended.
11. The heater must not be located immediately below an electrical socket- outlet.
12. Do not place the cord under carpets, cover it under a rug. Make sure the cord is free from any obstacles where it will not be tripped over.
13. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
15. Avoid the use of an extension cord as this may overheat and cause a risk of fire.
16. Do not use extension leads. Using the wrong type could cause increased resistance resulting in heat damage to carpets, fixtures, and fittings.
17. Use the heater in a well-ventilated area. Do not insert or allow objects to enter any ventilation or exhaust opening. To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Use the heater on flat, dry surfaces only.
18. Do not place this heater near flammable materials, surfaces, or substances such as furniture, pillows, beddings, papers, clothes and curtains, as there may be a risk of fire. Keep the above flammable materials, surfaces, or substances at least 1m away from the front, rear and sides of the heater.
19. Never cover the appliance or use to dry laundry or sit on it.

20. Do not use the heater in any areas where petrol, paint or other flammable liquids are stored e.g. Garages or workshops as a hot, arcing or sparking parts inside the heater.

21. Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the heater where it may fall into bathtub or other water container.

22. This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. If provided, use handles when moving the product.

23. To disconnect the appliance, turn the controls to the "0" position, then remove the plug from the electrical outlet. Disconnect the plug (do not pull on the power cord) from the electrical outlet.

24. Be sure that no other appliances are in use on the same electrical circuit as your product as an overload can occur.

25. This heater is filled with a precise quantity of special oil.

26. Repair requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leakage.

27. Regulations concerning the disposal of oil when scrapping the appliance have to be followed. 28. The heater should not be used in a room, of which the floor area is less than 5 m².

29. The cord shouldn't be placed nearby the hot surface of the appliance.

30. Do not use this heater if it has been dropped.

31. Do not use if there are visible signs of damage to the heater

32. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

33. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

34. Children of less than 3 years should be kept away unless continuously supervised.

35. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

36. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

37. The meaning of figure  in marking is "DO NOT COVER".

38. Do not plug or unplug the appliance from the electrical outlet with wet hands.

39. This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.


WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

CONTROLS AND FUNCTIONS

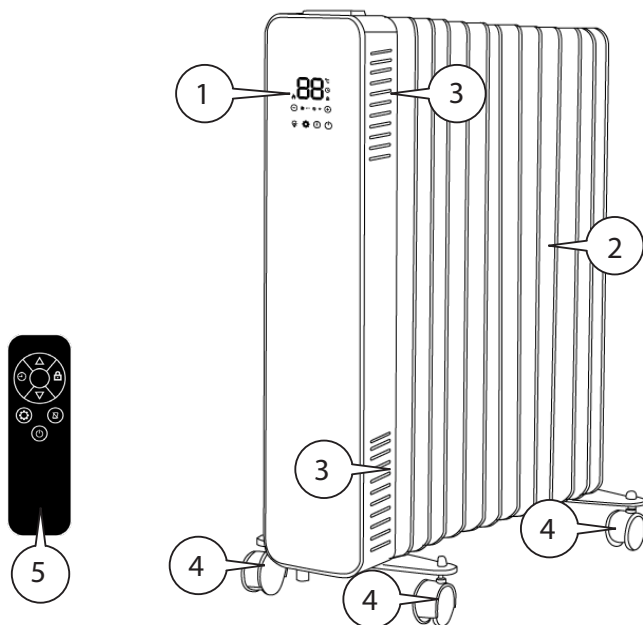

- 1.1. LED control panel
- 2. Radiant fins
- 3. Ventilation slots
- 4. Castor
- 5. Remote control

ASSEMBLY INSTRUCTIONS

The heater is packaged with the wheels and brackets unattached. Once fitted allow at least five minutes for all the oil to reach the heating element prior to connecting the power supply.

WARNING:

Do not operate without the wheels attached.

Always operate the heater only in upright position (feet on the bottom, controls on the top), any other position could cause irreparable harm.

It is normal when heaters are turned on for the first time, or when they are turned on after having not been used for a long period, they may emit some smells and fumes. This will disappear when the heater has been on for a short while.

1. Place the radiator body upside-down on a scratch-free location, make sure it is stable and will not fall.
2. Screw off the wing nuts from the U-shaped bolt provided, attach the U-shaped bolt to the U-facing flange between first and second fins (near the front cover).
3. To attach the castor mounting plate to the radiator body, you should insert the threaded ends of the U bolt in the holes on the castor mounting plate.
4. Screw the wing nuts back to the U bolt and fasten the wing nut properly.

Note: Do not over tighten as you may cause damage to the radiator flange.


5. Screw off spherical nut from the castor, align the shaft to the hole of the castor mounting plate, insert in, and screw on the spherical nut.

6. Repeat the steps 1,2,3,4 and 5 on the rear of the radiator for mounting the rest of the castors.

Note:

1. The rear castors must be mounted between the end two fins.

2. Please do assemble the front wheels and panel as the product as described on the manual, if not, the oil heater will fall off.

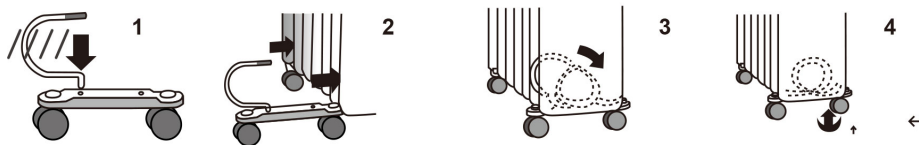

INSTRUCTIONS FOR USE

Positioning the heater:

The heater is for floor-standing use only. Place it in an upright position on a firm, level, dry and heat-resistant floor surface, taking into considering all relevant safety information on the previous pages. Make sure there are no flammable or heat sensitive materials or substances within 1 m of the heater.

Connecting the heater:


Make sure the unit is properly assembled before use.

Plug in the heater making sure the voltage indicated on its rating label coincides with the power supply.

To avoid overloading a circuit, only plug the heater into a circuit that has no other appliances connected. Do not plug it into a power board or socket adaptor; do not use an extension cord.

The heater can be operated from the control panel on the unit, or with the supplied remote control. The buttons on both operate the same functions. When using the remote control, ensure it contains AAA battery. When using the remote control, always point at the control panel of the heater with a maximum distance of 2 meters.

CONTROL PANEL AND REMOTE-CONTROL FUNCTIONS

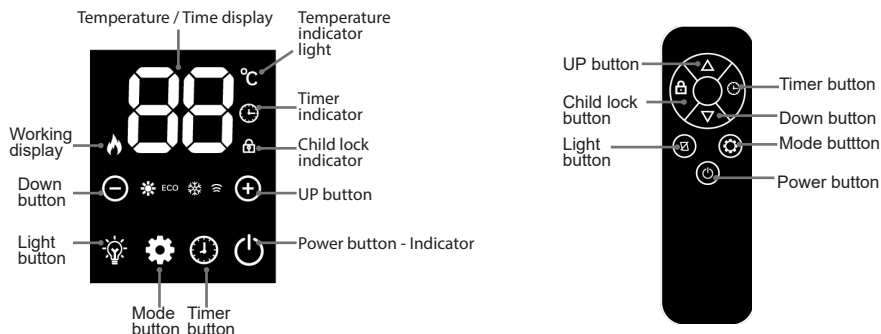

Heating Modes

Once the heater is plugged in, press the side switch, it will enter into standby mode.

To initiate the heating, press the Power button . Select the different heating modes by pressing the MODE button

. The heating icon  indicating that the heater is functioning .:

ECO 

COMFORT 

ANTIFROST 

Eco mode:

Press and hold the DOWN  and UP  on the control panel. The Eco mode is the energy saving setting mode, In this mode, the heater operates at a low power of approximately 1000W, hence consuming less electricity.

(Note: Upon activation, the Heater will resume its previous mode from the time it was last powered off, in order to facilitate future usage).

Comfort mode:

In Comfort mode, the heater works at its maximum power (2500W).

Anti-frost mode:

Anti-frost model is an automatic setting designed to prevent frosting. In this mode, the heater starts operating when the ambient temperature drops below 5°C. It will stop heating once the ambient temperature rises above 7°C.

Temperature setting:

To set the temperature while in Eco or Comfort mode, press the DOWN  /  or UP  / 

buttons. The temperature in Eco or Comfort can be set within a range of 5°C to 35°C, while in anti-frost mode, the temperature cannot be adjusted.

Timer setting:

To set the timer, press the Timer button . The timer can be set from 1 to 24 hours. After configuring the time, the digits will flash,

and the screen will revert to its original heating mode. On the control panel display the time icon  will light up, indicating that the timer has been set.

On Off-Timer mode, The heater will automatically return to standby mode after the set time. On On-Timer mode, The heater will automatically to functioning mode after the set time.

Setting up the child lock:

To avoid children playing with the heater, the unit includes a child lock safety system. Press and hold the DOWN  and UP  on the control panel or the button, if you are using the remote control.



The child lock icon  appears on the display. At this moment the control panel will be locked preventing unauthorized adjustments. (Please note the remote control can still be used, except for the light function.)

To cancel the child lock, press and hold down the same two buttons on the control panel or the lock button on the remote control until the icon  disappears from the display. All functions will be enabled.

Adjusting the light display:

To adjust the brightness of the light on the display, press the light button .

Press it once to dimmer the light to 50%.

Press it once more to completely off the display.

Press it once more to on the display at its maximum luminance.

When using the remote control, hold the  button to switch off the display light while the heater is operating. Press it  once more to switch on the display light.

Switching off the heater:

To shut down the heater, press the POWER  button to enter standby mode.

Let the heater cool down before unplugging it or restarting it.

To switch off the heater completely, push the side power switch, and then to unplug the supply cord from the power supply.

Note: The heater will take some time to cool down after the power is shut off. Always wait until it has cooled before moving it.

WIFI & Bluetooth

The heater has 3 different setup modes, Bluetooth connection, Quick Connection and AP (Access Point). The Bluetooth connection and quick connection are quick and simple way to set the unit up . The AP connection uses a direct local Wi-Fi connection between your phone and the heater to upload the network details.

When first turned on using the switch on the rear of the unit, the power indicator will initiate, showing that the unit is in Quick connection mode, and ready to set up.

Please ensure your device is in the correct Wi-Fi connection mode for the connection type you are attempting, the flashing of the power indicator on your heater will indicate this

Connection Type	Frequency of Flashes
Bluetooth	Flashes twice per second or flashes once per second
Quick Connection	Flashes twice per second
AP (Access Point)	Flashes once per second

CHANGING BETWEEN CONNECTION TYPES

To change the unit into AP or Quick mode, Power switch on and unit turned on, press and hold the button for 5 Seconds.


DOWNLOAD THE APP TO YOUR PHONE

Download the " TUYA SMART" app, from your chosen app store, using the QR codes below, or by searching for the app in your chosen store.

Bluetooth & WIFI Connection

This heater can be operated via Bluetooth & WIFI .

1. Please install the Tuya App from your mobile APP store;
 2. Touch the sign  for 5s, the sign  will flash in the display;
 3. Open your mobile, find the TUYA App to connect heater via Bluetooth or WIFI;
 4. The sign  illuminate after connected successfully, or it will disappear 3 minutes later if connection failed.
- Restart the sign  please touch sign  for 5s again, then repeat the above steps

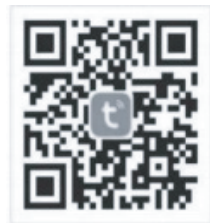

Connect The Radiator to Amazon Alexa Voice Control :


1. Download The Amazon Alexa App
2. Select The Menu logo  at the bottom of the screen
3. Select Skills & Games
4. Select the (Smart Home) Option
5. Scroll to find (TUYA SMART)
6. Select and Launch (TUYA SMART)
7. Add email into verification if needed to complete set up. (if you already have an account, this will not be required)
8. Select Agree and link

Radiator will now be added to your Alexa app and voice control will be activated.


CONNECTING USING THE BLUETOOTH CONNECTION METHOD

Before initiating the connection, make sure the unit is in standby mode (Power switch ON), with the power indicator flashing twice per second. If not follow the instructions for changing the connection mode. Also ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)


1. Open app and press "+" to add device, or use the add device button (make sure to open your phone Bluetooth function)

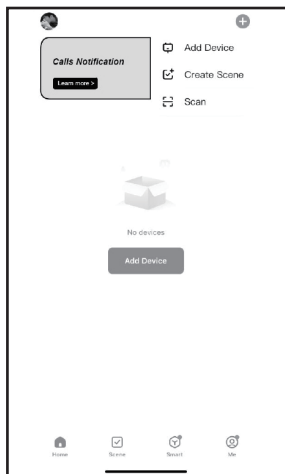

2. Open your phone bluetooth the App will show the equipment, you can add it.

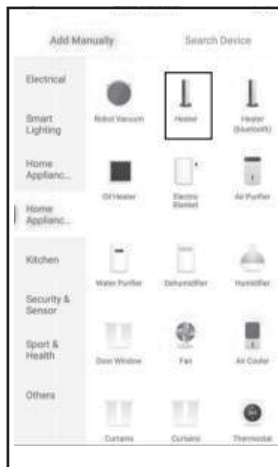

3 . Input the WIFI name and WIFI code

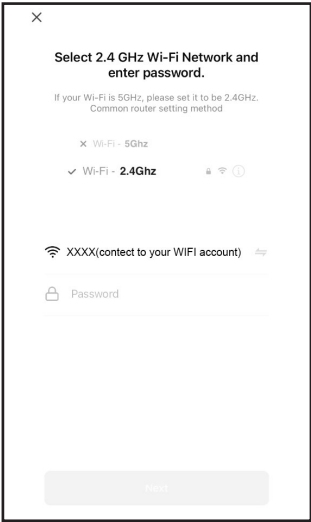

4 . Add the equipment when finished, press" DONE"





5 . Enter the App control If this fails, retry, If still unsuccessful please review the troubleshooting section for further help.





CONNECTING USING THE QUICK CONNECTION METHOD

Before initiating the connection, make sure the unit is in standby mode (Power switch ON), with the power indicator flashing twice per second. If not follow the instructions for changing the connection mode. Also ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)



1. Open app and press “+” to add device, or use the add device button .
- 2 . Select the type of device as “ Heater” within the Home Appliance tab.

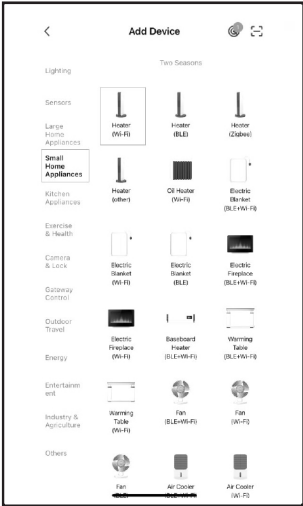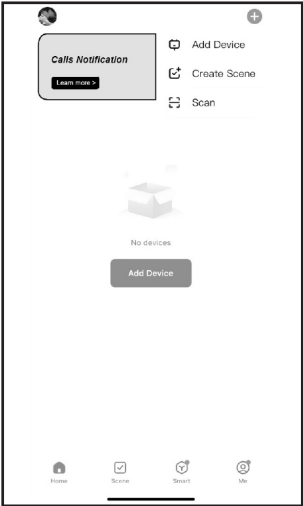

- 3 . Ensure the Ambient Light indicator on the heater is flashing twice per second then press on the orange button at the bottom of the screen.
- 4 . Enter your Wi- Fi password and press confirm.

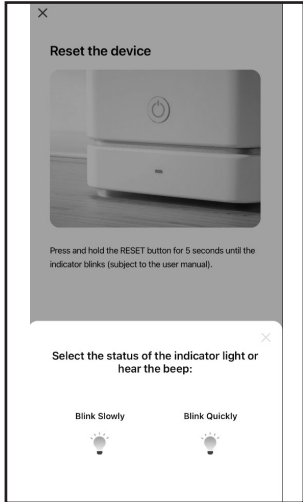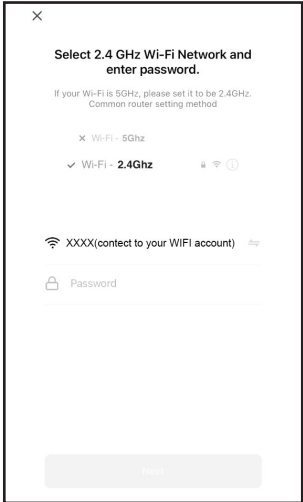


- 5 . This will then transfer the settings to the heater. Wait for this to complete. If this fails, retry. If still unsuccessful please review the troubleshooting section for further help.
- 6 . Enter the App control If this fails, retry, If still unsuccessful please review the troubleshooting section for further help.

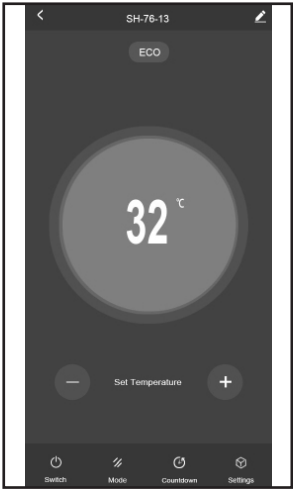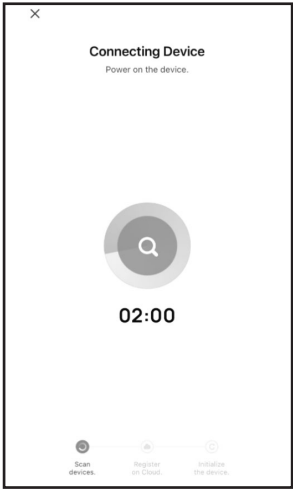


CONNECTING USING APP MODE ALTERNATIVE METHOD

Before initiating the connection, make sure the unit is in standby mode, with the power Indicator flashing once per second. If not follow the instructions for changing the Wi-Fi connection mode. Also ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)


- 1 . Open app and press “+” to add device, or use the add device button .
- 2 . Select the type of device as “Heater” within the Home Appliance tab.

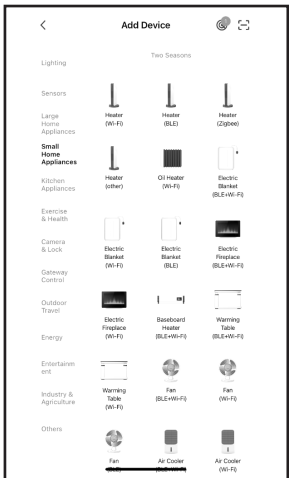


- 3 . Ensure the Ambient Light indicator on the heater is slowly flashing (once per second) , then press on the orange button at the bottom of the screen to confirm.

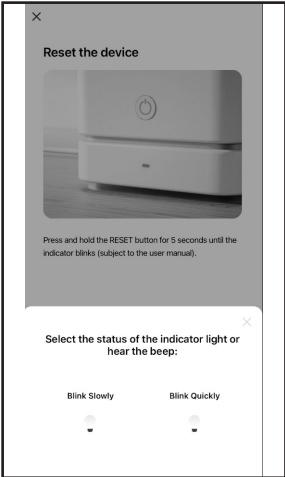A screenshot of a mobile app screen titled "Reset the device". It features an image of a white heater with a circular indicator light. Below the image, it says "Press and hold the RESET button for 5 seconds until the indicator blinks (subject to the user manual)". At the bottom, there's a section "Select the status of the indicator light or hear the beep:" with two options: "Blink Slowly" (selected) and "Blink Quickly".

4 . Enter your Wi- Fi password and press confirm.

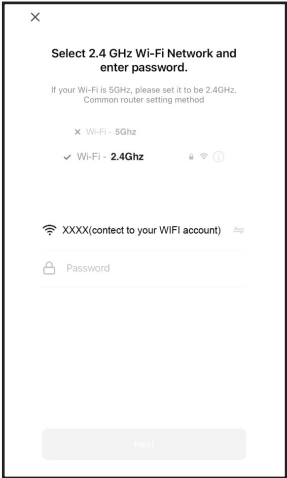A screenshot of a mobile app screen titled "Select 2.4 GHz Wi-Fi Network and enter password." It instructs the user to select 2.4 GHz if their Wi-Fi is 5GHz. It shows "Wi-Fi - 5Ghz" crossed out and "Wi-Fi - 2.4Ghz" selected. Below, there's a field for the password with a placeholder "XXXX(connect to your WIFI account)" and a "Password" label. A "Confirm" button is at the bottom.
- 5 . Go to network settings in your phone and connect to the " SmartLife xxx" connection. There is no password to enter. Then return back to the app to complete setup.

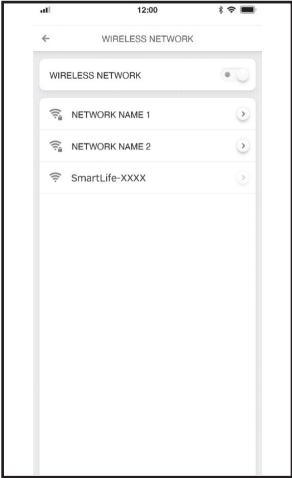A screenshot of an iPhone's "WIRELESS NETWORK" settings page. It shows a list of available networks: "NETWORK NAME 1", "NETWORK NAME 2", and "SmartLife-XXXX". The "SmartLife-XXXX" network is highlighted.

6 . Enter the App control If this fails, retry, If still unsuccessful please review the troubleshooting section for further help.


A screenshot of a mobile app screen showing a large circular temperature display with "32 °C". Above the display is "SH-76-13" and "ECO" mode. Below the display is a "Set Temperature" button with minus and plus icons. At the bottom is a navigation bar with icons for "Switch", "Mode", "Clockdown", and "Settings".

This will then transfer the settings to the heater.

Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your Wi- Fi router.

DEVICE SCREEN

The device screen is the main control screen for the heater, providing access to the controls to amend the functions and settings.

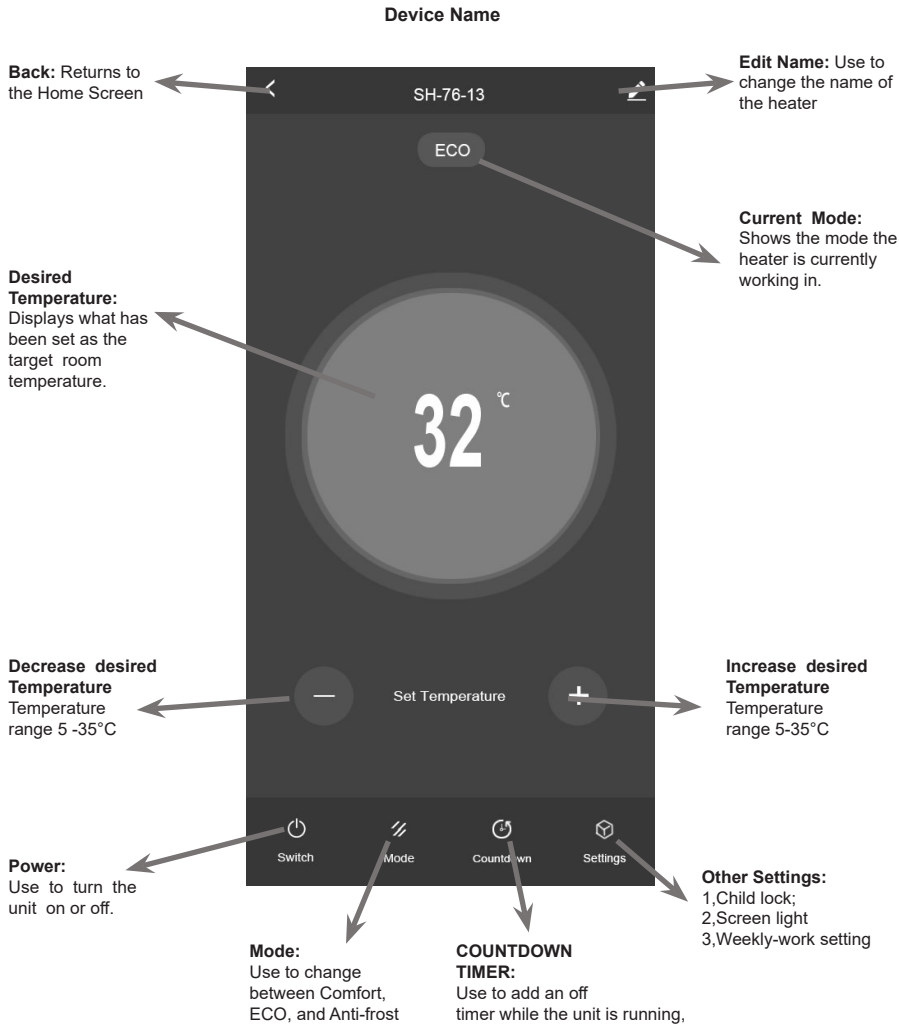

NOTE: Due to continuous development of the app, the layout and available features may be subject to change.

PROFILE TAB

The profile tab gives you the option to edit both your detail, and use the added features of the unit.

HOME MANAGEMENT

Home Management proves options for managing your

TUYA account, giving options such as adding a home, adding and removing rooms, and sharing devices with family.

MESSAGE CENTRE

View notifications from devices, if alarms are set up (dependent on device)

HELP CENTRE

Provides assistance using the features provided within the app

CONNECTION TROUBLESHOOTING

1. Check whether the device is powered on and is in the correct Wi-Fi connection mode, if not please refer to the CHANGING BETWEEN CONNECTION MODES section.
2. Ensure the Wi-Fi password has been entered into the app correctly (Case sensitive)
3. Check that the phone is connected to the Wi-Fi you are connecting the device to.
4. Ensure the network you are connecting it to is 2.4Ghz (5Ghz Wi-Fi networks are not supported), and that there is a strong Wi-Fi signal to the item.
5. If your router is dual band, ensure that the 2.4ghz network has a different network name (SSID). Further advice on changing router settings will be available from your Internet service provider / Router manufacturer.
6. Check the settings on the router. Encryption should be WPA2-PSK and authorization type should be set to AES
7. Try using the alternative connection method. i.e. If connection is failing when attempting to connect through CF mode, try AP mode.

SAFETY CUT OUT

The heater includes three safety protection.

Thermostat:

When encountering overheating, the heater automatically transitions to low gear heating and resets once the temperature returns to a normal level following a brief cooling period. If overheating or malfunctions persist, please reach out to our after-sales support center to schedule an examination of the product.

Automatic thermal cut-off:

This system switches off the heater in the event of overheating or malfunction. it cannot recover. Please contact our after-sales support center and arrange an examination of the product or get the automatic thermal cut-off replaced.

Tip Over switch:

This technology switches off the heater if it is knocked over or tilted to a position where safe operation is in jeopardy. Should this happen, place the heater upright again but take care as it will still be hot. Once the heater is restored to an upright position, the heater will reset to work.

Battery replacement for the remote control:

The remote control is powered by 2 x "AAA" size batteries. To install them, or to replace them when required, proceed as follows:

- . Open the cover of the battery compartment located at the back of the remote control and insert 2 x "AAA" batteries, making sure to match the polarity markings (+/-) on the batteries with those inside the compartment.
- . Close the battery compartment.

Battery precautions:

- . Do not open the batteries or short circuit them.
- . Do not mix different types of batteries. Due to increased risk of leakage, empty batteries should be removed. The batteries should also be removed from the remote control if it is not being used for long periods.
- . Only dispose of batteries when they are fully discharged.

- . **WARNING:** Danger of explosion! To prevent a risk of explosion, batteries must not be charged, heated or disposed of by burning. Never throw batteries into a fire or subject batteries to high temperatures.
- . Used batteries should not be disposed of in household waste. Dispose them in accordance with your local regulations.

CARE AND MAINTENANCE

- . Switch the heater off, unplug it from the wall socket and let it cool before cleaning it and putting it away.
- . Allow the appliance to cool down completely before cleaning.
- . Clean the heater using a slightly moistened cloth. Use only mild cleaning agents.

Useful Suggestion for temperature

This heater classify to space-heating-Radiator heater, there is no auxiliary device to let the heating air ventilating fast, and the heating element is located in the bottom of the heater, so it radiates slowly, meanwhile, there is several meter from the space one side to another side, when in use, there will be a bit deviation between the value sensed by the built-in temperature detector and the actual room

temperature value. The following suggestions can be followed for better heating effective:

- 1, When use, it is recommended to set temperature value +8 °C higher than your Room temperature, the heating effective will be in high level.
- 2, If you want the room temperature rise fast, it is recommended to set the temperature to the high value 35 °C in comfort mode, When the ideal temperature is reached, set the temperature +8 °C than room temperature, then it can keep the room temperature in the ideal state .

CONFORMITY WITH DIRECTIVES

This product is CE marked to denote conformity with Directives 2014/35/EU (Low Voltage) and the EMC directive (2014/30/EU), as amended.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Information requirements for electric local space heaters					
Model identifier(s): 2501033					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P_{nom}	2.5	KW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P_{min}	1.0	KW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	$P_{max.c}$	2.5	KW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption			fan assisted heat output		No
At nominal heat output	el_{max}	0.000	KW	Type of heat output/room temperature control (select one)	
At minimum heat output	el_{min}	0.000	KW	single stage heat output and no room temperature control	[no]
In standby mode	el_{SB}	0.000 83	KW	Two or more manual stages, no room temperature control	[no]
/			with mechanic thermostat room temperature control		[no]
/			with electronic room temperature control		[yes]
/			electronic room temperature control plus day timer		[no]
/			electronic room temperature control plus week timer		[no]
/			Other control options (multiple selections possible)		
/			room temperature control, with presence detection	[no]	

/		room temperature control, with open window detection	[no]
/		with distance control option	[yes]
/		with adaptive start control	[no]
/		with working time limitation	[yes]
/		with black bulb sensor	[no]
Contact details			

IT

INFORMAZIONI SULLO SMALTIMENTO Si prega di riciclare nelle apposite strutture. Chiedere una consulenza alle autorità competenti per il riciclo.

SERVIZIO CLIENTI Se si riscontrano difficoltà nell'utilizzo di questo prodotto e si richiede supporto, contattare support@domu.co.uk

GARANZIA Per registrare il prodotto e capire se hai diritto all'estensione di garanzia, vai su www.vonhaus.com/warranty. Si prega di conservare la ricevuta del pagamento quale prova della data d'acquisto. La garanzia si applica solo se il prodotto viene utilizzato esclusivamente come indicato nella pagina delle Avvertenze del presente manuale e se tutte le altre informazioni vengano accuratamente seguite. Qualsiasi abuso nell'utilizzo di questo prodotto invaliderà la garanzia. I resi non saranno accettati se non riposti nella confezione originale ed accompagnati da un modulo di reso completo. Ciò non pregiudica i propri diritti obbligatori. La presente garanzia non attribuisce alcun diritto a coloro che acquistano prodotti di seconda mano o per fini commerciali o condivisi.

COPYRIGHT Tutto il materiale contenuto nel presente manuale delle istruzioni è protetto da copyright di DOMU Brands. Qualsiasi uso non autorizzato potrebbe violare il copyright a livello mondiale, marchio ed altre leggi.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk. VonHaus is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW. EU Representative. Authorised Representative: Authorised Representative Service, 77 Camden Street Lower, Dublin, D02 XE80, Ireland

MERCI

Merci d'avoir acheté notre produit/appareil. Si vous aviez besoin d'aide suite à votre achat, vous pouvez nous contacter à support@domu.co.uk. VonHaus est une marque déposée de DOMU Brands Ltd. Fabriqué en Chine pour DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW. EU Representative. Authorised Representative: Authorised Representative Service, 77 Camden Street Lower, Dublin, D02 XE80, Ireland

VIELEN DANK

Vielen Dank, dass Sie das Produkt/Gerät gekauft haben. Sollten Sie weitere Unterstützung benötigen, können Sie uns gerne unter (email) kontaktieren. support@domu.co.uk. VonHaus ist eine registrierte Handelsmarke von DOMU Brands Ltd. Hergestellt in China für DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW. EU Representative. Authorised Representative: Authorised Representative Service, 77 Camden Street Lower, Dublin, D02 XE80, Ireland

GRACIAS

Gracias por comprar vuestro producto/aparato. Si requiere asistencia con vuestra compra, podeis contactarnos a support@domu.co.uk. VonHaus es una marca registrada de DOMU Brands Ltd. Hecha en China para DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW. EU Representative. Authorised Representative: Authorised Representative Service, 77 Camden Street Lower, Dublin, D02 XE80, Ireland

GRAZIE

Grazie per aver acquistato il prodotto. Per ulteriore assistenza sul tuo acquisto, puoi contattarci all'indirizzo email support@domu.co.uk. VonHaus è un marchio registrato di DOMU Brands Ltd. Made in Cina per DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW. EU Representative. Authorised Representative: Authorised Representative Service, 77 Camden Street Lower, Dublin, D02 XE80, Ireland



EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

FR

INFORMATIONS RELATIVES AU RECYCLAGE
Veuillez recycler là où il existe des installations adéquates. Vérifiez auprès de vos autorités locales pour obtenir des conseils sur le recyclage.

SERVICE CLIENT Si vous rencontrez des difficultés pour utiliser ce produit et avez besoin d'assistance, veuillez contacter support@domu.co.uk

GARANTIE Pour enregistrer votre produit et découvrir si vous vous qualifiez pour une extension gratuite de garantie, rendez-vous sur www.vonhaus.com/warranty. Conservez une preuve d'achat, reçu ou attestation, pour prouver la date de l'achat. La garantie ne s'applique que si le produit a été utilisé de la manière indiquée dans la section de la page des avertissements de ce manuel et que toutes les instructions ont été suivies de manière précise. Tous les abus réalisés sur le produit, dans la manière dont il a été utilisé, rendront la garantie caduque. Les marchandises renvoyées ne seront acceptées que si elles sont remballées dans leur emballage d'origine et accompagnées d'un formulaire de retour adéquat et rempli. Ceci n'affecte pas vos droits statutaires. Cette garantie n'accorde aucun droit à une personne obtenant le produit de seconde main ou à des fins d'utilisation commerciale ou communale.

DROITS D'AUTEUR Toutes les informations de ce manuel d'utilisation sont protégées par droit d'auteur par DOMU Brands. Toute utilisation non autorisée pourrait enfreindre les lois mondiales de droit d'auteur, de marque déposée ainsi que d'autres lois.

DE

ENTSORGUNG Bitte entsorgen Sie das Produkt an geeigneten Entsorgungsstellen. Fragen Sie bei Ihrer Gemeinde nach.

KUNDENSERVICE Wenn Sie Schwierigkeiten mit diesem Produkt haben und Unterstützung benötigen, wenden Sie sich bitte an support@domu.co.uk

GARANTIE Um Ihr Produkt zu registrieren und zu erfahren, ob eine kostenlose verlängerte Garantie möglich ist, gehen Sie bitte auf www.vonhaus.com/warranty. Bitte behalten Sie eine Rechnung oder den Kassenzettel als Nachweis des Einkaufsdatums auf. Die Garantie gilt nur, wenn das Produkt nur wie in dieser Anleitung beschrieben verwendet wurde und wenn alle Anweisungen befolgt wurden. Jeglicher Missbrauch des Produkts oder der Art und Weise, in der es verwendet wird, macht die Garantie ungültig. Zurückgegebene Artikel werden nur akzeptiert, wenn sie sich in der Originalverpackung befinden und wenn ein relevantes und vollständig ausgefülltes Rücksendeformular enthalten ist. Dies betrifft nicht Ihre gesetzlichen Ansprüche. Für Artikel, die gebraucht erworben wurden, oder die kommerzielle oder gemeinschaftlich genutzt werden, entstehen keinerlei Ansprüche auf Garantie.

COPYRIGHT Alle Materialien in dieser Anleitung stehen unter Copyright von DOMU Brands Ltd. Jede unautorisierte Verwendung kann das weltweite Copyright, die Handelsmarke und andere Gesetze verletzen.

ES

INFORMACION DE DESECHO Por favor, recicla en las instalaciones correspondientes. Consultad con vuestra autoridad local para obtener consejos de reciclaje.

SERVICIO AL CLIENTE Si tiene dificultades para utilizar este producto y necesita asistencia, contacte con support@domu.co.uk

GARANTÍA Para registrar vuestro producto y averiguar si califica para una garantía extendida gratuita, vaya a www.vonhaus.com/warranty. Conservad un comprobante de recibo de compra o extracto como prueba de la fecha de compra. La garantía solo se aplica si el producto se utiliza únicamente de la manera indicada en la página de advertencias de este manual, y todas las demás instrucciones se han seguido con precisión. Cualquier abuso del producto o la manera en que se use invalidará la garantía. Los productos devueltos no se aceptarán a menos que se vuelvan a empaquetar en su embalaje original y acompañados por un formulario de devolución completo y pertinente. Esto no afecta sus derechos legales. No se otorgan derechos bajo esta garantía a una persona que adquiere el aparato de segunda mano o para uso comercial o comunitario.

DERECHOS DE AUTOR Todo el material en este manual de instrucciones está protegido por DOMU Brands. Cualquier uso no autorizado puede violar los derechos de autor, marcas comerciales y otras leyes en todo el mundo.