




240mm x 120mm 三折页吊卡封面

# MEROL

## ESPRESSO COFFEE MACHINE


**Product Specification:**

Voltage: 120V/60Hz  
Power: 1250 W  
Pressure: 19 Bar  
Bean Tank Capacity: 250 G  
Water Tank Capacity: 1.8L  
Max Dreg Cake: 10 PCS  
Coffee Spout Height: 3.9 - 5.5 inch  
Item Dimensions: 18.3 x 8.7 x 14 inch  
Item Weight: 19.6 LBS

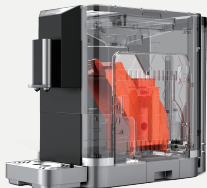


**ME-720**

**PRODUCT COMPONENTS:**

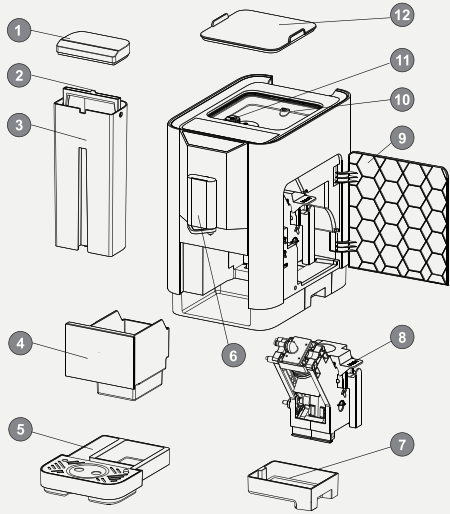


- Water tank cover
- Water tank handle
- Water tank
- Dregs box
- Drip tray
- Coffee outlet
- Side waste tray
- Brew unit
- Side door
- Bean container
- Grinding setting knob
- Bean container cover


# MEROL




1 cup




2 cups




1-5 mol



20-250 ml








 
 

 

65-80°C

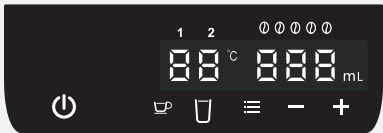

240mm x 120mm 三折页吊卡内页

 
### 1 CONTROL PANEL:

 


<b>1 2</b>	"1" for single cup, "2" for double cups		
	ON/OFF switch		Bean quantity setting
	Coffee temp. setting		Coffee volume setting
	Espresso		Americano
	Setting / OK		Setting less "-"
	Setting more "+"		


### 2 OPERATION INTRODUCTION:

 
 
**1. START UP AND SELF-CLEANING FUNCTION:**




Plug in the power, long press on the  button, The machine starts up after one "beep" sound, then begins self-checking, warming up and self-cleaning.

 
 
 
 
 
 
 
 
 
 

 
 

**2. HOW TO CHOOSE MAKING 1 OR 2 CUPS:**



Double-click the  or  button to make one or double cups of coffee.

 

**3. HOW TO ADJUST THE BEAN QUANTITY, COFFEE TEMPERATURE AND COFFEE VOLUME:**



Keep pressing the  or  button, until the selection menu  turns on. It starts flashing from bean volume light, press  or  to adjust the bean quantity. Then press  to go coffee volume, and the coffee volume light starts flashing, press  or  to adjust it. Next, press  again to go temperature setting, press  or  to select 65°C/70°C/80°C. Press  again to save and exit the selection menu. Finally, press the  or  again to start making coffee with the saving preference.

Bean volume: 1 / 2 / 3 / 4 / 5 mol  
Coffee volume: 20 ~ 250 ml  
Coffee Temperature: 65°C / 70°C / 80°C

**4. HOW TO CANCEL MAKING COFFEE:**


Keep pressing  or  button to cancel it during brewing process.

**5. HOW TO DEAL WITH THE STUCK BREW UNIT:**

a. Please try to restart the machine. Eliminate all alarm prompts when power on, and the unit will automatically return to the starting position.  
b. Please try a bit harder to push it into the original position, there will be a "ka" sound if it is in the right position.

**6. HOW TO ADJUST THE BEAN GRINDING:**

Press the grinder setting knob and turn to counter clockwise for fine powder, or turn to clockwise for coarse grinding.

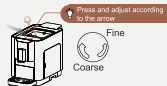

With different roast levels, please adjust the bean volume on the control panel before making coffee. We have suggestion as below:

- Light Roast "1-2" bean symbols
- Medium Roast "2-3" bean symbols
- Medium Dark Roast "3-4" bean symbols
- Dark Roast "5" bean symbols

**7. WHY THE COFFEE CAN'T FLOW OUT:**


The grinder grinds too much coffee, or the ground is too fine, You can adjust the grinding setting knob, to adjust the powder to the thickest or least. We suggest to check your waste bin, if the powder particles are large, adjust it to fine; if the powder particles are small, adjust it to coarse.







**8. ABOUT THE WARRANTY:**

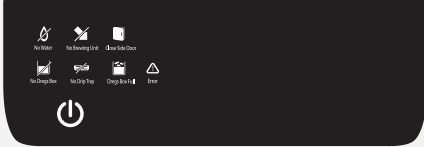This product provides one year warranty, Please do not hesitate to contact our Service Team via [fluentools@gmail.com](mailto:fluentools@gmail.com), we are here to help for any concerns within 24 hours.

### 3 WARNING ICON:

If your machine meets the below problem, it will keep beeping, and the icon will also blinking, please deal with the problem as the introduction.



	Fill water! Water container is missing		Brew unit is missing
	Close the side door		Dregs box is missing
	Drip tray is missing		Dregs box is full

**Error Warning**

When this symbol is displayed and normally an "Error code number" comes together on the panel, it means the machine is overheated, ventilation, NTC error, or needs descaling.

[www.amazon.com/merol](http://www.amazon.com/merol)

[Email: fluentools@gmail.com](mailto:fluentools@gmail.com)