



Original	Recharge
 Source	 AV / Input / RDS
 Power	 Power
 YouTube	 Shift + Yellow / YouTube /
 Netflix	 Shift + Red / Netflix /
 Camera-Music-Photo	 Display / Media
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Lang	 Audio / Lang I/II
 <<	 << / Tune-
 >>	 >> / Tune+
 [≡] . .	 Sound / Title
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 Shift + 1
 TV	 TV/ Radio /
 0	 0
 Recall	 Fav / Marker / PC
 Menu	 Menu / Home
 Internet	 Smart / List
 Q.Menu	 D.Menu / Top
 Vol +	 Vol +





RETURN Back / Return
CLEAR Exit / Cancel / Clear

