 
 
 




Original	Recharge	Original	Recharge
	Source		AV / Input / RDS
	Power		Power
	YouTube		Shift + Yellow / YouTube /
	Netflix		Shift + Red / Netflix /
	Camera-Music-Photo		Display / Media
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Lang		Audio / Lang I / II
	<<		<< / Tune-
	>>		>> / Tune+
	[≡] . .		Sound / Title
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		Shift + 1
	TV		TV/ Radio /
	0		0
	Recall		Fav / Marker / PC
	Menu		Menu / Home
	Internet		Smart / List
	Q.Menu		D.Menu / Top
	Vol +		Vol +



[illegible]