 


VICTROLA

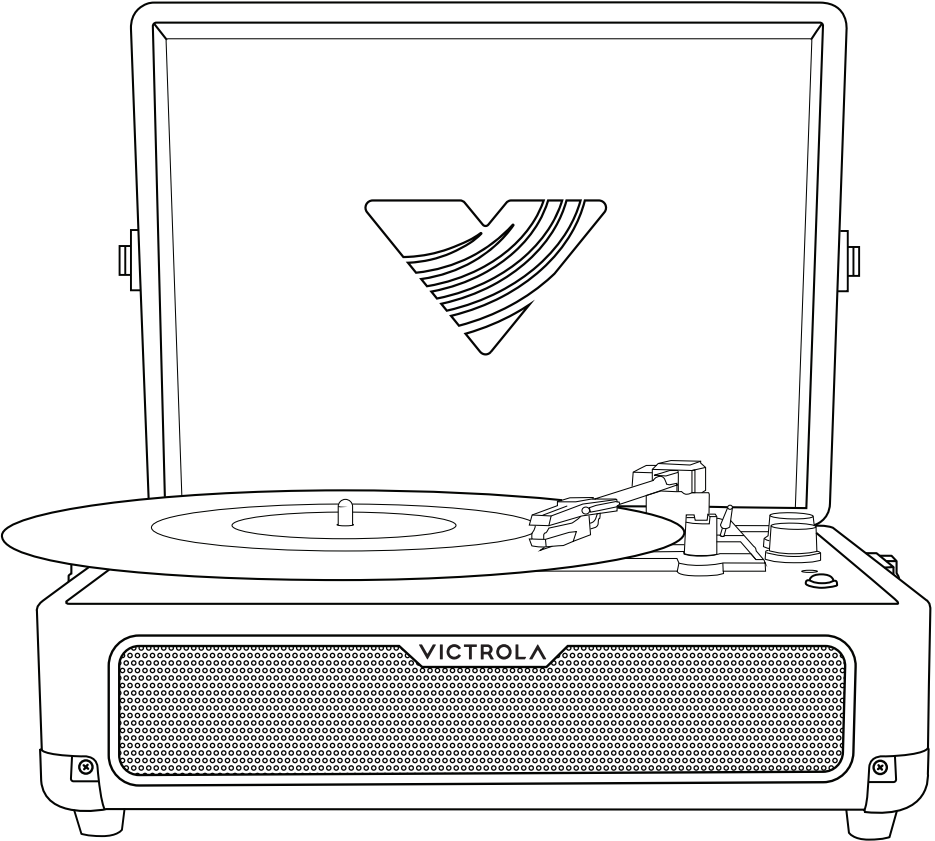


JOURNEY GLOW

INSTRUCTION MANUAL  
VSC-700SB



# OVERVIEW

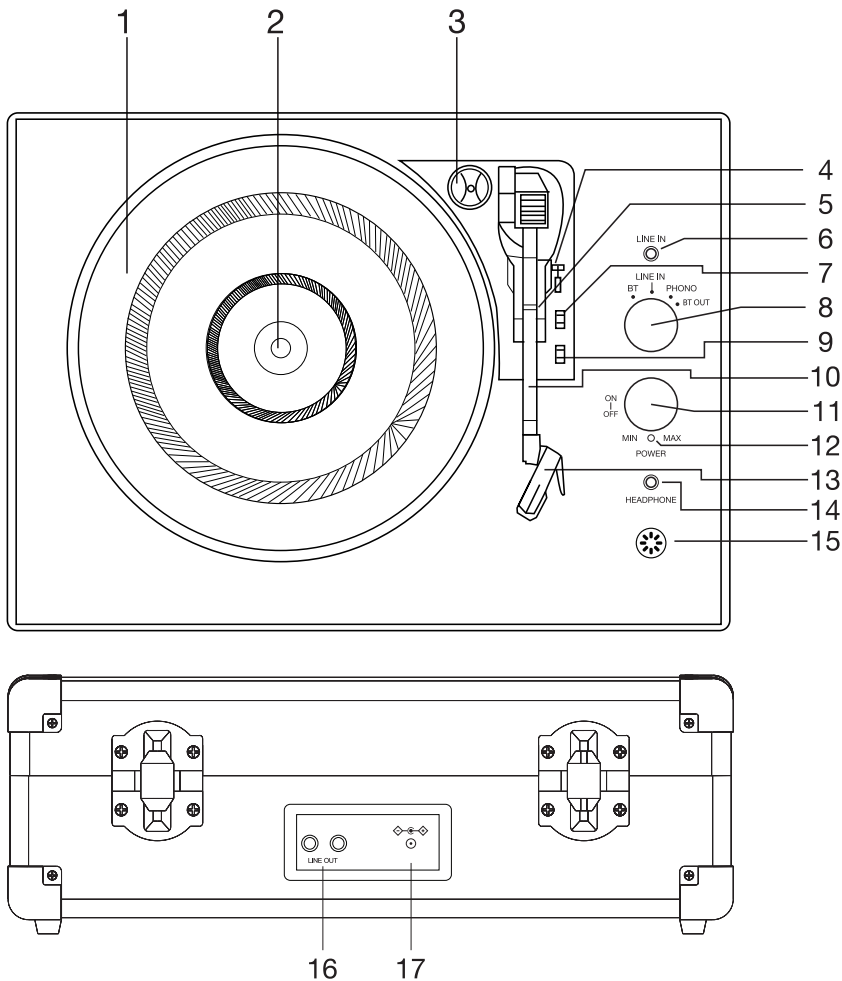 

**1. TURNTABLE PLATTER**

**2. TURNTABLE SPINDLE**

**3. 45 RPM ADAPTER**

**4. LIFT LEVER**

**5. TONEARM CLIP**

**6. LINE-IN JACK**

**7. AUTO STOP SWITCH**

**8. FUNCTION KNOB**

**9. SPEED SELECTION SWITCH**

**10. TONEARM**

**11. POWER / VOLUME KNOB**

**12. LED INDICATOR**

**13. STYLUS**

**14. HEADPHONE JACK**

 
**15. GLOWRGB (LED) BUTTON**

**16. RCA OUTPUT**

**17. POWER ADAPTER INPUT**

# INITIAL SETUP

- Place the unit on a flat and level surface and open the buckle.
- Remove all packing materials including the twist tie from the tonearm.
- Remove the stylus cover by gently pulling it towards the front of the unit.
- Using the included power adapter, plug in the unit.
- Rotate the power knob, to turn the unit ON.

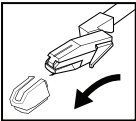

# VICTROLA GLOWRGB™ OPERATION

<div></div> <div>GLOWRGB BUTTON</div>
<div></div> <div>PRESS &amp; HOLD TURN LIGHTS ON / OFF</div>
<div>DOUBLE PRESS</div> <div>SWITCH LIGHT MODE GROUP (MULTICOLOR   MUSIC PULSE   SOLID COLORS)</div>
<div>SINGLE PRESS</div> <div>SWITCH INDIVIDUAL LIGHT MODES</div>

LIGHT MODES & GROUPS	
MULTICOLOR MODES	
1. TRANSITION	4. SNAKE
2. RACETRACK	5. WATERFALL
3. STROBE	6. CHASE
MUSIC PULSE MODES	
1. RED	4. YELLOW
2. GREEN	5. PINK
3. BLUE	6. MULTICOLOR
SOLID COLOR MODES	
1. RED	4. YELLOW
2. GREEN	5. PINK
3. BLUE	6. WHITE

 
# VINYL MODE

- Rotate the power knob, to turn the unit ON.
- Rotate the function knob to PHONO (Vinyl) mode.


**PLAYING A RECORD:** Place a vinyl record on the platter. Release the tonearm from the tonearm rest and raise the tonearm using the lift lever. Move the tonearm over the edge of the record and lower the lift lever to begin playing.

Rotate the power/volume knob to adjust the volume if needed.

**SPEED SELECTOR SWITCH:** Use this switch to adjust the record speed.  
*If using a 45 RPM record, use the included 45 adapter.*



 **AUTO STOP SELECTION SWITCH:** If this switch is turned ON, The record will start spinning when the tonearm moves over the record and the record will stop automatically when playback is finished. If this switch is OFF, the record will automatically begin to spin when the unit is in “PHONO” function mode and the record will continue to spin after playback is finished.



**RCA LINE OUT:** Use the red & white connectors on the back of the unit to connect to an amplifier/stereo device. Be sure to first reduce the volume to a minimum level on the record player and increase volume as needed.

**HEADPHONES:** Use the headphone jack on the platter to connect your headphones/earbuds. Be sure to first reduce the volume to a minimum level on the record player and increase volume as needed.

**NOTE:**  
*-Make sure to only touch the center or edges of the record to avoid damage to the vinyl grooves.*  
*-If no sound is playing, the unit may be in Vinylstream mode, rotate the function knob to make sure it is in Vinyl mode.*

# VINYLSTREAM™ MODE

**VINYLSTREAM:** Playing a vinyl record on an external Bluetooth speaker or headphones.

Rotate the power knob to turn the unit ON.

Rotate the function knob to BT OUT (Vinylstream) mode.

The unit will automatically begin searching for Bluetooth devices (LED will flash Blue).

Turn ON your external Bluetooth speaker or headphone, and set to pairing mode.

The unit will chime when connected (LED will stop flashing).

Use your external device to control the volume.

**NOTE:**

*-In Vinylstream mode, internal speakers will be disengaged.*

*-Place the Bluetooth device within 1m (3.3') of the product when initially pairing.*

*-Make sure the unit is within 10m (33ft) from your external device for the strongest connection.*

# BLUETOOTH MODE

Rotate the power knob to turn the unit ON.

Rotate the function knob to BT (BLUETOOTH) mode.

The unit will automatically begin searching for Bluetooth devices (LED will flash Blue).

On your device, turn on Bluetooth and select “**Victrola Journey Glow**” in the available Bluetooth

device list. The unit will chime when connected (LED will stop flashing).

Use the Power/Volume Knob to adjust volume.

**NOTE:**

*-Make sure the unit is within 10m (33ft) from your external device for the strongest connection.*

*-If no sound is playing, the unit may be in a different mode, rotate the function knob to make sure it is in Bluetooth mode.*

# AUX-IN OPERATION

Using a 3.5mm Auxiliary cable (not included), connect an external audio device to the LINE IN jack on the platter.

Rotate the power knob to turn the unit ON.

 
Rotate the function knob to LINE IN (Aux-In) mode (LED will turn Purple).

Use the Power/Volume Knob to adjust volume. Use the controls on the external audio device to control the other playback functions.

# STYLUS REPLACEMENT

## REMOVING THE STYLUS FROM THE TONEARM:

1. Place your fingers at the tip of the stylus and push down to the direction “A”. *WARNING: When applying force to stylus, too much may damage or break the cartridge.*
2. Pull the stylus out toward the direction “B”.

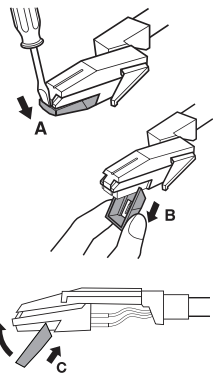

## INSTALLING THE STYLUS: (Replacement Stylus # ITNP-S1)

1. Hold the tip of the stylus and insert the other edge by pressing toward direction “C”.
2. Push the stylus up toward direction “D” until it locks at the tip.

**NOTE:** The stylus should last about 300 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality.

# SPECIFICATIONS

## GENERAL

Dimensions..... 14.37" W x 5.74" H x 10.43" D  
365mm W x 146mm H x 265mm D  
Weight ..... 6.74 lbs / 3.06 kg

## POWER

AC/DC Adapter: ..... Input: 100-240V, 50/60Hz, 0.5 A  
..... Output: 5V  $\equiv$  1.2A  
Consumption: ..... 6W

## TURNTABLE

Type ..... Belt-Drive  
Drive Motor..... DC motor  
Speeds ..... 33 1/3, 45, 78 RPM

## BLUETOOTH

Version ..... 5.4  
Supported Profiles..... A2DP, AVRCP  
Operating Distance..... 10 Meters (33 ft.)

Included:..... Turntable, Instruction manual,  
Power adapter, 45 RPM adapter

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.  
Other trademarks and trade names are those of their respective owners.

Made in China.

This product has been manufactured and sold under the responsibility of Innovative Technology Electronics, LLC. Victrola is a trademark used under license by Innovative Technology Electronics, LLC.

# SAFETY WARNINGS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement, near a swimming pool, or near other wet areas.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Keep at least 5 cm around the apparatus for sufficient ventilations. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Please keep the unit in a well ventilated environment.
15. Only use attachments/accessories specified or provided by the manufacturer.
16. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall not be placed on apparatus.
17. The main plug is used as disconnect device, the disconnected device shall remain readily operable.
18. This product is not intended for commercial use. Household Use Only.
- 19.



 <p>The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be sufficient magnitude to constitute a risk of electric shock.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK.</b> <b>DO NOT OPEN.</b></p> <p><b>CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this appliance.</p>
--	---	---

**Warning:** To reduce the risk of fire or electrical shock, do not exposed the apparatus to rain or moisture. No naked flame sources such as candles shall be placed on top of the apparatus.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device. Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

# FCC & IC WARNINGS

## FCC STATEMENTS

Caution: the user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC & IC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

# LIMITED WARRANTY

**Victrola is a registered trademark of Innovative Technology Electronics, LLC.**

## **United States**

For detailed information about our warranty policy and limitations visit [victrola.com/pages/warranty](https://victrola.com/pages/warranty)



## **Outside the U.S., Canada, and US Territories**

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

## **Canada and US Territories**

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

If assistance from the dealer from which it was purchased is not possible, you may contact our customer service for warranty assistance at [victrola.com/contact](https://victrola.com/contact).

# CUSTOMER SUPPORT

**VICTROLA.COM/PAGES/CUSTOMER-CARE**

[support@victrola.com](mailto:support@victrola.com)  
(877)483-2497