

Control System

Radio+

 


DD3000H / DD3001H


Emitter Instruction

Version: A/01


Instruction Of Buttons

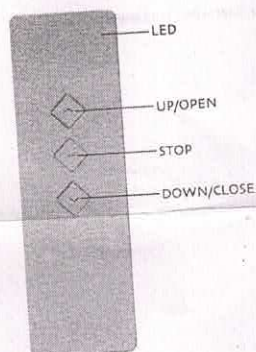

DD3000H
Single-channel emitter

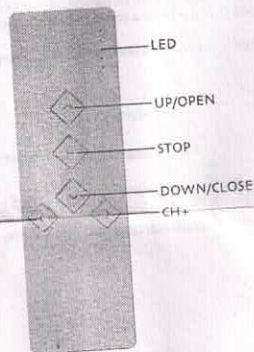 

DD3001H
5-channel emitter

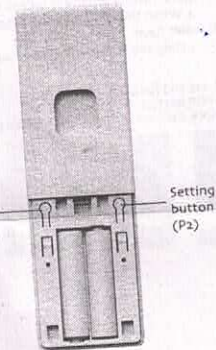 

DD3000H / DD3001H
Back

Technical specification

Battery: 3V (AAA battery × 2)	Battery life: >2 years	Radio frequency: 433.05~434.79MHz
Working temperature: -10°C~50°C	Transmitting power: 10 mW	Radio range: outdoor > 150 meters, indoor > 35 meters

 
Warning

- 1, Emitter couldn't expose to moisture or be striked heavily, or else the emitter life will be affected.
- 2, If the emitter is not so sensitive or the radio range becomes shorter, pls check whether to change the battery.
- 3, Under uni-directional mode, If you press any button more than 20S, the emitter will stop sending radio signals.
- 4, Under bi-directional mode, if you press STOP and P2 for more than 20S or press UP and DOWN for 2 minutes, the emitter will stop sending radio signals.
- 5, It's forbidden to use different type battery to avoid any dangerous risk.
- 6, Dispose of used batteries properly.

Uni-directional / Bi-directional Mode Switch

Note: 1. Both the two P2 buttons on the back are operable.

2. The factory default mode is Bi-directional mode, repeat the same operation to switch the mode circularly.

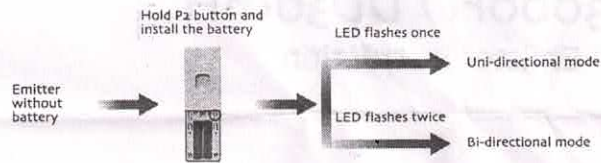

Combination Button Lock / Unlock Operation

Note: 1. Both the two P2 buttons on the back are operable.

2. If there is no operation for 10 seconds, it will automatically exit the setting status.

3. The factory default is unlock status, repeat same operation to switch status circularly.

4. When the combination buttons are locked, if you press the combination buttons, the emitter won't send any signal and LED won't flash.

5. Only the transmitting code will be affected if the combination buttons are locked.

