

Control System

Radio+




DD3000H / DD3001H

Emitter Instruction

Version: A/01

Instruction Of Buttons

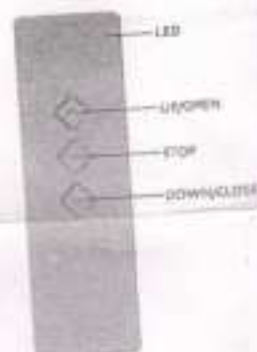

DD3000H
Single-channel emitter



DD3001H
2-channel emitter



DD3000H / DD3001H
Back

Technical specification

Battery: 3V (AAA battery * 3)	Battery life: 14 years	Radio frequency: 433.92~433.95MHz
Working temperature: -10°C ~ 50°C	Transmitting power: 10mW	Radio range: outdoor ~ 150 meters, indoor ~ 25 meters


Warning

1. Emitter couldn't expose to moisture or be struck heavily, or else the emitter life will be effected.
2. If the emitter is not so sensitive or the radio range becomes shorter, you check whether to change the battery.
3. Under uni-directional mode, if you press any button more than 10s, the emitter will stop sending radio signals.
4. Under bi-directional mode, if you press STOP and F1 for more than 10s or press UP and DOWN for 2 minutes, the emitter will stop sending radio signals.
5. It's forbidden to use different type battery to avoid any dangerous risk.
6. Dispose of used batteries properly.

Uni-directional / Bi-directional Mode Switch

Note: 1. Both the two Pg buttons on the back are operable.

2. The factory default mode is Bi-directional mode, repeat the same operation to switch the mode manually.

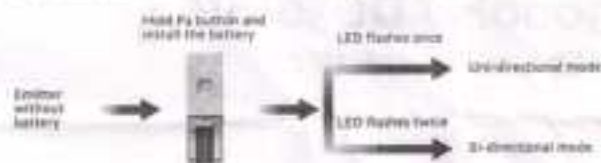

Combination Button Lock / Unlock Operation

Note: 1. Both the two Pg buttons on the back are operable.

2. If there is no operation for 10 seconds, it will automatically exit the setting status.

3. The factory default is unlock status, repeat same operation to switch status manually.

4. When the combination buttons are locked, if you press the combination buttons, the emitter won't send any signal and LED won't flash.

5. Only the transmitting code will be effected if the combination buttons are locked.

