## **INSTALLATION INSTRUCTIONS**

## VersiControl Smart System Plus - RV-C

Part#: 2300X-KKKK-RV-01


## **Safety Instructions**

- · Disconnect power before installing, adding or changing any component.
- · To avoid a hazard to children, account for all parts and destroy all packing materials.
- · Do not install any luminaire assembly closer than 6" from any combustible materials.
- · Positive (+) outputs require a fuse if the attached wire leads are not rated to handle the max current.
- · This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
  - This device may not cause harmful interference
  - This device must accept any interferences received, including interference that may cause undesired operation


## **Mating Connectors**

| RV-C    | Power Wires | RGB Wires | RGBW Wires | Addressable Wires |
|---------|-------------|-----------|------------|-------------------|
| DT06-4S | DTP06-2S    | DT04-4P   | DT04-6P    | DT04-3P           |


**WIRING DIAGRAMS:** Follow the wiring diagram below to wire the module to your system. Note: Maximum replacement fuse size is 20 amps.

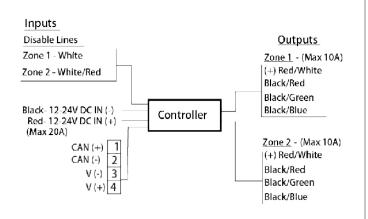


23002-RGB-RV-01 - Two Standard RGB Zones

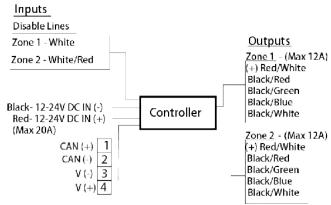

23002-RGBW-RV-01 - Two Standard RGBW Zones

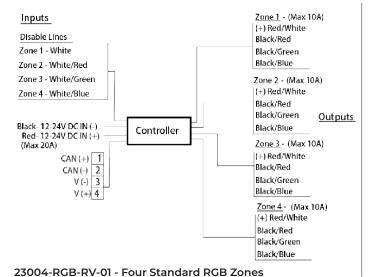

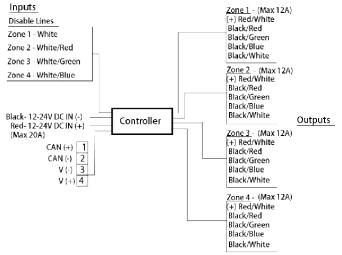





3030 Corporate Grove Dr. Hudsonville, MI 49426

Phone: 616.396.1355


23004-RGBW-RV-01 - Four Standard RGBW Zones

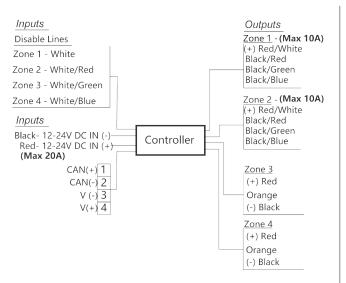

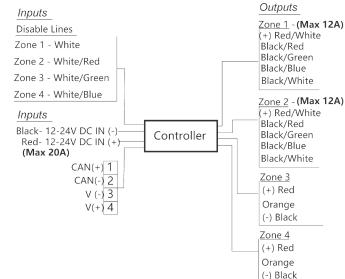


23022-RGB-RV-01 - Two Standard RGB/Two Addressable


23022-RGBW-RV-01 - Two Standard RGBW/Two Addressable

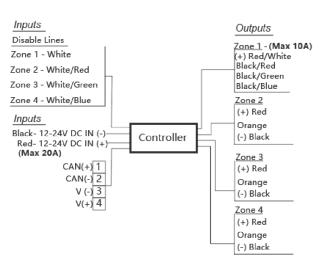



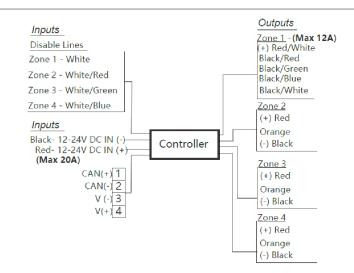

23031-RGBW-RV-01 - One Standard RGBW/Three Addressable

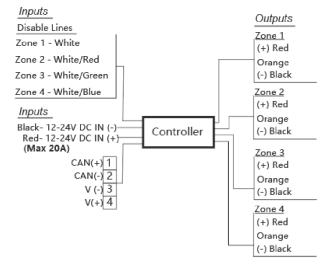

23040-RGBW-RV-01 - Four Addressable Zones



For warranty information please visit www.itc-us.com/warranty-return-policy Rev A • 07/16/24