



boat

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 131 PRO. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

Package Contains:

- 1x Pair of TWS Earbuds
- 1x User Manual
- 1x Charging Case
- 1x Warranty Card
- 1x Type-C Charging Cable
- 1x Catalogue
- 2x Pair of Extra Earmuffs
- 1x Read Me Card
- 1x FAQ Card



Power On (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, their LEDs begin to flash in blue for 2 seconds, they get connected and enter the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds



Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes once every 5 seconds on the secondary earbud

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 131 PRO' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- Airdopes 131 PRO remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.

- Once the earbuds get connected to your media device, the LED flashes once every 20 seconds.



Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode indicated by red and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 131 PRO' to connect



Note:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You can only switch to next track in single earbud mode

Quick Glance on Functionalities

- 3 Seconds** Long touch left CTC for 3 sec to activate voice assistant
- 3 Seconds** Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds** Long touch both CTCs for 5 seconds to manually power off
- 5 Seconds** Long press the case reset button for 5 seconds to perform factory reset



Charging the Earbuds

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the lid

Step 2: During charging, the indicators on the earbuds turn into solid red.

Step 3: Once the earbuds get fully charged, the charging case automatically switches off to save power, the earbuds' indicator turns into blue and then switches off



Note:

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.
- When the remaining power of the earbuds is below 20%, the red LED flashes 3 times every 30 seconds and there's a low power reminder sound prompt once every 5 minutes.
- When the earbud's remaining battery is between 30%-100%, blue LED blinks thrice if the case lid gets opened

USER MANUAL

Charging the Case

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc. White LED blinks continuously while the case is on charging. When the case gets fully charged, it gets indicated by solid white LED.

Basic Functions

- **Voice Assistant:** Long touch left CTC for 3 seconds to activate your default smart voice assistant
- **Answer:** Single tap the CTC on either earbud to answer an incoming call
- **Hang Up / Reject Call:** Double tap the CTC on either earbud to end / reject call
- **Play/Pause Music:** Single tap either earbud's CTC to play or pause music
- **Next Track:** When playing music, double tap the right earbud's CTC to skip to the next song
- **Previous Track:** When playing music, double tap the left earbud's CTC to return to the previous song

BEAST™ Mode

Long touch the right CTC for 3 seconds to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Long touch the right CTC for 3 seconds once again, to turn it off and return to standard Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENx™ Tech

Our ENx™ (Environmental Noise Cancellation) tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the 4x mics are already equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space.

Note: Volume can only be controlled via the media device

Voice Assistant

Step 1: Long touch the CTC on left earbud for 3 seconds to activate the smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try out the following commands,

- What is the weather?
- Play a song
- Set a reminder

Note:

- If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.



Smart Power Off

Step 1 : After usage, remove both the earbuds from your ears

Step 2 : Place the earbuds back into the charging case in correct orientation and close the lid. The earbuds automatically switch off (and enter charging mode).



Manual Power Off

Step 1 : Long touch both CTCs for 5 seconds to manually power off the earbuds

Step 2 : Once the earbuds get turned off, place them back inside the case and close the lid



Factory Reset

Perform the factory reset in case you feel any difficulty while operating your Airdopes.

***NOTE:** Before performing reset, clear "Airdopes 131 PRO" from pairing device history by forgetting device

Step 1 : Open the cover lid of the case and ensure the earbuds are being kept inside the case

Step 2 : Long press the Reset button on the case for 5 seconds; white LED on the case flashes for 5 seconds to indicate a successful reset

Step 3: Close the cover lid and reopen it again after a few seconds to perform fresh connection

Congratulations! Your Airdopes 131 PRO has been Reset.



Specifications

Headphone Type	TWS
Bluetooth Version	V5.3 + EDR
Music Playtime	Up to 9HRS per charge; Up to 36HRS additional with Case (at 60% volume)
ASAP™ Charge	Yes
Low Latency (BEAST Mode)	65ms
Transmission Range	10m
Driver Size	11mm*2
Bluetooth Profiles	a2dp\avctp\avdtp\avrcp\gavdp\hfp\hid\spp\l2cap
Frequency	20HZ-20KHZ
Battery	400mAh (Case) 40mAh*2 (Earbuds)
Charging Time	30Min (Earbuds) ; 1.5H (Case)
Charging Interface	USB Type C
Water Resistance	IPX5

Warning

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

