



| Original                                                                            | Replacement           |
|-------------------------------------------------------------------------------------|-----------------------|
|    | Power                 |
|    | Source                |
|    | 1                     |
|    | 2                     |
|    | 3                     |
|    | 4                     |
|    | 5                     |
|    | 6                     |
|    | 7                     |
|   | 8                     |
|  | 9                     |
|  | 0                     |
|  | Guide / EPG / -/-     |
|  | Back / Return         |
|  | D.Menu / Top          |
|  | Menu / Home           |
|  | Exit / Cancel / Clear |

| Original                                                                              | Replacement            |
|---------------------------------------------------------------------------------------|------------------------|
|    | Setup / OPT /          |
|    | OK                     |
|    | Up                     |
|    | Down                   |
|    | CH+ / Page+            |
|    | Right                  |
|    | Left                   |
|    | CH- / Page-            |
|    | Info / Angle           |
|   | Mute / Dimmer          |
|  | Vol+                   |
|  | Vol-                   |
|  | Text / Goto            |
|  | Subtitle / EQ          |
|  | Smart / List           |
|  | Red / Netflix / Search |
|  | Display / Media        |



